


63-4-2

AD No. ~~409-682~~

DDC FILE COPY

BOEING

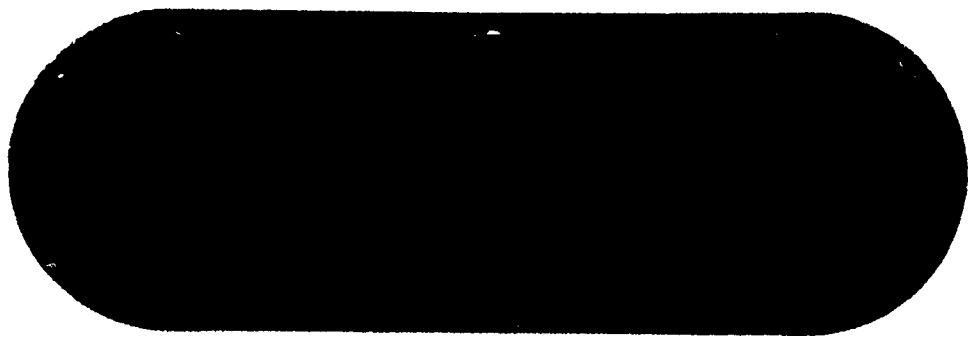

409 682

DDC
JUL 22 1963
TISIA B

SEATTLE, WASHINGTON

**Best
Available
Copy**

BOEING AIRPLANE COMPANY
SEATTLE 24, WASHINGTON

(4) \$8.60
(5) 127300



(14) CODE IDENT 81205 DOCUMENT NO D24384, Vol. 4
UNCLASSIFIED TITLE (15) NUMERICAL LIST OF DRAWINGS FOR

AMERICAN CAR & FOUNDRY - MINUTEMAN;

WS-133

(15) CONTRACT NO

AF04 647-289 and
AF04 647-580

MODEL NO.

ISSUED TO

ISSUE NO.

CLASSIFIED TITLE
(STATE CLASSIFICATION)

BSD/DECLINT

(7) NA

(8) NA

(9) NA

(10) NA

(11) 02 Aug 61,

(12) 86P

WORK ORDER NO.

UNIT NO.

ITEM NO.

SPECIAL LIMITATIONS ON ASTIA DISTRIBUTION

ASTIA may distribute this report to requesting agencies subject to their security agreement, approved fields of interest, and the following:

☒ UNLIMITED—To all agencies of the Department of Defense and their contractors.

☐ LIMITED—To U. S. Military organizations only.

This report may be distributed to nonmilitary agencies not approved above subject to BAC approval of each request.

NOTE: the LIMITED category may be checked only because of actual or potential patent, proprietary, ethical, or similar implications.

324-6

(13) NA

(15-19) NA

(20) U.

(21) NA

PREPARED BY RELEASE GROUP 8/14/61

SUPERVISED BY Mildred P. Jackson 8/22/61

APPROVED BY E. T. Allen 8/22/61

CLASS. & DISTR. E. T. Allen 8/22/61
APPROVED BY (DATE)

NO. OF PAGES 16 (EXCLUDING TITLE AND REVISION AND ADDITION PAGES.)

DOCUMENT TITLE PAGE

1
2-7-60

D2-4384 Vol. 4

TITLE

REVISIONS				ADDITIONS			
PAGE	DATE	PAGE	DATE	PAGE	DATE	PAGE	DATE
COMPLETE	REVISION		9-23-61				
COMPLETE	REVISION		10-21-61				
COMPLETE	REVISION		11-22-61				
COMPLETE	REVISION		12-30-61				
COMPLETE	REVISION		2-02-62				
COMPLETE	REVISION		3-01-62				
COMPLETE	REVISION		4-11-62				
COMPLETE	REVISION		6-11-62				
COMPLETE	REVISION		7-18-62				
COMPLETE	REVISION		9-14-62				
COMPLETE	REVISION		10-25-62				
COMPLETE	REVISION		12-05-62				
COMPLETE	REVISION		1-06-63				
COMPLETE	REVISION		2-11-63				
COMPLETE	REVISION		4-11-63				
COMPLETE	REVISION		7-11-63				
COMPLETE	REVISION						

<u>VENDOR NAME</u>	<u>VENDOR CODE NO.</u>	<u>VOLUME</u>
Numerical List of Boeing Drawings for Minuteman		1
Numerical List of Associate Contractor, Vendor & Customer Drawings for Minuteman (Exclud- ing those contained under separate volumes)		2
Aerojet General	01054	3
American Air Filter Co., Inc.	03201	3.1
American Car & Foundry	05272	4
Autonetics	10527	5
Bendix Aviation Corp. (Pacific Div.)	03126	5.01
Bendix Corp., The (Eclipse-Pioneer Div.)	03400	5.02
Bulova, Research & Dev. Lab., Inc.	09356	5.020
Burns & McDonnell (Minot Air Force Base, N. Dak.)	16022	5.03
Carrier Corp.	08346	5.04
Century Electronics & Instruments Inc.	05585	5.1
Electro Development Corp.	09268	5.2
General Motors	12972	6
Hercules Powder	07504	7
Leach Corp. (Leach Relay Div.)	03532	7.01
Minot Air Force Base	16758	7.1
Nortronics	13728	7.10
Parsons-Banner (Warren AFB, Wyo.)	90040	7.11
Parsons - Burns & McDonnell (Whiteman AFB, Missouri)	01229	7.2
Parsons, Ralph M. Co. (Minot AFB - Whiteman AFB) (Vandenberg AFB)	02386	7.3
Parsons-Staven (Ellsworth AFB, S. Dak.) (Minot AFB, N. Dak.)	16398	8

<u>VENDOR NAME</u>	<u>VENDOR CODE NO.</u>	<u>VOLUME</u>
Parsons-Wenzel (Malmstrom AFB, Montana)	15208	9
Patrick Air Force	11846	10
Radiation	07659	11
Radio Corp. of America	03171	12
Standard Mfg Co., Inc.	10719	12.1
Stavid Engineering Co.	11840	12.2
Thiokol Chemical	02861	13
United Electrodynamics	11440	14
United States Steel Corp. (American Bridge)	11282	14.1
Vandenberg Air Force Base (Calif.) (Roberts & Schaffer)	13372	15

PART NO.

SHT.

REV.

NOMENCLATURE

VENDOR
CODE NO. CLASS.

AMERICAN CAR & FOUNDRY CO.

05272

SK-232-1646			ERFECTION ACTUATOR D.O.C.	05272
(SK-232-1700	3	B	SCHEMATIC HYDRAULIC SYSTEM	05272
F SK-232-1700	4	C	SCHEMATIC HYDRAULIC SYSTEM	05272
E SK-232-1700	5	D	SCHEMATIC HYDRAULIC SYSTEM	05272
E SK-232-1700	6	B	SCHEMATIC HYDRAULIC SYSTEM	05272
E SK-232-1700	7	C	SCHEMATIC HYDRAULIC SYSTEM	05272
E SK-232-1700	8	A	SCHEMATIC HYDRAULIC SYSTEM	05272
E SK-232-1700	9		SCHEMATIC HYDRAULIC SYSTEM	05272
R SK-232-1787			LAUNCH STAND CONCEPT	05272
11-45834		A	SLOTTED STUD	05272
1111443		C	PIPE CLAMP - CONDUIT	05272
			AND AIR	
1124389		D	STEAM LINE CLAMP	05272
1124390		B	STEAM LINE ANCHOR SHEET	05272
			NO. 2	
1124396		5K	3/4 IN. PIPE CLAMP SHEET	05272
			NO. 2	
1145508		A	HANDHOLD	05272
120-12472			A.C.F. STD BRAKE ROD JAW	05272
120-6801			HAND BRAKE RELEASE SPRING	05272
A 16-6393			END VALVE OPERATING	05272
			CONNECTION CLEVIS	
1665979		A	FABREKA PAD FOR COUPLER	05272
			CARRIER C STG	
1665993		C	SHOULDER BOLT - SPRING	05272
			STEAM END VALVE SUPPORT	
1665994		E	SHOULDER BOLT FOR STEAM END	05272
			VALVE SUPPORT	
A 1666003		D	U BOLT FOR STEAM END VALVE	05272
A 1669349		C	SWING HANGER PIN	05272
1672924			STEAM PIPE CLAMP	05272
A 1672956		C	3/4 IN. PIPE CLIP STD FOR	05272
			I. P.	
1675383			PROTECTION BOX CHAIN AND	05272
			PIN ASSY	
21-50028			SUPPORT - EMER BRAKE PIPE	05272
			PWR CAP	
B 21-50031			GUSSET - TANK RAFFLE	05272
B 21-50032			GUSSET - TANK RAFFLE	05272
B 21-50035			GUSSET - TANK SUPPORT	05272
			CHANNEL	
21-50075			SUR-FRAME AT SHEAR PLATE	05272
21-50076			SUB-FRAME AT SHEAR PLATE	05272
21-50077			SUR-FRAME AT SHEAR PLATE	05272
21-50078			SUB-FRAME AT SHEAR PLATE	05272
21-50079			SUR-FRAME AT SHEAR PLATE	05272
21-50080			SUB-FRAME AT SHEAR PLATE	05272
21-50081			SUR-FRAME AT SHEAR PLATE	05272
21-50082			SUR-FRAME AT SHEAR PLATE	05272
21-50083			SUR-FRAME AT SHEAR PLATE	05272
21-50084			SUB-FRAME AT SHEAR PLATE	05272
21-50085			SUR-FRAME AT SHEAR PLATE	05272
21-50086			SUR - FRAME AT SHFAR PLATE	05272

21-50087	SUB - FRAME AT SHEAR PLATE	05272
21-50088	SUB - FRAME AT SHEAR PLATE	05272
21-50089	PLATE - SHEAR END	05272
21-50090	PLATE WELD - BACK-UP	05272
21-50091	PLATE	05272
21-50092	PLATE - SHEAR END	05272
21-50093	PLATE ASSY	05272
21-50094	PLATE - ASSY	05272
21-50095	PLATE - ASSY	05272
21-50096	PLATE - ASSY	05272
21-50097	PLATE - SHEAR END	05272
21-50098	PLATE - SHEAR END	05272
21-50099	SPECIFICATION CONTROL -	05272
	MASTER PLAN FOR PWR CAR	
21-50100	CABLE GUIDE HANDBRAKE POWER	05272
	CAR	
21-50101	CABLE GUIDE SPACER HAND	05272
	BRAKE POWER CAR	
21-50102	CABLE GUIDE SPACER HAND	05272
	BRAKE POWER CAR	
21-50104	LEVER SUPPORT	05272
21-50105	SUPPORT - PIPE CLAMP POWER	05272
	CAR	
21-50153	A SPACER - UPPER SLIDING	05272
	CENTER SILL	
21-50154	A SPACER - UPPER SLIDING	05272
	CENTER SILL	
21-50155	A SPACER - UPPER SLIDING	05272
	CENTER SILL	
21-50156	A SPACER LOWER SLIDING	05272
	CENTER SILL	
21-50157	A SPACER - LWR SLIDING	05272
	CENTER SILL	
21-50158	A REINFORCEMENT - SLIDING	05272
	CENTER SILL	
21-50159	A STOP SUPPORT - TOP RING	05272
	SPRING	
21-50160	A STOP SUPPORT - BOTTOM	05272
	RING SPRING	
21-50161	A STOP - SLIDING CENTER SILL	05272
21-50162	A STOP - RING SPRING	05272
21-50164	A GUSSET - CENTER SILL	05272
21-50168	A TIE PLATE - BOTTOM DRAFT	05272
	GEAR POCKET	
21-50169	A TIE PLATE - SLIDING CENTER	05272
	SILL	
21-50170	RETAINER - DRAFT GEAR	05272
21-50171	A STIFFENER - RING SPRING	05272
	UNIT	
21-50172	A GUSSET - SLIDING CENTER	05272
	SILL	
21-50173	A PLATE - TIE PLATE ASSY	05272
21-50174	WEAR PLATE - TIE PLATE	05272
	ASSY	
21-50175	A SHEAR LUG - DRAFT GEAR	05272
	FRONT	

21-50176	A	SHEAR LUG - DRAFT GEAR REAR	05272
21-50177	A	SHEAR LUG - DRAFT GEAR REAR	05272
(21-50180	A	STOP - DRAFT GEAR FRONT AND REAR	05272
21-50181	A	RETAINER - DRAFT GEAR TOP	05272
21-50184	A	FILLER - CENTER SILL	05272
21-50185	A	FILLER - CENTER SILL	05272
21-50186		SPLICE PLATE - CENTER SILL	05272
21-50187		TIE PLATE - TOP CROSSTIES	05272
21-50188		TIE PLATE - TOP CROSSTIES AND CROSSREARS	05272
21-50191		SPACER - SIDE STEM	05272
21-50192		SUPPORT - SIDE STEM	05272
21-50193		SUPPORT - SIDE STEM	05272
21-50196		WASHER - TOP COUPLER - CARRIER	05272
21-50197		WASHER - BOTTOM COUPLER - CARRIER	05272
21-50198	A	STRINGER - CENTER SILL	05272
21-50199	A	STRINGER CENTER SILL	05272
21-50200		PLATE - RETAINER UNCOUPLING MECHANISM SUPPORT	05272
21-50201		WASHER - UNCOUPLING MECH	05272
21-50202	A	SUPPORT - END VALVE OPERATIONS ROD	05272
21-50203	A	SUPPORT - END VALVE	05272
21-50204	A	SUPPORT - YOKE ASSY	05272
21-50205		ROD - UNCOUPLING MECH	05272
21-50206		PIN - UNCOUPLING MECH	05272
21-50207		U-BOLT - ANGLE COCK BRAKE PIPE	05272
21-50208		U-BOLT - BRAKE PIPE	05272
21-50212		RING - FOOT PLATE	05272
21-50214		SHAFT ASSY - OPERATING END VALVE	05272
21-50215		TUBE ASSY - UNCOUPLING MECH	05272
21-50216	A	ROD ASSY - OPERATING END VALVE	05272
21-50222		HANDLE - UNCOUPLING ROD	05272
21-50223		ROD - UNCOUPLING MECHANISM HANDLE	05272
21-50224		CLEVIS - END VALVE OPERATING CONNECTION	05272
21-50225		ANGLE - END VALVE SUPPORT	05272
21-50226	A	SHAFT - OPERATING END VALVE	05272
21-50228		TUBE - UNCOUPLING MECHANISM	05272
21-50229	A	PLATE - BASE UNCOUPLING MECHANISM SUPPORT	05272
21-50230		PLATE ASSY - SIDE UNCOUPLING MECHANISM SUPT	05272
21-50236		RIB - SIDE ACCESS PANEL	05272
21-50237		RIB	05272

21-50253		LUG - SIDE ACCESS PANEL	05272
21-50254		AND EMERGENCY DOOR INSTL	
21-50264		RIR SIDE ACCESS PANEL	05272
	A	RIR SIDE ACCESS PANEL POWER	05272
21-50265		CAP	
		RIR SIDE ACCESS PANEL POWER	05272
21-50266		CAP	
	A	RIR SIDE ACCESS PANEL POWER	05272
21-50280		CAP	
		PLATE - SIDE UNCOUPLING	05272
21-50281		MECHANISM SUPPORT	
		PAD - ANTI-RATTLE-	05272
21-50282		UNCOUPLING MECHANISM	
		PLATE - ANCHOR UNCOUPLING	05272
21-50283		MECHANISM SUPPORT	
		BRACKET - ANTI-TWIST	05272
		UNCOUPLING MECHANISM	
21-50284		SUPPORT	
	A	ROD - OPERATING END VALVE	05272
21-50286		BRACKET - SUPPORT ASSY	05272
21-50287		GUSSET - SUPPORT ASSY	05272
21-50288		LINK - DUMMY COUPLER	05272
		CHAIN	
21-50289		RING - DUMMY COUPLER CHAIN	05272
21-50290		RING - STEAM CONDUIT	05272
		SAFETY HANGER CHAIN	
21-50291		HOOK LARGE - STEAM CONDUIT	05272
		SAFETY HANGER CHAIN	
21-50292		HOOK SMALL - STEAM CONDUIT	05272
		SAFETY HANGER CHAIN	
21-50293		SPRING ASSY - FOOT PLATE	05272
21-50294		BEARING SUPPORT ASSY -	05272
		FOOT PLATE	
21-50295		BEARING - PIVOT FOOT PLATE	05272
21-50296		PLATE - BEARING SUPPORT	05272
		FOOT PLATE	
21-50297		FILLER - BRACK PIPE SUPT	05272
21-50298		FILLER - SUPPORT ASSY	05272
		SIGNAL AND BRACK PIPES	
21-50301		PURLINE ROOF FRAME	05272
21-50302		PURLINE ROOF FRAME	05272
21-50303		PURLINE ROOF FRAME	05272
21-50304		PURLINE ROOF FRAME	05272
21-50305		PURLINE ROOF FRAME	05272
21-50306		PURLINE ROOF FRAME	05272
21-50307		PURLINE ROOF FRAME	05272
21-50308		PURLINE ROOF FRAME	05272
21-50309		PURLINE ROOF FRAME	05272
21-50310		PURLINE ROOF FRAME	05272
21-50311		PURLINE ROOF FRAME	05272
21-50312		PURLINE ROOF FRAME	05272
21-50313		PURLINE ROOF FRAME	05272
21-50314		PURLINE ROOF FRAME	05272
21-50315		PURLINE ROOF FRAME	05272
21-50316		PURLINE ROOF FRAME	05272

21-50317	PURLINE ROOF FRAME	05272
21-50318	PURLINE ROOF FRAME	05272
21-50319	PURLINE ROOF FRAME	05272
21-50320	PURLINE ROOF FRAME	05272
21-50321	PURLINE ROOF FRAME	05272
21-50322	PURLINE ROOF FRAME	05272
21-50323	CARLINE - ROOF END PWR CAR	05272
21-50324	CARLINE - ROOF END PWR CAR	05272
21-50325	CARLINE ROOF - PWR CAR	05272
21-50326	CARLINE ROOF - PWR CAR	05272
21-50327	CARLINE ROOF - PWR CAR	05272
21-50328	CARLINE ROOF - PWR CAR	05272
21-50329	CARLINE ROOF - HATCH PWR CAR	05272
21-50330	CARLINE ROOF - HATCH PWR CAR	05272
21-50331	CARLINE ROOF - RADIATOR PWR CAR	05272
21-50332	CARLINE ROOF - RADIATOR PWR CAR	05272
21-50333	CARLINE ROOF - PWR CAR	05272
21-50334	CARLINE - ROOF POWER CAR	05272
21-50335	CARLINE - ROOF POWER CAR	05272
21-50336	CARLINE - ROOF POWER CAR	05272
21-50342	PLATE - REINFORCING POWER CAR	05272
21-50360	SPREADER - CARLINE POWER CAR	05272
21-50361	SPREADER - CARLINE POWER CAR	05272
21-50362	STIFFENER - CARLINE POWER CAR	05272
21-50363	STIFFENER - CARLINE	05272
21-50364	FRAME - RADIATOR	05272
21-50365	FRAME - RADIATOR	05272
21-50366	STIFFENER	05272
21-50367	CONNECTOR - CARLINE	05272
21-50370	REINFORCEMENT - CARLINE	05272
21-50371	PURLINE - ROOF FRAME	05272
21-50372	PURLINE - ROOF FRAME	05272
21-50373	PURLINE - ROOF FRAME	05272
21-50374	PURLINE - ROOF FRAME	05272
21-50375	PURLINE - ROOF FRAME	05272
21-50376	PURLINE - ROOF FRAME	05272
21-50377	PURLINE - ROOF FRAME	05272
21-50387	SPACER - ROOF HATCH CARLINE POWER CAR	05272
21-50388	SPACER - ROOF HATCH SHEET POWER CAR	05272
21-50389	A PURLINE - ROOF HATCH LOWER POWER CAR	05272
21-50390	PURLINE - ROOF HATCH POWER CAR	05272
21-50391	PURLINE - ROOF HATCH CENTER POWER CAR	05272

21-50402		OVERLINE - ROOF HATCH END	05272
21-50403		POWER CAR	
21-50404		UNDER SHEET - UPPER END	05272
21-50407		FRAME	
21-50408		END SHEET - CENTER	05272
21-50409	A	CLOSURE - END DOOR	05272
21-50410		THRESHOLD	
21-50411		CLOSURE - FOOT PLATE	05272
21-50412		CLOSURE - FOOT PLATE	05272
21-50413		BRACKET - ANTI-TELESCOPING	05272
21-50414		PLATE	
21-50415		BRACKET - ANTI-TELESCOPING	05272
21-50416		PLATE	
21-50417		BRACKET - BUFFER SPRING	05272
21-50418	A	ANGLE - HAND BRAKE SUPPORT	05272
21-50419	A	ANGLE - HAND BRAKE SUPPORT	05272
21-50420		SUPPORT - PIPE END FRAMING	05272
21-50421		SUPPORT - PIPE END FRAMING	05272
21-50422		POST - INTERMEDIATE AT	05272
21-50423		HANDBRAKE	
21-50424		CLAMP - PIPE END FRAMING	05272
21-50425		CLAMP - PIPE END FRAMING	05272
21-50426		FILLER - END DOOR HEADER	05272
21-50427	A	FILLER AT INTERMEDIATE POST	05272
21-50428		FILLER - STA. 1120 END	05272
21-50429		FRAME POWER CAR	
21-50430		FILLER - STA 1120 END	05272
21-50431		FRAME PWR CAR	
21-50432		FILLER - STA 1120 END FRAME	05272
21-50433		PWR CAR	
21-50434		SPRING - HAND BRAKE CHAIN	05272
21-50435		HEADER ANGLE - END DOOR	05272
21-50436		PLATE - BUFFER SPRING PRKT	05272
21-50437		CONNECTION - CORNER POST	05272
21-50438		SIDE - HANDBRAKE PAN	05272
21-50439		SIDE - HANDBRAKE PAN	05272
21-50440		ANGLE - HANDBRAKE PAN	05272
21-50441		ANGLE - HANDBRAKE PAN	05272
21-50442		PLATE - HANDBRAKE PAN	05272
21-50443		PLATE - HANDBRAKE PAN	05272
21-50444		PLATE - HANDBRAKE PAN	05272
21-50445		FILLER - HANDBRAKE PAN	05272
21-50446	A	PLATE - DIAPHRAGM POST	05272
21-50447		BRACKET - DIAPHRAGM POST	05272
21-50448		PLATE - DIAPHRAGM POST	05272
21-50449		PLATE - TAP END DOOR	05272
21-50450		GRAB HANDLE	
21-50451		TAP PLATE - END DOOR	05272
21-50452		HINGE	
21-50453		FRAME - INSIDE END DOOR	05272
21-50454		FILLER - RACEWAY END	05272
21-50455		DOOR FRAME	
21-50456		CLOSURE - RACEWAY END DOOR	05272
21-50457		FRAME	
21-50458		FILLER - RACEWAY END DOOR	05272
21-50459		FRAME	

21-50483	FILLER - CORNER POST	05272
21-50484	CAPPING	
21-50485	FILLER - CORNER POST	05272
21-50486	TAPPING	
21-50490	TAP PLATE - CORNER CAP	05272
21-50491	TAP PLATE - CORNER CAP	05272
21-50492	PLATE - THRESHOLD CLOSURE	05272
21-50493	HEADER - END DOOR OUTER	05272
21-50497	HEADER - END DOOR INNER	05272
21-50499	TAP PLATE - STOP	05272
21-50501	A CONNECTION END SHEET	05272
21-50503	CONNECTION - END SHEET	05272
21-50505	STIFFENER - END SHEET	05272
21-50506	A CONNECTION - END SHEET	05272
21-50507	A CONNECTION - END SHEET	05272
21-50508	A THRESHOLD - END DOOR	05272
21-50510	PLATE - END DOOR THRESHOLD	05272
21-50512	A FILLER - END DOOR THRESHOLD	05272
	A SHIM LADDER - END FRAMING	05272
21-50513	PWR CAR	
	END HAND RAIL - END FRAMING	05272
21-50515	PWR CAR	
21-50518	GRAB HANDLE - END FRAMING	05272
	A CLIP LWR - LADDER ASSY	05272
21-50519	PWR CAR	
	A CLIP - INTERMEDIATE	05272
21-50520	LADDER ASSY PWR CAR	
	A CLIP - UPPER LADDER	05272
21-50521	ASSY PWR CAR	
	TAP PLATE - SIGNAL LAMP	05272
21-50552	BRACKET	
	SUPPORT - 2 1/2 IN. STEAM	05272
21-50553	LINE	
	A SUPPORT - 2 1/2 IN. STEAM	05272
21-50554	LINE	
21-50557	B BRANCH PIPE TEE SUPPORT	05272
21-50558	BRACE	05272
21-50559	BRACE - 26-C CONTROL VALVE	05272
21-50560	C SUPPORT - BRANCH PIPE TEE	05272
21-50561	WASHER - BRANCH PIPE TEE	05272
21-50562	SUPPORT - AUX RESERVOIR	05272
B 21-50563	B SUPPORT BRAKE AND SIGNAL	05272
	PIPE	
B 21-50565	BRACKET - STEAM TRAP	05272
	PWR CAR	
B 21-50566	A SUPPORT SELECTOR AND CONT	05272
	RESERVOIR	
B 21-50568	SUPPORT APPLICATION VALVE	05272
B 21-50569	SUPPORT J-1 RELAY VALVE	05272
B 21-50570	BRACE J-1 RELAY VALVE	05272
B 21-50571	SUPPORT VOLUME RESERVOIR	05272
B 21-50572	A CLAMP - VOLUME RESERVOIR	05272
	CLAMP - SUPPORT BRAKE	05272
	CYLINDER PIPE	

B 21-50573		CLAMP - BRAKE AND SIGNAL PIPE	05272
B 21-50574		CLAMP - BRAKE CYL PIPE	05272
B 21-50576		BASE STEAM ANCHOR BASE	05272
B 21-50577		RIP ANCHOR BASE	05272
B 21-50579	A	SUPPORT - QUICK SERVICE VALVE SUPPORT	05272
B 21-50580		RIP QUICK SERVICE VALVE SUPPORT	05272
B 21-50581		FILLER - QUICK SERVICE VALVE SUPPORT	05272
B 21-50582	A	END SUPPORT - BRAKE AND SIGNAL PIPE	05272
21-50583	A	SUPPORT - STEAM TRAINLINE	05272
B 21-50584	R	SUPPORT - STEAM TRAINLINE	05272
B 21-50585	F	SUPPORT - CYL PIPE	05272
B 21-50586	R	CLAMP - CONDUCTORS VALVE	05272
B 21-50587		BRAKE - VOLUME RESERVOIR	05272
21-50601		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50602		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50603		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50604		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50605		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50606		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50607		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50612		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50613		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50614		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50615		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50616		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50617		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50618	A	FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50619	A	FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50620	A	FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50621		FLOOR PLATE - UNDERFRAME PWR CAR	05272
21-50626		RIP - SIDE ACCESS PANEL	05272
21-50627		RIP - SIDE ACCESS PANEL	05272
21-50628		RIP - SIDE ACCESS PANEL	05272

21-50655	SKIN - SIDE ACCESS PANEL	05272
21-50656	SKIN - SIDE ACCESS PANEL	05272
21-50657	SKIN - END ACCESS PANEL	05272
21-50658	SKIN - SIDE ACCESS PANEL	05272
21-50659	SUPPORT - END SILL	05272
21-50660	SUPPORT - END STEP PWR CAR	05272
21-50661	SUPPORT - SLIDING CENTER	05272
21-50662	SILL CARRIER	05272
21-50663	SUPPORT - SLIDING CENTER	05272
21-50664	SILL CARRIER	05272
21-50665	STOP - CENTER SILL PWR CAR	05272
21-50666	WEAR STRIP AT BOLSTER	05272
21-50667	PWR CAR	05272
21-50668	SHIM - BOLSTER PWR CAR	05272
21-50669	WEAR STRIP - AT CROSSTIE	05272
21-50670	PWR CAR	05272
21-50671	SHIM - AT CROSS TIE PWR CAR	05272
21-50672	WEAR STRIP - AT CROSSBEARER	05272
21-50673	PWR CAR	05272
21-50674	SHIM - CROSSBEARER PWR CAR	05272
21-50675	WEAR STRIP - AT RING	05272
21-50676	SPRING PWR CAR	05272
21-50677	SHIM - AT RING SPRING	05272
21-50678	PWR CAR	05272
21-50679	TIE PLATE - CROSS-TIE-	05272
21-50680	BOTTOM PWR CAR	05272
21-50681	TIE PLATE - CROSS-BEARER	05272
21-50682	PWR CAR	05272
21-50683	CROSSTIE - UNDERFRAME	05272
21-50684	PWR CAR	05272
21-50685	CROSSTIE - UNDERFRAME	05272
21-50686	PWR CAR	05272
21-50687	CROSSTIE - UNDERFRAME	05272
21-50688	PWR CAR	05272
21-50689	CROSSTIE - UNDERFRAME	05272
21-50690	PWR CAR	05272
21-50691	CROSSTIE - UNDERFRAME	05272
21-50692	PWR CAR	05272
21-50693	CROSSTIE - UNDERFRAME	05272
21-50694	PWR CAR	05272
21-50695	CROSSTIE - UNDERFRAME	05272
21-50696	PWR CAR	05272
21-50697	CROSSTIE - UNDERFRAME	05272
21-50698	PWR CAR	05272
21-50699	CROSSTIE - UNDERFRAME	05272
21-50700	PWR CAR	05272
21-50701	CROSSTIE - UNDERFRAME	05272
21-50702	PWR CAR	05272
21-50703	CROSSTIE - UNDERFRAME	05272
	PWR CAR	05272

21-50704	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50705	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50706	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50707	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50708	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50709	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50710	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50711	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50712	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50714	CROSSTIE - UNDERFRAME	05272
	PWR CAR	
21-50717	BOLSTER PLATE - TOP UNDER-	05272
	FRAME PWR CAR	
21-50719	GUSSET - BOLSTER UNDER-	05272
	FRAME PWR CAR	
21-50723	PLATE - UNDERFRAME	05272
	PWR CAR	
B 21-50724	PLATE - UNDERFRAME PWR CAR	05272
B 21-50726	PLATE - BOTTOM BOLSTER	05272
	SLEEVE PWR CAR	
B 21-50727	JACKING PAD - UNDERFRAME	05272
	PWR CAR	
B 21-50730	RING - TANK HEAD	05272
21-50740	TEE - FLOOR SUPPORT	05272
B 21-50741	TEE - FLOOR SUPPORT	05272
B 21-50742	ANGLE - FLOOR SUPPORT	05272
B 21-50743	ANGLE - FLOOR SUPPORT	05272
B 21-50744	ANGLE - FLOOR SUPPORT	05272
B 21-50745	ANGLE - FLOOR SUPPORT	05272
B 21-50746	ANGLE - FLOOR SUPPORT	05272
B 21-50747	ANGLE - FLOOR SUPPORT	05272
B 21-50753	FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	
B 21-50754	FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	
B 21-50755	FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	
B 21-50756	FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	
B 21-50757	FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	
B 21-50758	A FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	
B 21-50759	A FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	
B 21-50760	FLOOR STRINGER - UNDERFRAME	05272
	PWR CAR	

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAP
FLOOR STRINGER - UNDERFRAME 06372

FLOOR STRINGER - UNDERFRAME 05272

FLOOR STRINGER - UNDERFRAME 05272
- PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272
PWR CAP

FLOOR STRINGER - UNDERFRAME 05272
PWR CAR

FLOOR STRINGER - UNDERFRAME 05272

FLOOR STRINGER - UNDERFRAME 05272

FLOOR STRINGER - UNDERFRAME 05272

LOOR STRINGER - UNDERFRAME 05272

FLOOR STRINGER - UNDERFRAME 05272

LOOR STRINGER - UNDERFRAME 05272

05272
PWR CAR
LOOR STRINGER - UNDERFRAME 05272

05272
PWR CAR
LOOR STRINGER - UNDERFRAME 05272

PWR CAR
LOOR STRINGER - UNDERFRAME 05272

PWR CAR
LOOR STRINGER - UNDERFRAME 05272

LOOK STRINGER - UNDERFRAME 05272

LOOK STRINGER - UNDERFRAME 05272

DOOR STRINGER = UNDERFRAME 05272
PWR CAR
DOOR STRINGER = UNDERFRAME 05272

DOOR STRINGER - UNDERFRAME 05272
PWR CAR
DOOR STRINGER - UNDERFRAME 05272

BOOK STRINGER - UNDERFRAME 05272
POWER CAR
BOOK STRINGER - UNDERFRAME

COB STRINGER - UNDERFRAME 05272
POWER CAR
COB STRINGER - UNDERFRAME

21-50797		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50799		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAR	
(21-50801		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50802		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50803		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50804		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50805		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAR	
21-50806		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50809		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50810		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50811		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAR	
21-50812		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAR	
21-50813		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAR	
21-50814		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50815		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAR	
21-50816		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50817		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAR	
21-50818		FLOOR STRINGER - UNDERFRAME	05272
		POWER CAP	
21-50819		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50820		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50821		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50822	A	FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50823	A	FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50824		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50825		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50826		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50828		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	
21-50830		FLOOR STRINGER - UNDERFRAME	05272
		PWR CAR	

21-50832	CLIP - UNDERFRAME	05272
21-50833	ANGLE - FLOOR STRINGER PWR CAR	05272
21-50834	ANGLE - FLOOR STRINGER PWR CAR	05272
21-50835	FLOOR STRINGER - ANGLE UNDERFRAME PWR CAR	05272
21-50836	FLOOR STRINGER - ANGLE UNDERFRAME PWR CAR	05272
21-50837	ANGLE - FLOOR STRINGER PWR CAR	05272
21-50838	ANGLE - FLOOR STRINGER PWR CAR	05272
21-50839	ANGLE - FLOOR STRINGER PWR CAR	05272
21-50840	ANGLE - FLOOR STRINGER PWR CAR	05272
21-50851	A ROD - LWR EMERGENCY DOOR LOCK	05272
21-50852	A WINDOW - EMERGENCY AND END DOORS	05272
21-50853	A TRIM - WINDOW EMER DOOR	05272
21-50854	A TRIM - WINDOW EMER DOOR	05272
21-50855	A SEAL - WINDOW EMER AND END DOORS	05272
21-50864	A ROD ASSY - UPPER EMER DOOR LOCK	05272
21-50865	A ROD ASSY - LWR EMER DOOR LOCK	05272
21-50866	A SPACER - EMER DOOR	05272
21-50869	A SPACER - EMER DOOR	05272
21-50874	A RETAINER - GASKET EMER DOOR	05272
21-50875	A RETAINER - GASKET EMER DOOR	05272
21-50876	B GASKET - SIDE LOADING AND END DOORS	05272
21-50877	A SHIM - LAMINATED HANDLE DOOR LOCK	05272
21-50880	ROD - UPPER EMER DOOR LOCK	05272
21-50881	A GRIP - EMER DOOR LOCK	05272
21-50882	A RIB - EMER DOOR LOCK	05272
21-50883	A RIB - EMER DOOR LOCK	05272
21-50884	A STRAP - EMER DOOR LOCK	05272
21-50885	A SLEEVE - EMER DOOR LOCK	05272
21-50886	A PIN - EMER DOOR LOCK	05272
21-50889	A PLATE - BACKUP EMER DOOR	05272
21-50892	TAP STRIP SIDE ACCESS PANEL	05272
21-50893	LIFTING BAR - SIDE ACCESS PANEL	05272
21-50897	TAP STRIP LWR SIDE ACCESS PANEL	05272
21-50898	A TAP STRIP SIDE ACCESS PANEL	05272

21-50899	TAP STRIP - SIDE ACCESS	05272
	PANFL	
21-50900	FRAME REINFORCEMENT - RIGHT	05272
	SIDE ACCESS PANFL	
21-50901	TAP STRIP - SIDE ACCESS	05272
	PANFL	
21-50915	RIB - SIDE ACCESS PANFL	05272
21-50916	RIB - SIDE ACCESS PANFL	05272
21-50917	A STIFFENER - SIDE ACCESS	05272
	PANFL	
21-50926	TIE PLATE - TOP CROSSTIE	05272
21-50927	FILLER - UNDERFRAME PWR CAR	05272
21-50929	FILLER - UNDERFRAME PWR CAR	05272
21-50930	FILLER - UNDERFRAME PWR CAR	05272
21-50931	FILLER - UNDERFRAME PWR CAR	05272
21-50932	FILLER - UNDERFRAME PWR CAR	05272
21-50933	FILLER - UNDERFRAME PWR CAR	05272
21-50934	FILLER - UNDERFRAME PWR CAR	05272
21-50935	FILLER - UNDERFRAME PWR CAR	05272
21-50936	FILLER - UNDERFRAME PWR CAR	05272
21-50937	FILLER - UNDERFRAME PWR CAR	05272
21-50938	FILLER - UNDERFRAME PWR CAR	05272
21-50939	FILLER - UNDERFRAME PWR CAR	05272
21-50940	FILLER - UNDERFRAME PWR CAR	05272
21-50941	FILLER - UNDERFRAME PWR CAR	05272
21-50942	FILLER - UNDERFRAME PWR CAR	05272
21-50943	FILLER - UNDERFRAME PWR CAR	05272
21-50944	FILLER - UNDERFRAME PWR CAR	05272
21-50945	FILLER - UNDERFRAME PWR CAR	05272
21-50946	FILLER - UNDERFRAME PWR CAR	05272
21-50947	FILLER - UNDERFRAME PWR CAR	05272
21-50948	FILLER - UNDERFRAME PWR CAR	05272
21-50949	FILLER - UNDERFRAME PWR CAR	05272
21-50950	FILLER - UNDERFRAME PWR CAR	05272
21-50951	FILLER - UNDERFRAME PWR CAR	05272
21-50952	FILLER - UNDERFRAME PWR CAR	05272
21-51011	BRACKET - SKIRT MTG	05272
21-51017	STIFFENER - SKIRT SUPPORT	05272
21-51018	STIFFENER - SKIRT PANFL	05272
21-51025	BRACE ASSY - SKIRT SUPPORT	05272
21-51027	SUPPORT - SAFETY SPRING	05272
21-51028	BRACKET - END VALVE	05272
	OPERATING ROD	
21-51029	BRACKET - DUMMY COUPLING	05272
	CHAIN	
21-51030	A SUPPORT - STEAM COUPLING	05272
	SPRING	
21-51031	TOP PLATE ASSY	05272
21-51032	WEAR PLATE - BOTTOM	05272
21-51033	STOP PLATE ASSY	05272
21-51034	COVER PLATE	05272
21-51035	COVER - PLATE BUFFER	05272
	CASTING	
21-51036	SPACER - TOP WEAR PLATE	05272
21-51037	WEAR PLATE - TOP	05272

21-51038	A	STOP PLATE	05272
21-51039		GUSSET - COUPLER STOP	05272
21-51040	A	SPACER - TOP PWR CAR	05272
21-51041	A	SPACER - TOP PWR CAR	05272
21-51042		SPACER - TOP PWR CAR	05272
21-51043		SPACER - TOP PWR CAR	05272
21-51044		SPACER - TOP PWR CAR	05272
21-51045		SPACER - TOP PWR CAR	05272
21-51046		SPACER - TOP PWR CAR	05272
21-51047		SPACER - TOP PWR CAR	05272
21-51048		SPACER - TOP PWR CAR	05272
21-51051	A	SIDE SHEET	05272
21-51052	A	SIDE SHEET	05272
21-51053	A	SIDE SHEET	05272
21-51054	B	SIDE SHEET	05272
21-51055	A	SIDE SHEET	05272
21-51057	A	SIDE SHEET AT EMERGENCY EXIT DOOR	05272
21-51059	A	SIDE SHEET	05272
21-51060	A	SIDE SHEET	05272
21-51061	B	SIDE SHEET AT FILTER	05272
21-51062	B	SIDE SHEET AT FILTER	05272
21-51063	A	SIDE SHEET	05272
21-51065	A	SIDE SHEET	05272
21-51066	A	SIDE SHEET	05272
21-51067	A	SIDE SHEET	05272
21-51068	A	SIDE SHEET	05272
21-51069	A	SIDE SHEET	05272
21-51070	A	SIDE SHEET	05272
21-51073		SIDE POST	05272
21-51074		SUB-FRAME FILTER - PWR CAR	05272
21-51075		SUB-FRAME - FILTER PWR CAR	05272
21-51076		SUB-FRAME - FILTER PWR CAR	05272
21-51077		SUB-FRAME - FILTER PWR CAR	05272
21-51078		SUB-FRAME - FILTER PWR CAR	05272
21-51079		SUB-FRAME - FILTER PWR CAR	05272
21-51080		SUB-FRAME - FILTER PWR CAR	05272
21-51081		SUB-FRAME - FILTER PWR CAR	05272
21-51082		SUB-FRAME - FILTER PWR CAR	05272
21-51083		SUB-FRAME - FILTER PWR CAR	05272
21-51084		SUB-FRAME - FILTER PWR CAR	05272
21-51085		SUB-FRAME - FILTER PWR CAR	05272
21-51086		SUB-FRAME - FILTER PWR CAR	05272
21-51087		SUB-FRAME - RADIATOR PWR CAR	05272
21-51089		STRIP - REINFORCING	05272
21-51090		STRIP - REINFORCING	05272
21-51091		STRIP - REINFORCING	05272
21-51094	A	SIDE SHEET AT BOLSTER	05272
21-51095	A	SIDE SHEET	05272
21-51097	A	SIDE SHEET	05272
21-51098	A	SIDE SHEET AT BOLSTER	05272
21-51099	A	SIDE SHEET	05272
21-51100	A	SIDE SHEET	05272
21-51102		SIDE POST AT BOLSTER	05272

21-51104	B	SIDE SHEET AT FILTER	05272
21-51105	H	SIDE SHEET AT FILTER	05272
21-51106	B	SIDE SHEET AT RADIATOR	05272
21-51110	A	SIDE SHEET	05272
21-51111	A	SIDE SHEET	05272
21-51112	A	SIDE SHEET	05272
21-51113	A	SIDE SHEET	05272
21-51114	A	SIDE SHEET	05272
21-51115	A	SIDE SHEET	05272
21-51116		SIDE POST AT BOLSTER	05272
21-51117		SIDE POST AT BOLSTER	05272
21-51118		SIDE POST AT BOLSTER	05272
21-51119		SIDE POST AT BOLSTER	05272
21-51123	A	SIDE SHEET	05272
21-51124	A	SIDE SHEET	05272
21-51125	A	SIDE SHEET	05272
21-51126	A	SIDE SHEET	05272
21-51127	A	SIDE SHEET	05272
21-51129	A	SIDE SHEET	05272
21-51130	B	SIDE SHEET	05272
21-51131	B	SIDE SHEET AT FILTER	05272
21-51132		SIDE SHEET	05272
21-51133	A	SIDE SHEET	05272
21-51134	B	SIDE SHEET	05272
21-51135	B	SIDE SHEET	05272
21-51136		SPACER - TOP POWER CAR	05272
21-51137		SPACER - TOP POWER CAR	05272
21-51138		SPACER - TOP POWER CAR	05272
21-51139		SPACER - TOP POWER CAR	05272
21-51140	A	SPACER - TOP POWER CAR	05272
21-51142	A	STIFFENER CHANNEL RING	05272
		SPRING	
21-51143	B	REINFORCEMENT - STIFFENER	05272
		CHANNEL	
21-51146		BOLT - COUPLER CARRIER	05272
		SPRING	
21-51148		WEAR PLATE COUPLER CARRIER	05272
21-51149		WEAR PLATE COUPLER CARRIER	05272
21-51150		BASE DRAFT GEAR SUPT	05272
21-51151		WEAR PLATE DRAFT GEAR	05272
21-51152		STIFFENER DRAFT GEAR SUPT	05272
21-51153		GUSSET - WEAR PLATE SUPT	05272
		DRAFT GEAR	
21-51154		WEAR PLATE - DRAFT GEAR	05272
		SUPT	
21-51155		WEAR PLATE SUPT DRAFT GEAR	05272
21-51156		WEAR PLATE SUPT DRAFT GEAR	05272
21-51157		STIFFENER DRAFT GEAR SUPT	05272
21-51159		RETAINER WEAR PAD	05272
21-51160		SHIM WEAR PAD	05272
21-51161		WEAR PAD	05272
21-51162		SUPPORT - WEAR PAD	05272
21-51166		WEAR PAD	05272
21-51167		SUPPORT - WEAR PAD	05272
21-51168		RETAINER WEAR PAD	05272

21-51169		SHIM WEAR PAD	05272
21-51170		FRONT SPRING COLLAR	05272
21-51171		SPRING BUFFER SIDE STEM	05272
21-51177	A	CHANNEL - SLIDING CENTER SILL CARRIER	05272
21-51178		WEAR PLATE - SLIDING CENTER SILL CARRIER	05272
21-51179		PLATE - SLIDING CENTER SILL CARRIER	05272
21-51180	A	PLATE SIDE CONNECTION CENTER SILL CARRIER	05272
21-51181	A	FALSE FLOOR SHEET	05272
21-51182	A	FALSE FLOOR SHEET	05272
21-51183	A	FALSE FLOOR SHEET	05272
21-51184	A	FALSE FLOOR SHEET	05272
21-51185		FALSE FLOOR SHEET	05272
21-51186		FALSE FLOOR SHEET	05272
21-51187		FALSE FLOOR SHEET	05272
21-51188		FALSE FLOOR SHEET	05272
21-51189		FALSE FLOOR SHEET	05272
21-51190		SHEET - FALSE FLOOR	05272
21-51191		FALSE FLOOR SHEET	05272
21-51192		FALSE FLOOR SHEET	05272
21-51193		SHEET - FALSE FLOOR PWR CAR	05272
21-51194		SHEET - FALSE FLOOR PWR CAR	05272
21-51195		SHEET - FALSE FLOOR PWR CAR	05272
21-51196		SHEET - FALSE FLOOR PWR CAR	05272
21-51197		SHEET - FALSE FLOOR PWR CAR	05272
21-51198		SHEET - FALSE FLOOR PWR CAR	05272
21-51200		FRAME - BOTTOM-END DOOR	05272
21-51201		FRAME - RIGHT END DOOR	05272
21-51202		FRAME - LEFT-END DOOR	05272
21-51203		FRAME CENTER-END DOOR	05272
21-51204		FRAME WINDOW LOWER-END DOOR	05272
21-51205		FRAME WINDOW UPPER END DOOR	05272
21-51206		FRAME WINDOW LEFT-END DOOR	05272
21-51207		FRAME WINDOW RIGHT-END DOOR	05272
21-51208		SUPPORT RIGHT-END DOOR	05272
21-51209		SUPPORT LEFT END DOOR	05272
21-51210		SUPPORT UPPER-END DOOR	05272
21-51211		PLATE OFFSET-END DOOR	05272
21-51212		SUPPORT HINGE-END DOOR	05272
21-51213		PLATE HINGE BACKING - END DOOR	05272
21-51214	A	SUPPORT LOWER LATCH-END DOOR	05272
21-51215		PLATE LATCH BACKING END DOOR	05272
B 21-51216		SUPPORT UPPER LATCH END DOOR	05272
B 21-51217		SUPPORT HANDLE-END DOOR	05272
B 21-51219		SUPPORT - END DOOR LOCK	05272
B 21-51220		PLATE TAP - END DOOR LOCK	05272
B 21-51223		PLATE TAPPING - END DOOR LOCK	05272

B 21-51224	FRAME TOP END DOOR	05272
B 21-51225	SIDE - WEATHER SHIELD END	05272
	DOOR LOCK	
B 21-51226	BOTTOM - WEATHER SHIELD END	05272
	DOOR LOCK	
B 21-51227	PLATE TAP - END DOOR LOCK	05272
21-51228	PLATE - TAP END DOOR LOCK	05272
21-51229	STOP FIXED - END DOOR LOCK	05272
21-51231	PLATE TAP END DOOR LOCK	05272
21-51232	THIMPLE BEARING - END DOOR	05272
	LOCK	
B 21-51233	SPACER END DOOR LOCK	05272
21-51234	STOP ADJUSTABLE - END DOOR	05272
	LOCK	
B 21-51235	STRIKER ASSY - END DOOR	05272
	LOCK	
B 21-51237	FILLER BEARING END DOOR	05272
	LOCK	
21-51244	SHIM LAMINATED END DOOR	05272
	LOCK	
21-51245	SHIM - END DOOR LOCK	05272
21-51247	KEEPER ASSY - END DOOR LOCK	05272
21-51248	SHIM LAMINATED END DOOR	05272
	LOCK	
21-51249	CLEVIS END DOOR LOCK	05272
21-51250	FILLER - END DOOR HINGE	05272
21-51251	FLANGE - END DOOR LOCK	05272
21-51252	STRIKER - END DOOR LOCK	05272
21-51253	PLATE BEARING - END DOOR	05272
	LOCK	
1-51254	SLEEVE BEARING - END DOOR	05272
	LOCK	
21-51255	HANDLE - END DOOR LOCK	05272
21-51256	HUB HANDLE - END DOOR LOCK	05272
21-51257	SHAFT - END DOOR LOCK	05272
21-51258	PLATE ARM - END DOOR LOCK	05272
21-51259	HUB ARM - END DOOR LOCK	05272
21-51260	TUBE UPPER END DOOR LOCK	05272
21-51261	PLATE - END DOOR LOCK TUBE	05272
21-51262	END TUBE - END DOOR LOCK	05272
21-51263	FILLER TUBE - END DOOR LOCK	05272
21-51264	TUBE LOWER - END DOOR LOCK	05272
21-51265	PLATE LEVER - END DOOR LOCK	05272
21-51266	LEVER ASSY - END DOOR LOCK	05272
21-51267	PIN LEVER - END DOOR LOCK	05272
21-51268	SPACER LEVER - END DOOR LOC	05272
21-51269	END PAN - END DOOR LOCK	05272
21-51270	END PAN - END DOOR LOCK	05272
21-51272	PLATE KEEPER - END DOOR	05272
	LOCK	
21-51273	BASE KEEPER - END DOOR LOCK	05272
21-51275	A RIB - LEFT SIDE ACCESS	05272
	PANFL POWER CAR	
21-51276	A RIB - LEFT SIDE ACCESS	05272
	PANFL POWER CAR	

5

21-51277	A	RIB - RIGHT SIDE ACCESS PANFL POWER CAR	05272
21-51278	A	RIB - RIGHT SIDE ACCESS PANFL POWER CAR	05272
(21-51279	A	RIB - SIDE ACCESS PANFL POWER CAR	05272
21-51280		RIB - SIDE ACCESS PANFL POWER CAR	05272
21-51281		REINFORCING STRIP - SIDE ACCESS PANFL POWER CAR	05272
21-51283		FRAME - SIDE ACCESS PANFL POWER CAR	05272
21-51290		RIB - SIDE ACCESS PANFL POWER CAR	05272
21-51291	A	RIB - SIDE ACCESS PANFL POWER CAR	05272
21-51292	A	REINFORCING STRIP - SIDE ACCESS PANFL POWER CAR	05272
21-51293		FRAME SIDE ACCESS PANFL	05272
21-51301		PLATE SIDE SILL REINFORCE- MENT	05272
21-51302		PLATE SIDE SILL REINFORCE- MENT	05272
21-51303		PLATE SIDE SILL REINFORCE- MENT	05272
21-51304		PLATE SIDE SILL REINFORCE- MENT	05272
21-51305		TAP PLATE - PIPE CLAMP	05272
21-51320		PIN RETAINING	05272
21-51325		BOLT UPPER BUFFER SPRING	05272
21-51329		RETAINER DIAPHRAGM	05272
21-51330		RETAINER DIAPHRAGM	05272
21-51331		RETAINER DIAPHRAGM	05272
21-51332		RETAINER DIAPHRAGM	05272
21-51333		RETAINER DIAPHRAGM	05272
21-51334		RETAINER DIAPHRAGM	05272
21-51335		RETAINER DIAPHRAGM	05272
21-51336		RETAINER DIAPHRAGM	05272
21-51338		SIDE FACE PLATE	05272
21-51339		SIDE FACE PLATE	05272
21-51340		BOTTOM FACE PLATE	05272
21-51343		CORNER FACE PLATE	05272
21-51344		CORNER FACE PLATE	05272
21-51345		ANGLE FACE PLATE	05272
21-51348		DIAPHRAGM SUPPORT	05272
21-51349		DIAPHRAGM SUPPORT	05272
21-51350		PLATE FACE PLATE	05272
21-51351		GUSSET FACE PLATE	05272
21-51352		SPLICE FACE PLATE	05272
21-51353		SPREADER FACE PLATE	05272
21-51354		SPREADER FACE PLATE	05272
21-51355		FILLER FACE PLATE	05272
21-51356		BUMPER FACE PLATE	05272
21-51357		ANGLE FACE PLATE	05272
21-51358		STIFFENER FACE PLATE	05272

21-51359		LUG FACE PLATE	05272
21-51360		SIDE FACE PLATE	05272
21-51361	A	SPACER - TOP POWER CAR	05272
21-51362	A	SPACER - TOP POWER CAR	05272
21-51363		SIDE POST AT BOLSTER	05272
21-51364		SIDE POST	05272
21-51365	A	SPACER - TOP POWER CAR	05272
21-51366	A	SPACER - TOP POWER CAR	05272
21-51367	A	SPACER - TOP POWER CAR	05272
21-51368		SPACER - TOP POWER CAR	05272
21-51369		SPACER - TOP POWER CAR	05272
21-51370		SPACER - TOP PWR CAR	05272
21-51371		SPACER - TOP PWR CAR	05272
21-51372		SPACER - TOP PWR CAR	05272
21-51373		SPACER - TOP PWR CAR	05272
21-51374		SPACER - TOP PWR CAR	05272
21-51375		SPACER - TOP PWR CAR	05272
21-51376		SPACER - TOP PWR CAR	05272
21-51377		SPACER - TOP PWR CAR	05272
21-51378	A	SPACER - TOP PWR CAR	05272
21-51379	A	SPACER - TOP PWR CAR	05272
21-51380	A	SPACER - TOP PWR CAR	05272
21-51381		SUB FRAME - FILTER	05272
21-51382	A	SPACER - TOP PWR CAR	05272
21-51383		SPACER - BOTTOM BOLSTER	05272
21-51384		SPACER - BOTTOM	05272
21-51385		SPACER - BOTTOM	05272
21-51386		SPACER - BOTTOM PWR CAR	05272
21-51387		SPACER - BOTTOM PWR CAR	05272
21-51388		SPACER - BOTTOM PWR CAR	05272
21-51389		SPACER - BOTTOM PWR CAR	05272
21-51390		SPACER - BOTTOM PWR CAR	05272
21-51391		SPACER - BOTTOM PWR CAR	05272
21-51392		SPACER - BOTTOM POWER CAR	05272
21-51393		SPACER - BOTTOM POWER CAR	05272
21-51394		SPACER - BOTTOM POWER CAR	05272
21-51395		SPACER - BOTTOM POWER CAR	05272
21-51396		SPACER - BOTTOM	05272
21-51397		SPACER - BOTTOM BOLSTER	05272
21-51398		SPACER - BOTTOM	05272
21-51399		SIDE POST	05272
21-51401		SPACER - BOTTOM	05272
21-51402		SPACER - BOTTOM POWER CAR	05272
21-51403		SPACER - BOTTOM	05272
21-51404		SPACER - BOTTOM	05272
21-51405		SPACER - BOTTOM POWER CAR	05272
21-51406		SPACER - BOTTOM POWER CAR	05272
21-51407		SPACER - BOTTOM POWER CAR	05272
21-51408		SPACER - BOTTOM POWER CAR	05272
21-51409		SPACER - BOTTOM POWER CAR	05272
21-51410		SPACER - BOTTOM POWER CAR	05272
21-51411		SPACER - BOTTOM POWER CAR	05272
21-51412		SPACER - BOTTOM	05272
21-51413		SPACER - BOTTOM	05272
21-51414		SPACER - BOTTOM	05272

21-51418		SPACER - BOTTOM PWR CAR	05272
21-51419		SPACER - BOTTOM	05272
21-51420		SPACER - BOTTOM	05272
21-51421	A	SIDE SHEET	05272
21-51422	A	SIDE SHEET	05272
21-51423	B	SIDE SHEET	05272
21-51424	B	SIDE SHEET	05272
21-51425	B	SIDE SHEET	05272
21-51426	A	SIDE SHEET	05272
21-51427	A	SIDE SHEET	05272
21-51428	B	SIDE SHEET	05272
21-51429	B	SIDE SHEET	05272
21-51430	A	SIDE SHEET	05272
21-51431	A	SIDE SHEET	05272
21-51432		SUB-FRAME - FILTER PWR	05272
21-51433		SUB-FRAME - FILTER PWR CAR	05272
21-51434		SUB-FRAME - FILTER PWR CAR	05272
21-51435		SUB-FRAME - FILTER PWR CAR	05272
21-51436		SUB-FRAME - FILTER PWR CAR	05272
21-51437		SUB-FRAME - FILTER POWER	05272
21-51438		CAR	
21-51439		SUB-FRAME - FILTER POWER	05272
21-51440		CAR	
21-51441		SUB-FRAME - FILTER POWER	05272
21-51442		CAR	
21-51443		SUB-FRAME - FILTER POWER	05272
21-51444		CAR	
21-51445		SUB-FRAME - FILTER POWER	05272
21-51446		CAR	
21-51447		SUB-FRAME - FILTER POWER	05272
21-51448		CAR	
21-51449		SUB-FRAME - FILTER POWER	05272
21-51450		CAR	
21-51451		STOIP - REINFORCING	05272
21-51452		STOIP - REINFORCING	05272
21-51453		STOIP - REINFORCING	05272
21-51454		STOIP - REINFORCING	05272
21-51455		SUB-FRAME - RADIATOR POWER	05272
21-51456		CAR	
21-51457		SUB-FRAME - RADIATOR POWER	05272
21-51458		CAR	
21-51459		SUB-FRAME - RADIATOR POWER	05272
21-51460		CAR	

21-51511	SIDE POST AT BALSTED	05272
21-51512	SIDE POST	05272
21-51513	SIDE POST	05272
21-51514	SIDE POST	05272
21-51515	SIDE POST	05272
21-51516	SIDE POST	05272
21-51517	SIDE POST	05272
21-51518	SIDE POST	05272
21-51519	SIDE POST	05272
21-51520	SIDE POST	05272
21-51521	SIDE POST	05272
21-51522	SIDE POST	05272
21-51523	SIDE POST	05272
21-51524	SIDE POST	05272
21-51525	SIDE POST AT DOOR	05272
21-51526	SIDE POST	05272
21-51527	SIDE POST	05272
21-51528	SIDE POST	05272
21-51529	SIDE POST	05272
21-51530	SIDE POST	05272
21-51531	SIDE POST	05272
21-51532	SIDE POST AT DOOR	05272
21-51533	SIDE POST	05272
21-51534	SIDE POST	05272
21-51535	SIDE POST	05272
21-51536	SIDE POST	05272
21-51537	SIDE POST AT BOLSTER	05272
21-51538	SIDE POST	05272
21-51539	SIDE POST	05272
21-51540	SIDE POST	05272
21-51541	SIDE POST	05272
21-51542	GUSSET - SIDE FRAME	05272
21-51543	GUSSET - SIDE FRAME	05272
21-51544	GUSSET - SIDE FRAME	05272
21-51545	GUSSET - SIDE FRAME	05272
21-51546	GUSSET - SIDE FRAME	05272
21-51547	SIDE SHEET	05272
21-51551	SIDE SHEET	05272
21-51554	SIDE SHEET	05272
21-51556	SPACER - TOP DWR CAR	05272
21-51557	SPACER - TOP DWR CAR	05272
21-51558	SPACER - TOP DWR CAR	05272
21-51559	SPACER - TOP DWR CAR	05272
21-51560	SPACER - TOP DWR CAR	05272
21-51561	SPACER - TOP DWR CAR	05272
21-51562	SPACER - TOP POWER CAR	05272
21-51563	SPACER - TOP POWER CAR	05272
21-51564	SPACER - TOP POWER CAR	05272
21-51565	SPACER - TOP POWER CAR	05272
21-51566	SPACER - TOP POWER CAR	05272
21-51567	SPACER - TOP POWER CAR	05272
21-51568	SPACER - TOP POWER CAR	05272
21-51569	SPACER - TOP POWER CAR	05272
21-51570	SPACER - TOP POWER CAR	05272
21-51571	SPACER - TOP POWER CAR	05272

21-51572	SPACER - TOP POWER CAR	05272
21-51573	SPACER - TOP POWER CAR	05272
21-51574	SPACER - TOP POWER CAR	05272
21-51575	SPACER - TOP POWER CAR	05272
21-51576	SPACER - TOP POWER CAR	05272
21-51577	SPACER - TOP POWER CAR	05272
21-51578	SPACER - TOP POWER CAR	05272
21-51579	SPACER - TOP POWER CAR	05272
21-51580	SPACER - TOP POWER CAR	05272
21-51581	SPACER - TOP POWER CAR	05272
21-51582	SPACER - TOP POWER CAR	05272
21-51583	SPACER - TOP POWER CAR	05272
21-51584	SPACER TOP - POWER CAR	05272
21-51585	SPACER TOP - POWER CAR	05272
21-51586	SPACER TOP - POWER CAR	05272
21-51587	SPACER TOP - POWER CAR	05272
21-51588	SPACER TOP - POWER CAR	05272
21-51589	SPACER TOP - POWER CAR	05272
21-51590	FRAME ACCESS DOOR	05272
21-51591	RETAINER GASKET - ACCESS DOOR	05272
21-51592	REINFORCEMENT POST - ACCESS DOOR	05272
21-51596	RETAINER GASKET - ACCESS DOOR	05272
21-51597	FRAME ACCESS DOOR	05272
21-51599	STIFFENER THRESHOLD ACCESS DOOR	05272
21-51600	THRESHOLD ACCESS DOOR - POWER CAP	05272
21-51601	PLATE BOTTOM THRESHOLD - ACCESS DOOR	05272
21-51602	FILLER THRESHOLD - ACCESS DOOR	05272
21-51604	PLATE THRESHOLD LATCH - ACCESS DOOR	05272
21-51605	FRAME ACCESS DOOR	05272
21-51606	SUP-FRAME EMERGENCY DOOR	05272
21-51607	SUP-FRAME EMERGENCY DOOR	05272
21-51617	A FLOOR PLATE UNDER FRAME - POWER CAP	05272
21-51618	FLOOR PLATE UNDERFRAME - POWER CAP	05272
21-51619	FLOOR PLATE UNDERFRAME - POWER CAP	05272
21-51620	FLOOR PLATE UNDERFRAME - POWER CAP	05272
21-51621	FLOOR PLATE UNDERFRAME - POWER CAP	05272
21-51622	FLOOR PLATE UNDERFRAME - POWER CAP	05272
21-51623	FLOOR PLATE UNDERFRAME - POWER CAP	05272
21-51624	FLOOR PLATE UNDERFRAME - POWER CAP	05272

232-10725	FLOOR STRINGER	05272
232-10726	FLOOR STRINGER	05272
232-10727	FLOOR STRINGER	05272
232-10728	FLOOR STRINGER	05272
232-10729	FLOOR STRINGER	05272
232-10730	FLOOR STRINGER	05272
B 232-10731	FLOOR STRINGER	05272
B 232-10732	FLOOR STRINGER	05272
B 232-10733	FLOOR STRINGER	05272
B 232-10734	FLOOR STRINGER	05272
B 232-10735	FLOOR STRINGER	05272
B 232-10736	FLOOR STRINGER	05272
232-10737	FLOOR STRINGER	05272
232-10738	FLOOR STRINGER	05272
B 232-10739	FLOOR STRINGER	05272
B 232-10740	FLOOR STRINGER	05272
B 232-10741	FLOOR STRINGER	05272
B 232-10742	FLOOR STRINGER	05272
B 232-10743	FLOOR STRINGER	05272
B 232-10744	FLOOR STRINGER	05272
B 232-10745	CROSS TIE END SILL	05272
B 232-10746	FLOOR STRINGER	05272
B 232-10747	FLOOR STRINGER	05272
B 232-10748	FLOOR STRINGER	05272
B 232-10749	FLOOR STRINGER	05272
B 232-10750	FLOOR STRINGER	05272
B 232-10751	FLOOR STRINGER	05272
B 232-10752	FLOOR STRINGER	05272
C 232-10753	SHEET FALSE FLOOR	05272
232-10754	SHEET FALSE FLOOR	05272
C 232-10755	SHEET FALSE FLOOR	05272
C 232-10756	SHEET FALSE FLOOR	05272
C 232-10757	SHEET - FALSE FLOOR	05272
C 232-10758	SHEET FALSE FLOOR	05272
C 232-10759	SHEET FALSE FLOOR	05272
C 232-10760	SHEET - FALSE FLOOR	05272
C 232-10761	SHEET FALSE FLOOR	05272
C 232-10762	SHEET FALSE FLOOR	05272
C 232-10763	SHEET FALSE FLOOR	05272
C 232-10764	SHEET FALSE FLOOR	05272
C 232-10765	SHEET FALSE FLOOR	05272
C 232-10766	SHEET FALSE FLOOR	05272
C 232-10767	SHEET FALSE FLOOR	05272
232-10768	JUNCTION BOX ASSY - WATER TANK	05272
232-10769	HOUSING - JUNCTION BOX WATER TANK	05272
232-10770	END PLATE - JUNCTION BOX	05272
232-10771	COVER - JUNCTION BOX	05272
232-10772	GASKET - JUNCTION BOX	05272
B 232-10773	GASKET - JUNCTION BOX	05272
B 232-10774	FLANGE CORNER - JCT BOX	05272
C 232-10775	SHEET ASSY - FALSE FLOOR	05272
C 232-10776	SHEET ASSY - FALSE FLOOR	05272
B 232-10777	SUPPORT ASSY - BRAKE AND SIGNAL PIPE	05272

C 232-10778	SHEET FALSE FLOOR	05272
B 232-10779	SLEEVE - FLOOR SEAL SEWAGE	05272
	TANK DRAINAGE SHAFT	
B 232-10780	COLLAR FLOOR SEAL SLEEVE	05272
C 232-10781	SHEET ASSY - FALSE FLOOR	05272
C 232-10782	SLEEVE ASSY - FLOOR SEAL	05272
	SEWAGE TANK DRAIN SHAFT	
B 232-10783	PLATE - SEAL SEWAGE TANK	05272
	DRAINAGE SHAFT	
B 232-10784	SUPPORT ASSY - BRAKE AND	05272
	SIGNAL PIPE	
C 232-10785	SHEET - FALSE FLOOR	05272
C 232-10786	SHEET ASSY - FALSE FLOOR	05272
232-10787	JUNCTION BOX ASSY FUEL TANK	05272
232-10788	HOUSING - JUNCTION BOX FUEL	05272
	TANK	
B 232-10789	PLATE - CONNECTION HAND	05272
	BRAKE CHAIN ENCLOSURE	
B 232-10790	COVER - ENCLOSURE HAND	05272
	BRAKE CHAIN	
C 232-10791	ENCLOSURE - HAND BRAKE	05272
	CHAIN	
232-10792	TUBE - FLOOR SEAL HAND	05272
	BRAKE CHAIN	
232-10793	TUBE ASSY - FLOOR SEAL HAND	05272
	BRAKE CHAIN	
232-10794	CLAMP - STRIP HEATERS	05272
	SEWAGE TANK	
232-10795	TUBE - SEWAGE AND WATER	05272
	TANKS	
232-10796	TUBE - FUEL TANK	05272
232-10797	SUPPORT - PLATE EJECT.	05272
	BOXES SEWAGE TANK	
232-10798	PLATE - ACCESS PANEL	05272
232-10799	PLATE - ACCESS PANEL	05272
232-10800	BRACKET - HEATING ELEMENT	05272
	WATER TANK HEATING	
232-10801	PLATE - ACCESS PANEL	05272
232-10802	PLATE - ACCESS PANEL	05272
C 232-10803	FRAME ASSY - ACCESS PANEL	05272
C 232-10804	RUBBER SEAL - ACCESS DOOR	05272
C 232-10805	ACCESS DOOR PANEL	05272
232-10806	STIFFENER - END SKIRT SUP.	05272
232-10807	LUG - MACHINING	05272
232-10808	RETAINER INSULATION	05272
C 232-10809	RETAINER INSULATION	05272
232-10810	STIFFENER - PANEL	05272
D 232-10811	ACCESS DOOR ASSY	05272
232-10812	CLIP - INSULATION RETAINING	05272
232-10813	BAND - INSULATION RETAINING	05272
232-10814	BAND - INSULATION RETAINING	05272
232-10815	BAND INSULATION RETAINING	05272
232-10816	BAND - INSULATION RETAINING	05272
232-10817	PLATE - GUIDE SUP. ASSY	05272
232-10818	GUSSET - SUPPORT ASSY	05272

232-10819	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10820	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
(232-10821	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10822	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10823	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10824	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10825	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10826	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10827	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10828	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10829	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10830	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
232-10831	ANGLE - END DOOR FRAME	05272
C 232-10832	REINFORCEMENT - CARLINE	05272
232-10833	SPACER - REAR PANEL ASSY	05272
C 232-10834	CARLINE ASSY - REINFORCED	05272
C 232-10835	STIFFENER - PURLINE OVER-	05272
	HEAD UNIT	
C 232-10836	STIFFENER - PURLINE OVER-	05272
	HEAD UNIT	
C 232-10837	STIFFENER - PURLINE OVER-	05272
	HEAD UNIT	
C 232-10838	STIFFENER - PURLINE OVER-	05272
	HEAD UNIT	
232-10839	FLOOR STRINGER	05272
C 232-10840	SHEET FALSE FLOOR	05272
C 232-10841	SHEET ASSY - FALSE FLOOR	05272
J 232-10842	LETTERING ARRGT COMMAND CAR	05272
232-10843	BRACKET - TERMINAL STRIP	05272
	MTG FUEL TANK HEATING	
232-10844	SPLICE PLATE - TOP PLATE	05272
	FUEL TANK HOUSING	
232-10845	STIFFNER FUEL LINE SUPPORT	05272
C 232-10846	END SUPPORT ASSY - FUEL	05272
	TANK HOUSING	
232-10847	SUPPORT ANGLE	05272
232-10848	PLAIN WASHER STRIP HEATER	05272
	MTG	
232-10849	STRIP - HEATER ASSY FUEL	05272
	SEWAGE AND WATER TANK	
	HEATING	
232-10850	SHIM AT CROSSTIE STA 530.	05272
	625	

232-10851	WEAR STRIP AT CROSS TIE	05272
C 232-10852	STA 530-625	
(232-10853	STENCIL DIAGRAM EMERGENCY	05272
	DOOR	
232-10854	CLAMP - SUPPORT WATER TANK	05272
	AND SEWAGE TANK HEATING	
232-10855	BRACKET - WATER TANK	05272
	HEATING	
232-10856	CLAMP - SUPPORT WATER TANK	05272
232-10857	HEATING	
	SUPPORT - SIDE SHEET	05272
	CLAMP - WATER TANK AND	05272
	SEWAGE TANK HEATING	
232-10858	CLAMP - WATER TANK HEATING	05272
232-10859	SUPPORT ANGLE	05272
232-10860	STIFFENER - BOTTOM ANGLE	05272
232-10861	REFINE ANGLE - SEWAGE TANK	05272
232-10862	PLATE - REAR SUPPORT	05272
	SEWAGE TANK	
B 232-10863	WEATHER SHIELD - SEWAGE	05272
	TANK VENT PIPE	
B 232-10864	CLIP - WEATHER SHIELD	05272
	SEWAGE TANK VENT PIPE	
232-10865	WEATHER SHIELD ASSY -	05272
	SEWAGE TANK VENT PIPE	
B 232-10866	STIFFENER - JCT BOX SUP.	05272
B 232-10867	BRACKET - JCT BOX SUP.	05272
B 232-10868	PLATE - JCT BOX SUP.	05272
B 232-10869	SUPPORT ASSY - JCT BOX	05272
B 232-10870	IDENTIFICATION TAG STEAM	05272
	PIPING	
B 232-10871	IDENTIFICATION TAG BRAKE	05272
	AIR PIPING	
232-10872	IDENTIFICATION TAG SIGNAL	05272
	AIR PIPING	
B 232-10873	IDENTIFICATION TAG WATER	05272
	RAISING AIR	
B 232-10874	IDENTIFICATION TAG BRAKE	05272
	AIR PIPING	
B 232-10876	IDENTIFICATION TAG	05272
	ELECTRICAL CONDUIT	
232-10879	HOUSING - JUNCTION BOX	05272
	WATER AND FUEL PIPE HTG.	
232-10880	JUNCTION BOX ASSY. HEATING	05272
	ELEMENT FUEL PIPES	
232-10881	JUNCTION BOX ASSY. HEATING	05272
	ELEMENT WATER PIPES	
B 232-10882	STRAP - MTG IDENTIFICATION	05272
	TAG	
232-10883	STRAP - MOUNTING IDENTIFI-	05272
	CATION TAG	
B 232-10884	STRAP - MTG IDENTIFICATION	05272
	TAG	
232-10885	STRAP - MOUNTING IDENTIFI-	05272
	CATION TAG	

232-10886		STRAP - MOUNTING IDENTIFI-	05272
B 232-10887		CATION TAG	
(232-10888		STRAP - MIS IDENTIFICATION	05272
B 232-10889		TAG	
B 232-10890		CONDUIT SUPPORT	05272
B 232-10891		SUPPORT - CHAIN HOUSING	05272
		SEWAGE TANK	
		COLLAR - CHAIN HOUSING	05272
		SUPPORT SEWAGE TANK	
		SUPPORT ASSY - CHAIN	05272
		HOUSING SEWAGE TANK	
232-1718DDL	2	MAIN ROOF DOOR SECTION A-A	05272
		DETAIL AT C STA 132.75	
232-1718DDL	3	MAIN ROOF DOOR SECTION B-B	05272
		C STA 132.75	
232-1718DDL	4	MAIN ROOF DOOR SECTION C-C	05272
		C STA 173.56	
232-1718DDL	5	MAIN ROOF DOOR SECTION D-D	05272
		C STA 203.06	
232-1718DDL	6	MAIN ROOF DOOR SECTION E-E	05272
		C STA 409.81	
232-1718DDL	7	MAIN ROOF DOOR SECTION F-F	05272
		C STA 646.06	
232-1718DDL	8	MAIN ROOF DOOR SECTION G-G	05272
		AND STA 665.87	
232-1718DDL	9	MAIN ROOF DOOR SECTION H-H	05272
		C STA 686.0	
232-1718DDL	10	MAIN ROOF DOOR DETAIL	05272
		C STA 132.75	
232-1718DDL	11	MAIN ROOF DOOR DETAIL - 29	05272
232-1718DDL	12	MAIN ROOF DOOR DETAIL	05272
		C STA 409.81	
232-1718DDL	13	MAIN ROOF DOOR DETAIL	05272
		SECTION F-F	
232-1718DDL	14	MAIN ROOF DOOR DETAILS	05272
		C STA 665.87-35-36	
232-1718DDL	15	MAIN ROOF DOOR DETAIL	05272
		C STA 686-37-38	
J 232-1718DDL	16	MAIN ROOF DOOR - BOTTOM	05272
		SKIN	
J 232-1718DDL	17	SKIN TOP - MAIN ROOF DOOR	05272
E 232-1718DDL	18	MAIN ROOF DOOR DETAILS	05272
		203 - 205 - 209	
E 232-1718DDL	19	MAIN ROOF DOOR ACTUATOR -	05272
		GUSSET C STA 409.81	
E 232-1718DDL	20	MAIN ROOF DOOR - ACTUATOR	05272
		GUSSET - C STA 409.81	
J 232-1718DDL	21	MAIN ROOF DOOR - ACTUATOR	05272
		BRACKET - C STA 409.81	
J 232-1718DDL	22	MAIN ROOF DOOR DETAILS -	05272
		169 - 57 AND -167	
J 232-1718DDL	23	MAIN ROOF - DOOR DETAILS	05272
E 232-1718DDL	24	MAIN ROOF DOOR DETAILS	05272
J 232-1718DDL	25	MAIN ROOF DOOR DETAILS	05272
J 232-1718DDL	26	MAIN ROOF DOOR DETAILS	05272

J 232-1718DDL	27	MAIN ROOF DOOR SECT.	05272
E 232-1718DDL	28	S-S-Z-Z AND AA-AA	05272
J 232-1718DDL	29	MAIN ROOF DOOR SKIN - LWR	05272
		VIEWS H-H AND J-J, SHT	
		NO. 8	
		MAIN ROOF DOOR SECTION C	05272
		STA 686.0 686.0 AND	
		646.06	
E 232-1718DDL	30	MAIN ROOF DOOR SECTION U-U	05272
E 232-1718DDL	31	MAIN ROOF DOOR SECTION P-P	05272
J 232-1718DDL	32	OUTER PLATES C STA 132.75	05272
		MAIN ROOF DOOR	
J 232-1718DDL	33	MAIN ROOF DOOR - HINGE ASSY	05272
J 232-1718DDL	34	MAIN ROOF DOOR	05272
E 232-1718DDL	35	MAIN ROOF DOOR SECTION V-V	05272
D 232-3118DDL		C LOUVER ASSY. RH	05272
E 232-3119DDL		C LOUVER ASSY - RH	05272
D 232-3120DDL		C LOUVER ASSY. LH	05272
232-3121DDL		C LOUVER ASSY LH	05272
232-3124DDL		C FACE PLATE ASSY	05272
J 232-3125DDL		A REMOVABLE PANFL ASSY - LH	05272
232-3126DDL		A REMOVABLE PANFL ASSY	05272
232-3127DDL	1	C SIDE SHEET ASSY - AT LOUVER	05272
		LEFT HAND	
J 232-3128DDL		D REMOVABLE PANEL ROOF -	05272
		RIGHT SIDE	
J 232-3158DDL		A REMOVABLE PANEL ASSY - RH	05272
232-3159DDL		B REMOVABLE PANEL ASSY - RH	05272
J 232-3161DDL		C UNDER FRAME - ASSY OF	05272
232-3162DDL	1	B UNDER FRAME PIPING AND	05272
		EQUIP. INSTL	
232-3162DDL	2	UNDER FRAME PIPING AND	05272
		EQUIP. INSTL	
232-3162DDL	3	UNDER FRAME PIPING AND	05272
		EQUIP. INSTL	
232-3163		PIPING - END OF CAR	05272
232-3164DDL		D SIX WHEEL TRUCK ASSY	05272
J 232-3165DDL		C PIPING ASSY TRUCK	05272
J 232-3166DDL		UNCOUPLING ASSY	05272
J 232-3167DDL		R HAND BRAKE ASSY	05272
J 232-3168DDL		C FIXED CENTER SILL - ASSY OF	05272
J 232-3169DDL		E SLIDING CENTER SILL ASSY	05272
J 232-3170DDL	1	D BOLSTER ASSY - STA 271.0	05272
		SECTIONS	
J 232-3170DDL	2	D BODY BOLSTER - STA 271.0	05272
		SECTION	
J 232-3170DDL	3	C BODY BOLSTER - STA 9850	05272
		SECTIONS AND DETAILS	
232-3170DDL	4	A BOLSTER ASSY. STA. 9850	05272
		SECTIONS AND DETAILS	
232-3171DDL		R CROSSBEARERS	05272
232-3172DDL	1	E SIDE SILL - ASSY OF	05272
232-3172DDL	2	E SIDE SILL - ASSY OF	05272
J 232-3173DDL		E END SILL ASSY AT A AND B	05272
		ENDS	

J 232-3178DDL	1	E	EQUIPMENT ROOM INSTL	05272
J 232-3178DDL	2	E	PARTITION EQUIP. ROOM	05272
J 232-3178DDL		E	PARTITION EQUIPMENT ROOM	05272
J 232-3177DDL		E	EQUIPMENT ROOM FLOOR -	05272
(C) 232-3178DDL	1	C	ASSY OF DOOR SLIDING - PARTITION	05272
J 232-3178DDL	2	D	ASSY OF DOOR SLIDING - BLAST WALL	05272
E 232-3178DDL	4	C	ASSY OF DOOR - PERSONNEL SIDE	05272
232-3179DDL		C	CEILING INSTL EQUIP. ROOM	05272
232-3180DDL	1	E	SIDE FRAMING EQUIP. ROOM LH	05272
232-3180DDL	2	D	SIDE FRAMING EQUIP. ROOM RH	05272
J 232-3180DDL	3	C	SIDE FRAMING EQUIP. ROOM LH	05272
232-3181DDL	1		BLASTWALL EQUIP. ROOM	05272
J 232-3181DDL	2	A	BLASTWALL EQUIP. ROOM	05272
232-3182DDL		D	ROOF INSTL EQUIP. ROOM	05272
232-3183DDL		C	END DIAPHRAGM INSTL A AND B	05272
232-3184DDL			ENDS	
232-3185		D	END INSTL A AT EQUIP. RM	05272
J 232-3186DDL		H	EQUIPMENT MOUNTING INSTL	05272
J 232-3187DDL	1	C	AREA BETWEEN EQUIP. ROOM	05272
J 232-3187DDL	2	C	AND MISSILE LAUNCH STAND ARRANGEMENT	05272
J 232-3188DDL		C	LAUNCH STAND ARRANGEMENT	05272
E 232-3192DDL		B	TRUCK LOCK-OUT	05272
232-3194DDL			COUPLER CARRIER INSTL	05272
J 232-3195		D	FLOOR MISSILE AREA	05272
J 232-3197DDL		D	FRAME - R END	05272
232-3500DAL		A	GENERAL ARRANGEMENT -	05272
J 232-3501DAL			MISSILE CAR 102	
232-3502DAL		C	COMMAND CAR - GENERAL ARRGT	05272
J 232-3503DAL		C	CROSS SECTION - COMMAND CAR	05272
232-3504DAL		A	BOLSTER AND TRUCK APPLICA-	05272
J 232-3505DAL		C	TIONS AND CONDITIONS	
232-3506DAL		D	UNDERFRAME - SLIDING CENTER	05272
J 232-3507DAL			SILL	
232-3508DAL		D	CONDITION OF SLIDING CENTER	05272
J 232-3510DAL		E	SILL AT CROSS BEARER	
J 232-3511DAL			CONDITION OF SLIDING CENTER	05272
232-3512DAL			SILL - CROSS TIE AND RING	
J 232-3514DAL			SPRING UNIT	
J 232-3515DAL		D	SECTION THRU SIDE ACCESS	05272
J 232-3516DAL			PANEL AND EMERG. DOOR	
		B	ROOF SECTION	05272
		D	ROOF FRAME	05272
		A	ROOF HATCH	05272
		C	SIDE FRAME	05272
		B	POST SECTION	05272
		C	UNDERFRAME EQUIPMENT	05272
			ARRANGT	
		B	END FRAMING	05272
		A	COUPLER AND DRAFT GEAR	05272
			ARRANGT - SLIDING CENTER	
			SILL	

232-3517DAL	A	SECTION THRU SKIRT AND SKIRT DOOR	05272
J 232-3518DAL	A	TRUCK GENERAL ARRANGT - COMMAND CAR	05272
(232-3519DAL	B	DIAPHRAGM AND FACE PLATE	05272
232-3520DAL	H	END EQUIPMENT - ARRANGT	05272
232-3521DAL	A	BUFFER SIDE STEW ARRANGEMENT	05272
J 232-3522DAL	C	SEWAGE TANK AND HOUSING APPLICATION	05272
232-3523DAL	B	WATER TANK AND HOUSING APPLICATION	05272
J 232-3524DAL	H	FUEL TANK - HOUSING ARRANGT	05272
232-3525DAL	A	LOCK ARRANGEMENT END DOOR	05272
J 232-3526DAL	B	ENROUTE DRAINAGE - SEWAGE TANK	05272
J 232-3527DAL	A	HEATING INSTL - WATER TANK	05272
J 232-3528DAL	A	HEATING INSTL - FUEL TANKS	05272
J 232-3529DAL	A	HEATING INSTL - SEWAGE TANK	05272
D 232-3530DAL		WIRING DIAGRAM - FUEL WATER AND SEWAGE TANK HEATING	05272
232-5129		HANDBRAKE ENVELOPE	05272
232-5132		EQUIPMENT ROOM WALL ENVELOPE	05272
232-5246		AXLES	05272
J 232-5500		GENERAL ARRANGEMENT COMMAND CAR	05272
J 232-5501		CROSS SECTION - COMMAND CAR	05272
C 232-5502		CARLINE HAT SECTION	05272
C 232-5503		CARLINE COPE AND HOLE LOCATIONS STA 593.62 THRU STA 144.87	05272
C 232-5504		END CARLINE STA 1098.63	05272
C 232-5505		END CARLINE ASSY - STA 1098.63	05272
B 232-5506		CONNECTOR - END CARLINE	05272
B 232-5507		CONNECTOR - END CARLINE	05272
J 232-5508		ROOF FRAME - ROOF SECTION	05272
C 232-5509		CARLINE	05272
J 232-5511		SIDE FRAME ASSY - POST SECTION COMMAND CAR	05272
J 232-5513		FLOOR ARRANGEMENT	05272
232-5514		UNDERFRAME EQUIPMENT ARRANGEMENT	05272
J 232-5515		END FRAMING ARRANGEMENT	05272
J 232-5516		COUPLER AND DRAFT GEAR ARRGT	05272
E 232-5517		FINISHED AXLE 6 IN. X 11 IN. TRUCK TYPE F	05272
J 232-5518		TRUCK GENERAL ARRANGEMENT COMMAND CAR	05272
J 232-5519		EQUALIZER	05272
D 232-5520		BAR - SWING HANGER	05272
C 232-5521		SWING HANGER BEARING	05272
C 232-5522		SWING HANGER	05272

C 232-5521	SWING HANGER AND BUSHING	05272
E 232-5524	ASSY	
(232-5525	AXLE 6 IN. X 11 IN. TRUCK	05272
B 232-5526	TYPE F	
B 232-5527	36 IN. MULTIPLE WEAR	05272
B 232-5528	WROUGHT STEEL WHEEL	
B 232-5529	SWING - HANGER BUSHING	05272
B 232-5531	SHIM - EQUALIZER SPRING	05272
B 232-5532	SHIM - EQUALIZER SPRING	05272
B 232-5533	SHIM - SPRING PLANK BRG	05272
B 232-5534	PAD - EQUALIZER SPRING	05272
B 232-5535	SHIM - SIDE BEARING BLOCK	05272
B 232-5536	LINER - CENTER PIN	05272
B 232-5537	TIE STRAP - PEDESTAL	05272
J 232-5538	BOLT - PEDESTAL TIE STRAP	05272
E 232-5539	PAD - BOLSTER SPRING	05272
C 232-5540	WEAR PLATE	05272
	END EQUIPEMNT INSTL	05272
	WHEEL AND AXLE ASSY	05272
	WEAR PAD ASSY - BUFFER SIDE	05272
	STEM	
C 232-5541	SIDE STEM ASSY - BUFFER	05272
B 232-5542	FRONT SPRING COLLAR	05272
B 232-5543	SPRING - BUFFER SIDE STEM	05272
F 232-5544	SIDE STEM ARRGT - BUFFER	05272
J 232-5545	BUFFER ASSY	05272
H 232-5546	PIPE CLAMP	05272
B 232-5547	PIPE CLAMP	05272
H 232-5548	PIPE BRACKET	05272
B 232-5549	PIPE PLUG 2 1/2 IN SPECIAL	05272
E 32-5550	SUPPORT - SAFETY SPRING	05272
C 232-5551	WEAR PAD ASSY - BUFFER SIDE	05272
	STEM	
B 232-5552	STOP - PLATE ASSY	05272
B 232-5553	STOP - PLATE	05272
232-5554	GUSSET - COUPLER STOP	05272
232-5555	BRACKET - DUMMY COUPLING	05272
	CHAIN	
232-5556	WEAR PLATE BOTTOM	05272
232-5557	TOP PLATE ASSY	05272
J 232-5558	FACE PLATE ASSY	05272
C 232-5559	TOP FACE PLATE	05272
232-5560	SIDE FACE PLATE	05272
232-5561	SIDE FACE PLATE	05272
232-5562	BOTTOM FACE PLATE	05272
C 232-5563	GUSSET - FACE PLATE	05272
C 232-5564	GUSSET - FACE PLATE	05272
232-5565	CORNER FACE PLATE	05272
232-5566	CORNER FACE PLATE	05272
232-5567	ANGLE FACE PLATE	05272
C 232-5568	DIAPHRAGM SUPPORT	05272
C 232-5569	DIAPHRAGM SUPPORT	05272
232-5570	DIAPHRAGM SUPPORT	05272
232-5571	DIAPHRAGM SUPPORT	05272
232-5572	PLATE FACE PLATE	05272

232-5573		GUSSET FACE PLATE	05272
232-5574		SPLICE - FACE PLATE	05272
232-5575		SPREADER - FACE PLATE	05272
232-5576		SPREADER - FACE PLATE	05272
232-5577		FILLER - FACE PLATE	05272
232-5578		BUMPER - FACE PLATE	05272
232-5579		ANGLE - FACE PLATE	05272
232-5580		STIFFENER - FACE PLATE	05272
232-5581		LUG - FACE PLATE	05272
232-5582		SIDE FACE PLATE	05272
232-5584		SIDE STEY BUFFER	05272
232-5585		BRACKET - END VALVE	05272
		OPERATING ROD	
E 232-5586		SHEET ASSY - END FRAME	05272
D 232-5587		SHEET - END FRAME	05272
232-5588		CONNECTION - END SHEET	05272
232-5589		CONNECTION - END SHEET	05272
232-5590		CONNECTION - END SHEET	05272
232-5591		CONNECTION - END SHEET	05272
232-5592		CONNECTION - END SHEET	05272
232-5593		STIFFENER - END SHEET	05272
232-5594		STIFFENER - END SHEET	05272
E 232-5596		STIFFENER - END SHEET	05272
E 232-5597		SHEET ASSY - END FRAME	05272
232-5598		SHEET END FRAME	05272
232-5599		CONNECTION - END SHEET	05272
D 232-5600		CONNECTION - END SHEET	05272
		SUPPORT ASSY - DRAFT GEAR	05272
J 232-5601		COMMAND CAR	
C 232-5602		BOLSTER ASSY	05272
		SIDE BEARING ASSY - COMMAND	05272
		CAR	
C 232-5603		BOLSTER SLEEVE ASSY -	05272
		COMMAND CAR	
J 232-5604		SLIDING CENTER SILL ASSY	05272
J 232-5605		CROSSBEARER ASSY	05272
D 232-5606		SUPPORT ASSY - RING	05272
		SPRING UNIT	
C 232-5607		TIE PLATE ASSY - SLIDING	05272
		CENTER SILL COMMAND CAR	
J 232-5608	1	UNDERFRAME - ARRANGEMENT	05272
J 232-5608	2	UNDERFRAME - ARRANGEMENT	05272
		SECTION AT BOLSTER	
J 232-5608	3	UNDERFRAME - ARRANGEMENT	05272
232-5609		ANGLE - FLOOR SUPPORT	05272
		CROSSBEARER	
232-5610		ANGLE - FLOOR SUPPORT	05272
		CROSSBEAR	
B 232-5611		ANGLE - FLOOR SUPPORT	05272
		CROSS BEARER	
B 232-5612		ANGLE - FLOOR SUPPORT	05272
		CROSSBEARER	
B 232-5613		ANGLE - FLOOR SUPPORT	05272
		CROSSBEARER	
B 232-5614		ANGLE - FLOOR SUPPORT	05272
		CROSSBEARER	

232-5613	TOP PLATE CROSSBEARER	05277
232-5614	BOTTOM PLATE - CROSS BEARER	05272
232-5617	WFR - CROSS BEARER	05272
232-5618	R/R - CROSS BEARER	05272
B 232-5620	BOTTOM COVER PLATE -	05272
	BOLSTER COMMAND CAR	
232-5621	WFR - BOLSTER	05272
232-5622	STIFFENER - SIDE BEARING	05272
	COMMAND CAR	
232-5623	JACKING PAD - COMMAND CAR	05272
232-5624	STIFFENER - JACKING PAD	05272
	COMMAND CAR	
B 232-5625	BASE - SIDE BEARING COMMAND	05272
	CAR	
B 232-5626	SIDE PLATE SIDE BEARING	05272
	COMMAND CAR	
B 232-5627	WEB PLATE - SIDE BEARING	05272
	COMMAND CAR	
232-5628	PLATE - TIE PLATE ASSY	05272
232-5629	WEAR PLATE - TIE PLATE	05272
	ASSY	
B 232-5630	TOP PLATE - BOLSTER SLEEVE	05272
B 232-5631	BOTTOM PLATE - BOLSTER	05272
	SLEEVE	
B 232-5632	TIE PLATE - BOTTOM DRAFT	05272
	GEAR POCKET	
B 232-5634	STOP SLIDING CENTER SILL	05272
B 232-5635	RETAINER DRAFT GEAR	05272
B 232-5636	BASE PLATE - RING SPRING	05272
B 232-5637	WEAR STRIP - RING SPRING	05272
232-5638	STIFFENER - CHANNEL RING	05272
	SPRING	
232-5639	BASE - DRAFT GEAR SUPT	05272
232-5640	WEAR PLATE - DRAFT GEAR	05272
232-5641	STIFFENER - DRAFT GEAR SUPT	05272
232-5642	GUSSET - WEAR PLATE SUPT	05272
	DRAFT GEAR	
232-5643	WEAR PLATE - DRAFT GEAR	05272
	SUPT	
232-5644	WEAR PLATE - SUPT DRAFT	05272
	GEAR	
232-5645	WEAR PLATE - SUPT DRAFT	05272
	GEAR	
232-5646	SHEAR LUG DRAFT GEAR -	05272
	FRONT	
232-5647	STOP - DRAFT GEAR FRONT	05272
	AND REAR	
232-5648	SHEAR LUG DRAFT GEAR - REAR	05272
232-5649	SHEAR LUG DRAFT GEAR - REAR	05272
D 232-5650	SIDE PLATE - SLIDING CENTER	05272
	SILL	
D 232-5651	SIDE PLATE - SUB ASSY	05272
	SLIDING SILL	
232-5652	STOP RING SPRING	05272
232-5653	GUSSET CENTER LOCKING PIN	05272

232-5654	STOP SUPPORT - BOTTOM RING	05272
232-5655	SPRING	
232-5656	STOP SUPPORT - TOP RING	05272
232-5657	SPRING	
D 232-5658	STIFFENER DRAFT GEAR SUPT	05272
	STIFFENER RING SPRING UNIT	05272
	SIDE PLATE - SLIDING	05272
	CENTER SILL	
D 232-5659	HOUSING ASSY - CENTER LOCK-	05272
	ING PIN	
232-5660	TIE PLATE - CENTER LOCKING	05272
	PIN	
232-5661	TUBE - BOTTOM CENTER	05272
	LOCKING PIN	
232-5662	TUBE - TOP CENTER LOCKING	05272
	PIN	
D 232-5663	CHANNEL - UPPER SLIDING	05272
	CENTER SILL	
232-5664	ANGLE - FLOOR SUPT BOLSTER	05272
232-5665	ANGLE - FLOOR SUPT BOLSTER	05272
	COMMAND CAR	
232-5666	ANGLE - FLOOR SUPT BOLSTER	05272
	COMMAND CAR	
232-5667	CHANNEL - SLIDING CENTER	05272
	SILL CARRIER	
232-5668	WEAR PLATE - SLIDING CENTER	05272
	SILL CARRIER	
232-5669	PLATE - SLIDING CENTER SILL	05272
	CARRIER	
232-5670	SUPPORT - END STEP	05272
232-5671	PLATE - SIDE CONNECTION	05272
	CENTER SILL CARRIER	
D 232-5672	CARRIER ASSY - SLIDING	05272
	CENTER SILL	
D 232-5673	CHANNEL - LOWER SLIDING	05272
	CENTER SILL	
232-5674	GUIDE - SIDE STEM	05272
232-5675	SPACER - SIDE STEM	05272
232-5676	CHANNEL - SUPPORT END	05272
	BUFFER	
232-5677	SPLICE - PLATE CENTER SILL	05272
232-5678	SUPPORT - SIDE STEM	05272
232-5679	SUPPORT - SIDE STEM	05272
232-5680	WASHER - BOTTOM COUPLER	05272
	CARRIER	
232-5681	WASHER - TOP COUPLER	05272
	CARRIER	
232-5682	SUPPORT - END WELDMENT	05272
232-5683	SUPPORT - END WELDMENT	05272
J 232-5684	CENTER SILL ZEE	05272
J 232-5685	CENTER SILL ZEE	05272
232-5686	CENTER SILL ASSY - COMMAND	05272
	CAR	
232-5687	WEAR STRIP AT CROSSTIE	05272
232-5688	WEAR STRIP AT CROSSBEARER	05272

B 232-5689	WEAR STRIP ON BOLSTER	05272
B 232-5690	TIE PLATE AT CROSSTIES	05272
B 232-5691	TIE PLATE - TOP CROSSTIES	05272
B 232-5692	TIE PLATE - TOP CROSSTIES	05272
B 232-5693	FILLER - CENTER SILL	05272
B 232-5694	FILLER - CENTER SILL	05272
B 232-5695	REINFORCEMENT - SLIDING CENTER SILL	05272
B 232-5696	SPACER - UPPER SLIDING CENTER SILL	05272
B 232-5697	GUSSET - CENTER LOCKING PIN	05272
B 232-5698	TIE PLATE - SLIDING CENTER SILL	05272
B 232-5699	GUSSET - SLIDING CENTER SILL	05272
B 232-5702	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5703	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5704	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5705	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5706	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5707	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5708	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5709	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5710	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5711	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5712	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5713	ANGLE - FLOOR SUPPORT CENTER SILL	05272
B 232-5714	SPACER - UPPER SLIDING CENTER SILL	05272
B 232-5715	SPACER - UPPER SLIDING CENTER SILL	05272
232-5716	SPACER - LOWER SLIDING CENTER SILL	05272
232-5717	SPACER - LOWER SLIDING CENTER SILL	05272
232-5718	STOP - CENTER SILL	05272
D 232-5719	SIDE PLATE - SLIDING CENTER SILL	05272
D 232-5720	SIDE PLATE - SLIDING CENTER SILL	05272
232-5721	CROSSTIE	05272
232-5722	CROSSTIE	05272
232-5723	FLOOR STRINGER	05272

232-5724	FLOOR STRINGER	05272
232-5725	FILLER AT BOLSTER	05272
232-5726	SUPPORT - SLIDING SILL	05272
	CARRIER ASSY	
B 232-5727	SHIM AT CROSSBEAM	05272
B 232-5728	SHIM AT RING SPRING	05272
B 232-5729	SHIM AT CROSSTIE	05272
B 232-5730	SHIM AT BOLSTER	05272
232-5731	FLOOR STRINGER	05272
B 232-5732	FLOOR STRINGER	05272
B 232-5733	FLOOR STRINGER	05272
B 232-5734	FLOOR STRINGER	05272
B 232-5735	FLOOR STRINGER	05272
B 232-5736	FLOOR STRINGER	05272
232-5737	BOTTOM FLANGE SIDE SILL	05272
	REINFORCEMENT	
232-5738	SUPPORT - END SILL	05272
B 232-5739	FLOOR STRINGER	05272
B 232-5740	FLOOR SUPPORT END SILL	05272
B 232-5741	FLOOR SUPPORT END SILL	05272
B 232-5744	FLOOR STRINGER	05272
C 232-5745	END SILL	05272
C 232-5746	END SILL	05272
C 232-5747	END SILL	05272
B 232-5749	FLOOR STRINGER	05272
B 232-5750	ANGLE - FLOOR SUPPORT	05272
	CENTER SILL	
B 232-5751	ANGLE - FLOOR SUPPORT	05272
	CENTER SILL	
D 232-5752	SHEET ASSY - FALSE FLOOR	05272
C 232-5753	SHEET FALSE FLOOR	05272
232-5754	SUPPORT - FALSE FLOOR	05272
C 232-5755	SHEET ASSY - FALSE FLOOR	05272
C 232-5756	SHEET - FALSE FLOOR	05272
232-5758	SUPPORT - FALSE FLOOR	05272
C 232-5759	SHEET ASSY - FALSE FLOOR	05272
C 232-5760	SHEET FALSE FLOOR	05272
B 232-5761	SUPPORT - FALSE FLOOR	05272
C 232-5762	SHEET ASSY - FALSE FLOOR	05272
C 232-5763	SHEET FALSE FLOOR	05272
B 232-5764	SUPPORT - FALSE FLOOR	05272
C 232-5765	SHEET ASSY - FALSE FLOOR	05272
C 232-5766	SHEET - FALSE FLOOR	05272
B 232-5767	SUPPORT - FALSE FLOOR	05272
C 232-5768	SHEET FALSE FLOOR	05272
C 232-5769	SHEET FALSE FLOOR	05272
C 232-5770	SHEET FALSE FLOOR	05272
C 232-5771	SHEET FALSE FLOOR	05272
B 232-5772	CROSS TIE END SILL	05272
B 232-5774	ANCHOR - STEAM TRAINLINE	05272
B 232-5775	FLOOR STRINGER	05272
B 232-5776	FLOOR STRINGER	05272
B 232-5777	FLOOR STRINGER	05272
B 232-5779	FLOOR STRINGER	05272
B 232-5780	FLOOR STRINGER	05272

3 232-5781
 3 232-5782
 J 232-5783
 J 232-5784
 D 232-5785
 D 232-5786
 232-5787
 D 232-5788
 B 232-5789
 B 232-5790
 B 232-5791
 B 232-5792
 B 232-5793
 B 232-5794
 C 232-5795
 C 232-5796
 B 232-5797
 B 232-5798
 B 232-5799
 F 232-5800
 D 232-5801
 B 232-5802
 B 232-5803
 B 232-5804
 H 232-5805
 B 232-5806
 B 232-5807
 E 232-5808
 C 232-5809
 C 232-5810
 C 232-5811
 B 232-5812
 B 232-5813
 B 232-5814
 232-5815
 F 232-5816
 C 232-5817
 C 232-5818
 C 232-5819
 232-5820
 232-5821
 232-5822
 232-5823
 E 232-5825
 B 232-5826
 D 232-5827

FLOOR STRINGER	05272
FLOOR STRINGER	05272
CHANNEL - SIDE SILL	05272
REINFORCEMENT	
CHANNEL - SIDE SILL	05272
REINFORCEMENT	
COUPLER CARRIER ASSY	05272
COUPLER CARRIER	05272
WEAR PLATE - COUPLER	05272
CARRIER	
WEAR PLATE - COUPLER	05272
CARRIER	
CLOSURE - BOLSTER TOP COVER	05272
BOLT - COUPLER CARRIER	05272
SPRING	
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
SUPPORT - TIE DOWN RAIL	05272
DAM ASSY - HAND BRAKE	05272
CENTER - HANDBRAKE DAM	05272
SIDE HANDBRAKE DAM	05272
SIDE HANDBRAKE DAM	05272
ANGLE - HANDBRAKE DAM	05272
ANGLE - HANDBRAKE DAM	05272
PLATE - HANDBRAKE DAM	05272
PLATE - HANDBRAKE DAM	05272
POST ASSY - DIAPHRAGM	05272
POST DIAPHRAGM	05272
POST - DIAPHRAGM	05272
POST - DIAPHRAGM	05272
PLATE - DIAPHRAGM POST	05272
PLATE - DIAPHRAGM POST	05272
BRACKET - DIAPHRAGM POST	05272
PLATE - DIAPHRAGM POST	05272
FRAME ASSY - END DOOR	05272
HOPPER CHUTE ASSY	05272
OUTLET - FLANGED HOPPER	05272
CHUTE ASSY	
RACEWAY - END DOOR FRAME	05272
FRAME INSIDE END DOOR	05272
FILLER - RACEWAY END DOOR	05272
FRAME	
PLATE - TAP END DOOR GRAB	05272
HANDLE	
CLOSURE - RACEWAY END DOOR	05272
FRAME	
CAPPING ASSY - CORNER POST	05272
CAPPING - CORNER POST	05272
CAPPING - CORNER POST	05272

232-5828	FILLER - CORNER POST	05272
232-5829	CAPPING	
232-5830	FILLER - CORNER POST	05272
232-5831	CAPPING	
232-5832	TAP PLATE - CORNER CAP	05272
	TAP PLATE - CORNER CAP	05272
	THRESHOLD ASSY - END DOOR	05272
	LOWER	
232-5833	THRESHOLD - END DOOR	05272
B 232-5834	PLATE - END DOOR THRESHOLD	05272
B 232-5835	FILLER - END DOOR THRESHOLD	05272
B 232-5836	FILLER - END DOOR THRESHOLD	05272
B 232-5837	PURLINE END	05272
D 232-5838	PURLINE END	05272
B 232-5839	PURLINE INTERMEDIATE	05272
B 232-5840	PURLINE INTERMEDIATE	05272
B 232-5841	PURLINE TYPICAL	05272
B 232-5842	PURLINE TYPICAL	05272
B 232-5844	PURLINE CENTER	05272
D 232-5845	ROOF SHEET END	05272
D 232-5846	ROOF SHEET INTERMEDIATE	05272
D 232-5848	ROOF SHEET TYPICAL	05272
J 232-5849	ANGLE - SIDE PLATE TOP	05272
J 232-5850	ANGLE SIDE PLATE TOP	05272
B 232-5851	WEAR PAD	05272
B 232-5852	SUPPORT - WEAR PAD	05272
B 232-5854	SHIM WEAR PAD	05272
B 232-5855	RETAINER - WEAR PAD	05272
B 232-5856	SHIM WEAR PAD	05272
B 232-5857	WEAR PAD	05272
I 232-5858	SUPPORT - WEAR PAD	05272
C 232-5860	RETAINER ASSY - DIAPHRAGM	05272
	AT END FRAME	
B 232-5861	RETAINER - DIAPHRAGM	05272
B 232-5862	RETAINER - DIAPHRAGM	05272
B 232-5863	RETAINER - DIAPHRAGM	05272
B 232-5864	RETAINER - DIAPHRAGM	05272
C 232-5865	RETAINER ASSY - DIAPHRAGM	05272
	AT FACE PLATE	
B 232-5866	RETAINER - DIAPHRAGM	05272
232-5867	RETAINER - DIAPHRAGM	05272
B 232-5868	RETAINER - DIAPHRAGM	05272
B 232-5869	RETAINER - DIAPHRAGM	05272
C 232-5870	THRESHOLD ASSY - REMOVABLE	05272
B 232-5871	ANGLE - THRESHOLD	05272
B 232-5872	BOTTOM PLATE	05272
B 232-5873	ANGLE - THRESHOLD	05272
B 232-5874	SPACER - THRESHOLD	05272
B 232-5875	ANGLE - END CLOSURE	05272
232-5876	ANGLE - END CLOSURE	05272
C 232-5877	DOOR SILL ASSY	05272
C 232-5878	DOOR SILL	05272
B 232-5879	TAP PLATE - DOOR SILL	05272
C 232-5880	SIDE POST	05272
C 232-5881	SIDE POST	05272

C 232-5882
C 232-5883
C 232-5884

SIDE POST - DOOR FRAME 05272
SIDE POST DOOR FRAME 05272
PLATE - SIDE DOOR REINFORCEMENT 05272

C 232-5885
C 232-5886
B 232-5887
B 232-5888
C 232-5889
B 232-5890
B 232-5891
B 232-5892
232-5893
B 232-5894
B 232-5895
C 232-5896
B 232-5897
B 232-5898
B 232-5899
B 232-5900
B 232-5901
B 232-5902

GUSSET - SIDE DOOR REINF 05272
GUSSET - SIDE DOOR REINF 05272
SIDE SHEET 05272
SIDE SHEET 05272
SIDE SHEET 05272
SIDE SHEET 05272
SIDE SHEET 05272
SIDE SHEET 05272
SIDE SHEET 05272
SIDE SHEET 05272
SHEET - DOOR HEADER 05272
BOTTOM SHEET DOOR 05272
ANGLE - SIDE DOOR POST 05272
SPACER - SIDE DOOR POST 05272
SPACER - TOPWEAR PLATE 05272
WEAR PLATE - TOP 05272
SUPPORT - STEAM COUPLER SPRING 05272

J 232-5903

DIAPHRAGM AND FACE - PLATE ARRANGEMENT 05272

B 232-5904

PLATE - WEAR HANDBRAKE CYLINDER LEVER 05272

B 232-5905

SPACER AT DOOR OPENING 05272

C 232-5939

SWING HANGER BEARING 05272

B 232-5944

SUPPORT - E-3 BRAKE VALVE 05272

232-5945

CLAMP - SUPPORT BRAKE CYLINDER 05272

B 232-5946

CLAMP - BRAKE CYLINDER 05272

C 232-5947

CLAMP SUPPORT STEAM TRAINLINE 05272

B 232-5948

CLAMP - STEAM TRAINLINE 05272

B 232-5949

CLAMP - STEAM TRAINLINE 05272

B 232-5950

CLAMP - STEAM TRAINLINE 05272

B 232-5951

CLAMP - SUPPORT STEAM TRAINLINE 05272

B 232-5952

PIPE - SUPPORT BRANCH TEE 05272

B 232-5953

PIPE - SUPPORT BRANCH TEE 05272

C 232-5954

SUPPORT - A-1-A VALVE 05272

C 232-5955

SIDE SHEET 05272

C 232-5956

SIDE SHEET 05272

232-5957

SIDE SHEET 05272

B 232-5958

SPACER - SIDE SILL 05272

B 232-5959

SIDE SHEET 05272

B 232-5960

SIDE SHEET 05272

B 232-5961

SIDE STREET 05272

B 232-5962

SPACER - POST 05272

J 232-5963

ANGLE SIDE SILL 05272

J 232-5964

ANGLE SIDE SILL 05272

232-5967

CLAMP - BRAKE AND SIGNAL PIPE 05272

B 232-5968	SUPPORT ASSY - BRAKE AND SIGNAL PIPE	05272
B 232-5969	CLAMP - SUPPORT BRAKE AND SIGNAL PIPE	05272
B 232-5970	SPACER - BRAKE AND SIGNAL PIPE	05272
B 232-5971	HOOD SHEET - UPPER END FRAME	05272
B 232-5972	END SHEET - CENTER	05272
B 232-5973	CLOSURE - FOOT PLATE	05272
B 232-5974	CLOSURE - FOOT PLATE	05272
C 232-5975	END SHEET - UPPER	05272
C 232-5976	END SHEET - UPPER	05272
A 232-5977	SUPPORT ASSY - BRAKE AND SIGNAL PIPE	05272
B 232-5978	CLAMP SUPPORT BRAKE AND SIGNAL PIPE	05272
D 232-5981	CORNER POST END FRAME	05272
B 232-5982	ANGLE - HAND BRAKE SUPPORT	05272
B 232-5983	ANGLE - HAND BRAKE SUPPORT	05272
B 232-5984	HEADER - END DOOR INNER	05272
B 232-5985	HEADER - END DOOR OUTER	05272
D 232-5986	HEADER ASSY - END DOOR	05272
B 232-5992	SPACER - ROOF SH TO SIDE SH	05272
B 232-5993	SPACER - ROOF SH TO SIDE SH	05272
B 232-5994	SPACER - ROOF SH TO SIDE SH	05272
B 232-5995	SPACER - ROOF SH TO SIDE SH	05272
B 232-5996	SPACER - ROOF SH TO SIDE SH	05272
B 232-5997	SPACER - ROOF SH TO SIDE SH	05272
B 232-5998	SPACER - ROOF SH TO SIDE SH	05272
232-6000	HOOD SHEET LOWER END FRAME	05272
C 232-6001	CLOSURE - UPPER END FRAME	05272
C 232-6003	POST - DIAPHRAGM	05272
D 232-6004	CORNER POST END FRAME	05272
B 232-6005	CONNECTION - CORNER POST	05272
B 232-6007	BRACKET - COMBINED CONTROL AND SELECTOR VOLUME RESERVOIR	05272
D 232-6008	THRESHOLD ASSY - END DOOR UPPER	05272
B 232-6009	PLATE - BUFFER SPRING BRACKET	05272
B 232-6010	BRACKET - BUFFER SPRING	05272
B 232-6011	CLOSURE - END DOOR THRESHOLD	05272
C 232-6012	ANTI-TELESCOPING CHANNEL END FRAME	05272
C 232-6013	CRIPPLE POST ASSY	05272
C 232-6014	POST - CRIPPLE END FRAME	05272
B 232-6015	HEADER ANGLE - END DOOR	05272
C 232-6016	STOP - DOOR SEAL	05272
B 232-6017	BRACKET - ANTI-TELESCOPING PLATE	05272
B 232-6018	POST - INTERMEDIATE AT HANDBRAKE	05272

C 232-6019	POST - INTERMEDIATE END FRAME	05272
B 232-6020	FILLER - END DOOR HEADER	05272
B 232-6021	FILLER AT INTERMEDIATE POST	05272
B 232-6022	BRACKET - ANTI-TELESCOPING PLATE	05272
B 232-6023	ANGLE - END DOOR THRESHOLD	05272
C 232-6024	POST - INTERMEDIATE END FRAME	05272
B 232-6025	ANGLE - THRESHOLD CLOSURE	05272
C 232-6026	THRESHOLD END DOOR - UPPER	05272
B 232-6027	PLATE - THRESHOLD CLOSURE	05272
B 232-6028	FILLER - HANDBRAKE PAN	05272
C 232-6029	POST - CRIPPLE END FRAME	05272
B 232-6030	TAP PLATE - STEP	05272
C 232-6031	SIDE SHEET	05272
C 232-6033	SIDE SHEET	05272
C 232-6034	SIDE SHEET	05272
C 232-6035	SIDE SHEET	05272
C 232-6036	SIDE SHEET	05272
J 232-6037	ANGLE SIDE PLATE	05272
J 232-6038	ANGLE SIDE PLATE	05272
D 232-6039	DOOR FRAME SIDE	05272
D 232-6040	DOOR FRAME SIDE	05272
D 232-6041	DOOR - FRAME TOP	05272
B 232-6042	SPACER - SIDE PLATE	05272
B 232-6043	SPACER - SIDE PLATE	05272
B 232-6044	SPACER - SIDE PLATE	05272
B 232-6045	SPACER - SIDE PLATE	05272
B 232-6046	SPACER - SIDE PLATE	05272
232-6047	SPACER - SIDE PLATE	05272
232-6048	SPACER - SIDE PLATE	05272
B 232-6049	SPACER - SIDE PLATE	05272
B 232-6050	SPACER - SIDE PLATE	05272
B 232-6051	SPACER - SIDE SILL	05272
B 232-6052	SPACER - SIDE SILL	05272
B 232-6053	SPACER - SIDE SILL	05272
B 232-6054	SPACER - SIDE SILL	05272
B 232-6055	SPACER - SIDE SILL	05272
B 232-6056	SPACER - SIDE SILL	05272
B 232-6057	SPACER - SIDE SILL	05272
C 232-6058	STOP - DOOR SEAL	05272
D 232-6059	SUPPORT DOOR	05272
C 232-6060	STOP - DOOR SEAL	05272
F 232-6061	FRAME ASSY - END DOOR	05272
D 232-6064	FRAME ASSY - OUTSIDE END DOOR	05272
B 232-6065	PIPE VENT - SEWAGE TANK	05272
B 232-6066	LUG - CASTING SIDE ACCESS PANEL AND EMERGENCY DOOR INSTL	05272
C 232-6067	FRAME ASSY - INSIDE END DOOR	05272
D 232-6068	RACEWAY ASSY - END DOOR	05272
B 232-6069	WINDOW - EMERGENCY AND END DOOR	05272

B 232-6071	FRAME - OUTSIDE END DOOR	05272
B 232-6074	FILLER - RACEWAY END DOOR	05272
	FRAME	
B 232-6075	TAP PLATE - END DOOR HINGE	05272
B 232-6076	BOLT - UPPER BUFFER SPRING	05272
C 232-6077	FOOT PLATE ASSY	05272
B 232-6078	RING FOOT PLATE	05272
B 232-6079	PLATE - BEARING SUPPORT	05272
	FOOT PLATE	
B 232-6080	BEARING - PIVOT FOOT PLATE	05272
B 232-6081	BEARING - SUPPORT ASSY FOOT	05272
	PLATE	
C 232-6082	FOOT PLATE - THRESHOLD END	05272
	DOOR	
E 232-6083	FOOT PLATE ARRANGEMENT	05272
D 232-6084	RACEWAY ASSY - END DOOR	05272
B 232-6085	ROD - UNCOUPLING MECHANISM	05272
	HANDLE	
B 232-6086	HANDLE - UNCOUPLING ROD	05272
C 232-6087	HANDLE ASSY - UNCOUPLING	05272
	MECHANISM	
C 232-6088	SUPPORT ASSY - UNCOUPLING	05272
	MECHANISM	
B 232-6089	PLATE - BASE UNCOUPLING	05272
	MECHANISM SUPPORT	
B 232-6090	PLATE ASSY - SIDE	05272
	UNCOUPLING MECHANISM SUP	
B 232-6091	PLATE - SIDE UNCOUPLING	05272
	MECHANISM SUPPORT	
B 232-6092	PAD - ANTI RATTLE UNCOUP-	05272
	LING MECHANISM	
B 232-6093	PLATE - ANCHOR UNCOUPLING	05272
	MECHANISM SUPPORT	
232-6094	PLATE - RETAINER UNCOUPLING	05272
	MECHANISM SUPPORT	
232-6095	PLATE - ANTI-TWIST-	05272
	UNCOUPLING MECHANISM	
	SUPPORT	
232-6096	TRIM - WINDOW EMERGENCY	05272
	DOOR	
232-6097	TRIM - WINDOW EMERGENCY	05272
	DOOR	
232-6098	LOCK BOLT - CYLINDER LEVER	05272
	PIN	
J 232-6099	SIDE ACCESS PANEL	05272
232-6100	OUTER SKIN - SIDE ACCESS	05272
	PANEL	
232-6101	OUTER SKIN - SIDE ACCESS	05272
	PANEL	
C 232-6102	OUTER SKIN - SIDE ACCESS	05272
	PANEL RH LIFTING LUG	
C 232-6103	OUTER SKIN - SIDE ACCESS	05272
	PANEL	
C 232-6104	FRAME REINFORCEMENT AT	05272
	LIFTING LUG LH SIDE	
	ACCESS PANEL	

C 232-6105
C 232-6106

C 232-6107

D 232-6108

D 232-6109

D 232-6110

D 232-6111

232-6112

232-6113

232-6114

232-6115

232-6116

232-6117

232-6118

232-6119

D 232-6120

232-6121

B 232-6122

F 232-6123

B 232-6124

B 232-6125

B 232-6126

B 232-6127

B 232-6128

B 232-6129

B 232-6130

C 232-6131

C 232-6132

B 232-6133

C 232-6134

C 232-6135

B 232-6136

B 232-6137

B 232-6138

B 232-6139

RIB - SIDE ACCESS PANFL	05272
FRAME REINFORCEMENT AT	05272
LIFTING LUG RH SIDE	
ACCESS PANEL	
POCKET - LIFTING BAR SIDE	05272
ACCESS PANEL	
FRAME ASSY - RH SIDE ACCESS	05272
PANFL	
FRAME ASSY - LH SIDE ACCESS	05272
PANFL	
FRAME ASSY - LOWER SIDE	05272
ACCESS PANEL	
FRAME ASSY - UPPER SIDE	05272
ACCESS PANEL	
RIB - SIDE ACCESS PANFL	05272
RIB - SIDE ACCESS PANFL	05272
RIB - SIDE ACCESS PANFL	05272
SIDE FRAME - RH SIDE ACCESS	05272
PANFL	
SIDE FRAME - LH SIDE ACCESS	05272
PANFL	
LOWER FRAME - SIDE ACCESS	05272
PANFL	
UPPER FRAME - SIDE ACCESS	05272
PANFL	
RIVET - TRUCK PEDestal	05272
DOOR - FRAME TOP	05272
TUBE ASSY - UNCOUPLING	05272
MECHANISM	
TUBE - UNCOUPLING MECHANISM	05272
WASHER - UNCOUPLING	05272
MECHANISM	
ROD ASSY - OPERATING END	05272
VALVE	
ROD - OPERATING END VALVE	05272
CLEVIS - END VALVE	05272
OPERATING CONNECTION	
SHAFT ASSY - OPERATING END	05272
VALVE	
SHAFT - OPERATING END VALVE	05272
SUPPORT - END VALVE	05272
OPERATIONS ROD	
SUPPORT - END VALVE	05272
BRACKET ASSY - SLIDING END	05272
VALVE SUPPORT	
PLATE - END VALVE SUPPORT	05272
ANGLE - END VALVE SUPPORT	05272
PANEL - RAISED FLOOR	05272
SUPPORT ASSY - SIGNAL	05272
AND BRAKE PIPES	
YOKE SIGNAL AND BRAKE PIPE	05272
SUPPORT	
BRACKET - SUPPORT ASSY	05272
GUSSET - SUPPORT ASSY	05272
SPRING - ASSY FOOT PLATE	05272

B 232-6140
 B 232-6141
 B 232-6142
 B 232-6143
 B 232-6144
 B 232-6145
 B 232-6150
 D 232-6151
 B 232-6152
 B 232-6153
 C 232-6154
 B 232-6155
 B 232-6156
 C 232-6157
 B 232-6158
 B 232-6159
 C 232-6160
 B 232-6161
 B 232-6163
 B 232-6164
 232-6165
 B 232-6166
 C 232-6167
 C 232-6168
 B 232-6169
 B 232-6170
 B 232-6171
 D 232-6172
 D 232-6173
 B 232-6174
 B 232-6175
 C 232-6176
 B 232-6177
 232-6179
 B 232-6181
 B 232-6182
 C 232-6183
 B 232-6184

RAIL - TIE DOWN	05272
RETAINER - GASKET SIDE	05272
ACCESS PANEL	
RETAINER - GASKET SIDE	05272
ACCESS PANEL	
RETAINER - GASKET SIDE	05272
ACCESS PANEL	
RETAINER - GASKET SIDE	05272
ACCESS PANEL	
RETAINER - GASKET SIDE	05272
ACCESS PANEL	
SEAL - WINDOW EMERGENCY AND	05272
END DOORS	
SUPPORT - DOOR	05272
ROD - UNCOUPLING MECHANISM	05272
TAP STRIP - FRAME ASSY SIDE	05272
ACCESS PANEL	
RIB - SIDE ACCESS PANEL	05272
TAP STRIP - FRAME ASSY SIDE	05272
ACCESS PANEL	
PIN - UNCOUPLING MECHANISM	05272
DUMMY COUPLER ASSY	05272
LINK - DUMMY COUPLER CHAIN	05272
RING - DUMMY COUPLER CHAIN	05272
CHAIN ASSY - STEAM CONDUIT	05272
SAFETY HANGER	
RING - STEAM CONDUIT SAFETY	05272
HANGER CHAIN	
HOOK - SMALL STEAM CONDUIT	05272
SAFETY HANGER CHAIN	
LIFTING BAR - SIDE ACCESS	05272
PANEL	
HAND BRAKE ARRANGEMENT	05272
BRACKET - SHEAVE HAND BRAKE	05272
AT CENTER SILL	
BRACKET - SHEAVE HAND BRAKE	05272
AT END SILL	
GUIDE ASSY - HAND BRAKE	05272
BRACKET - GUIDE HAND BRAKE	05272
PAD - FABREEKA HAND BRAKE	05272
PAD - FABREEKA HAND BRAKE	05272
GUIDE ASSY - HAND BRAKE	05272
BRACKET - GUIDE HAND BRAKE	05272
PAD - FABREEKA HAND BRAKE	05272
PAD - FABREEKA HAND BRAKE	05272
ROD ASSY - HAND BRAKE	05272
STEP END SILL	05272
RAIL - TIE DOWN	05272
SUPPORT - SIDE ASSY TIE	05272
DOWN RAIL	
SUPPORT - SIDE ASSY TIE	05272
DOWN RAIL	
SUPPORT - SIDE ASSY TIE	05272
DOWN RAIL	
GUIDE - SUPPORT HAND BRAKE	05272

B 232-6185
 J 232-6186
 B 232-6187
 B 232-6188
 B 232-6189
 C 232-6190
 B 232-6191
 B 232-6192
 C 232-6193
 B 232-6194
 B 232-6195
 B 232-6196
 B 232-6197
 B 232-6198
 B 232-6199
 B 232-6200
 B 232-6201
 B 232-6202
 B 232-6203
 B 232-6204
 B 232-6205
 B 232-6206
 B 232-6207
 B 232-6208
 B 232-6209
 B 232-6210
 B 232-6211
 B 232-6212
 B 232-6213
 B 232-6214
 B 232-6215
 B 232-6216
 D 232-6217
 B 232-6218
 C 232-6219
 C 232-6220
 C 232-6221
 D 232-6222
 D 232-6223
 D 232-6224
 D 232-6225
 D 232-6226
 D 232-6227
 D 232-6228
 D 232-6229
 232-6230
 232-6231
 232-6232
 C 232-6233
 232-6234
 232-6235
 232-6236
 232-6237
 232-6238
 232-6239

PAD - FARRERKA HAND BRAKE	05272
SKIRT ARRANGEMENT	05272
SKIRT PANEL	05272
BRACKET - SKIRT MTG	05272
INCLOSURE END SILL STOP	05272
STIFFENER - SKIRT SUPPORT	05272
STIFFENER - SKIRT SUPPORT	05272
SUPPORT - SKIRT STIFFENER	05272
SKIRT PANEL	05272
STIFFENER - SKIRT SUPPORT	05272
STIFFENER - SKIRT SUPPORT	05272
STIFFENER - SKIRT PANEL	05272
STIFFENER - SKIRT PANEL	05272
STIFFENER - SKIRT PANEL	05272
STIFFENER - SKIRT PANEL	05272
STIFFENER - SKIRT DOOR	05272
STIFFENER - SKIRT PANEL	05272
STIFFENER - SKIRT PANEL	05272
SKIRT PANEL	05272
SKIRT PANEL	05272
SKIRT PANEL	05272
SUPPORT - SKIRT STIFFENER	05272
SUPPORT - SKIRT STIFFENER	05272
SUPPORT - SKIRT STIFFENER	05272
SUPPORT - SKIRT STIFFENER	05272
STIFFENER - SKIRT PANEL	05272
PLATE - END SILL	05272
DOOR SKIRT PANEL	05272
SUPPORT - SKIRT STIFFENER	05272
SUPPORT - SKIRT STIFFENER	05272
SUPPORT - SKIRT STIFFENER	05272
SUPPORT - SKIRT STIFFENER	05272
SKIRT PANEL	05272
SKIRT PANEL	05272
SKIRT PANEL	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL ASSY	05272
STIFFENER - SKIRT PANEL	05272
SUPPORT SKIRT STIFFENER	05272
STIFFENER - SKIRT PANEL	05272
ANGLE - SKIRT MOUNTING	05272
DOOR SKIRT PANEL	05272
STOP - DOOR SKIRT PANEL	05272
HINGE ASSY - DOOR	05272
BRACKET - DOOR STOP	05272
SCREEN - SKIRT PANEL	05272
STIFFENER - SKIRT SUPPORT	05272

232-6240	SKIRT PANEL	05272
232-6241	TAP PLATE	05272
B 232-6242	STIFFENER - SKIRT PANEL	05272
B 232-6243	SUPPORT - SKIRT STIFFENER	05272
232-6244	SUPPORT - SKIRT STIFFENER	05272
232-6245	SKIRT PANEL	05272
C 232-6246	SKIRT PANEL	05272
B 232-6247	TAP PLATE	05272
B 232-6248	STIFFENER	05272
B 232-6249	SUPPORT - SKIRT STIFFENER	05272
C 232-6250	ANGLE ASSY - SKIRT MOUNTING	05272
C 232-6251	ANGLE ASSY - SKIRT MOUNTING	05272
B 232-6252	SKIRT PANEL	05272
C 232-6253	SKIRT PANEL ASSY	05272
B 232-6254	SKIRT PANEL	05272
B 232-6255	STIFFENER - SKIRT SUPPORT	05272
232-6256	STIFFENER - SKIRT SUPPORT	05272
232-6257	HINGE ASSY - DOOR	05272
232-6258	TAP PLATE	05272
232-6259	TAP PLATE	05272
232-6260	SPACER - SKIRT PANEL	05272
232-6261	RETAINER - INSULATION	05272
	CENTER SILL	
232-6262	RETAINER - INSULATION	05272
	CENTER SILL	
232-6263	RETAINER - INSULATION	05272
	CENTER SILL	
J 232-6264	INSULATION ARRGT STATIONARY	05272
	CENTER SILL	
232-6265	ANCHOR - INSULATION	05272
	RETAINING WIRE	
232-6266	TIE ANGLE - TIE DOWN RAIL	05272
	SUPT	
232-6267	ANGLE - FLOOR SUPT	05272
	CROSSBEARER	
232-6268	ANGLE - FLOOR SUPT	05272
	CROSSBEARER	
232-6269	ANGLE - FLOOR SUPPORT	05272
	CROSSBEARER	
232-6271	ANGLE - FLOOR SUPPORT	05272
	CROSSBEARER	
232-6272	ANGLE - FLOOR SUPPORT	05272
	ROLSTER	
232-6273	FILLER - TIE DOWN RAIL	05272
232-6274	FILLER - TIE DOWN RAIL	05272
232-6275	FILLER - TIE DOWN RAIL	05272
J 232-6276	FALSE FLOOR INST BUFFER	05272
	SPRING AREA U	
	COMMAND CAP	
D 232-6277	HAT BUFFER SPRING	05272
D 232-6278	HAT BUFFER SPRING	05272
C 232-6279	END - FALSE FLOOR SHEET AT	05272
	BUFFER SPRING	
232-6280	SUPPORT - FALSE FLOOR SHEET	05272
232-6281	CLOSURE HAT - BUFFER SPRING	05272

232-6282	CLOSURE HAT - BUFFER SPRING	05272
232-6283	STRIP - FALSE FLOOR	05272
232-6284	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
(12-6285	SUPPORT - SIDE TIE DOWN	05272
	RAIL	
C 232-6286	OUTLET - STRAIGHT HOPPER	05272
	CHUTE ASSY	
C 232-6287	BRACKET - WATER RAISING	05272
	RESERVOIR	
C 232-6288	PANEL - RAISED FLOOR	05272
232-6289	SUPPORT - SIDE ASSY TIE	05272
	DOWN RAIL	
B 232-6290	ANGLE - SUPPORT WATER AND	05272
	AIR TUBES	
B 232-6294	FILLER - SUPPORT ASSY	05272
	SIGNAL AND BRAKE PIPES	
C 232-6297	BRACKET WATER AND AIR TUBES	05272
C 232-6298	END - FALSE FLOOR SHEET AT	05272
	BUFFER SPRING	
B 232-6299	SUPPORT - FALSE FLOOR SHEET	05272
B 232-6300	ROD - HAND BRAKE	05272
B 232-6301	ROD - END HAND BRAKE	05272
B 232-6302	ROD - END HAND BRAKE	05272
C 232-6304	END PLATE - ENCLOSURE WATER	05272
	TANK	
D 232-6305	END PLATE ASSY - ENCL	05272
	WATER TANK	
B 232-6306	STIFFENER - SKIRT PANEL	05272
B 232-6307	STIFFENER - SKIRT PANEL	05272
232-6308	BRACKET - SKIRT MOUNTING -	05272
	SEWAGE TANK	
C 232-6309	FRONT PLATE ASSY - FUEL	05272
	FILL TROUGH	
232-6310	PLATE - SKIRT POST	05272
C 232-6311	CENTER POST - SKIRT PANEL	05272
C 232-6312	CENTER POST - SKIRT PANEL	05272
C 232-6313	CENTER POST - SKIRT PANEL	05272
C 232-6314	CENTER POST ASSY - SKIRT	05272
	PANFL	
C 232-6315	CENTER POST ASSY - SKIRT	05272
	PANFL	
C 232-6316	CENTER POST ASSY - SKIRT	05272
	PANFL	
C 232-6317	ANGLE - SKIRT MTG	05272
C 232-6318	ANGLE - SKIRT MTG	05272
C 232-6319	ANGLE - SKIRT MTG	05272
C 232-6320	ANGLE - SKIRT MTG	05272
C 232-6321	ANGLE - SKIRT MOUNTING	05272
C 232-6322	ANGLE - SKIRT MTG	05272
C 232-6323	ANGLE - SKIRT MTG	05272
D 232-6324	ANGLE - SKIRT MTG	05272
D 232-6325	ANGLE SKIRT MOUNTING	05272
D 232-6326	ANGLE SKIRT MTG	05272
232-6327	STIFFENER - SKIRT PANEL	05272

232-6328
 C 232-6329
 C 232-6330
 C 232-6331
 C 232-6332
 D 232-6333
 D 232-6334
 D 232-6335
 232-6336
 C 232-6337
 D 232-6338
 D 232-6339
 232-6340
 232-6341
 232-6342
 J 232-6343
 C 232-6345
 C 232-6346
 C 232-6347
 C 232-6348
 C 232-6349
 C 232-6350
 232-6351
 232-6352
 232-6353
 232-6354
 232-6355
 232-6356
 232-6357
 232-6358
 232-6359
 232-6360
 232-6361
 232-6362
 J 232-6363
 C 232-6364
 C 232-6365
 C 232-6366
 C 232-6367
 C 232-6368
 C 232-6369
 C 232-6370
 C 232-6371
 232-6372

 232-6373

 C 232-6374
 C 232-6375
 232-6377
 B 232-6378
 C 232-6379

 B 232-6380
 B 232-6381

SKIRT PANEL	05272
ANGLE ASSY - SKIRT MTG	05272
ANGLE ASSY - SKIRT MTG	05272
ANGLE ASSY - SKIRT MOUNTING	05272
ANGLE ASSY - SKIRT MOUNTING	05272
ANGLE ASSY - SKIRT MTG	05272
ANGLE ASSY - SKIRT MOUNTING	05272
ANGLE ASSY - SKIRT MTG	05272
ANGLE SKIRT MOUNTING	05272
ANGLE ASSY - SKIRT MOUNTING	05272
SKIRT PANEL ASSY	05272
SKIRT PANEL	05272
SUPPORT SKIRT STIFFENER	05272
SUPPORT SKIRT STIFFENER	05272
STIFFENER SKIRT PANEL	05272
TANK - SEWAGE INSTALLATION	05272
COVER - CENTER SILL	05272
COVER - CENTER SILL	05272
COVER - CENTER SILL	05272
COVER - CENTER SILL	05272
COVER - CENTER SILL	05272
COVER - CENTER SILL	05272
FLOOR STRINGER	05272
FLOOR STRINGER	05272
FLOOR STRINGER	05272
FLOOR STRINGER	05272
SHEET FALSE FLOOR	05272
CROSS TIE CRIPPLE	05272
CROSS TIE CRIPPLE	05272
FLOOR STRINGER	05272
CROSS TIE CRIPPLE	05272
CROSS TIE CRIPPLE	05272
SUPPORT DOWN RAIL	05272
FILLER DOWN RAIL	05272
EMERGENCY DOOR	05272
FRAME - EMERGENCY DOOR	05272
FRAME - EMERGENCY DOOR	05272
RIB - EMERGENCY DOOR	05272
DOOR SHEET - EMERGENCY DOOR	05272
RIB - EMERGENCY DOOR	05272
RIB - LOWER EMERGENCY DOOR	05272
FRAME - EMERGENCY DOOR	05272
RIB - EMERGENCY DOOR	05272
ROD ASSY UPPER - EMERGENCY	05272
DOOR LOCK	
ROD ASSY LOWER - EMERGENCY	05272
DOOR LOCK	
RETAINER - GASKET EMER DOOR	05272
RIB ASSY - EMERGENCY DOOR	05272
SPACER EMERGENCY DOOR	05272
SPACER - EMERGENCY DOOR	05272
HANDLE ASSY - EMERGENCY	05272
DOOR LOCK	
STRAP - EMERGENCY DOOR LOCK	05272
RIB - EMERGENCY DOOR LOCK	05272

B 232-6382	RIB - EMERGENCY DOOR LOCK	05272
B 232-6383	GRIP - EMERGENCY DOOR LOCK	05272
C 232-6384	COVER - CENTER STILL	05272
D 232-6385	POCKET ASSY - DOOR LOCK	05272
C 232-6386	EMERGENCY DOOR	
C 232-6389	GASKET - FUEL FEED LINE	05272
	RETAINER - GASKET EMERGENCY	05272
	DOOR	
C 232-6390	RETAINER - GASKET EMERGENCY	05272
	DOOR	
B 232-6398	FLOOR STRINGER	05272
B 232-6399	FLOOR STRINGER	05272
C 232-6402	OUTLET - TAPERED HOPPER	05272
	CHUTE ASSY	
C 232-6403	PLATE - BACKING HOPPER	05272
	CHUTE ASSY	
B 232-6404	BRACKET	05272
B 232-6405	BRACKET ASSY	05272
C 232-6407	FALSE FLOOR SHEET ASSY	05272
B 232-6408	SUPPORT - FALSE FLOOR	05272
C 232-6409	SHEET FALSE FLOOR	05272
B 232-6416	SHIM - LAMINATED HANDLE	05272
	DOOR LOCK	
B 232-6417	PIN - EMERGENCY DOOR LOCK	05272
B 232-6418	FLOOR STRINGER	05272
B 232-6419	FLOOR STRINGER	05272
B 232-6420	CLOSURE - HAT RAFFER SPRING	05272
B 232-6421	PIN - HAND BRAKE	05272
B 232-6422	PIN - HOLDER HAND BRAKE	05272
C 232-6423	RIB - EMERGENCY DOOR	05272
232-6424	FRAME ASSY - INSIDE END	05272
	DOOR	
J 232-6425	STEAM TRAINLINE - ARRGT	05272
D 232-6430	SUPPORT ASSY - END DOOR	05272
	LOCK	
B 232-6431	PLATE - TAP END DOOR LOCK	05272
B 232-6432	PLATE - TAP END DOOR LOCK	05272
B 232-6433	STOP - FIXED END DOOR LOCK	05272
C 232-6434	PAN - END DOOR LOCK	05272
B 232-6435	SUPPORT - END DOOR LOCK	05272
B 232-6436	THIMBLE - BEARING END DOOR	05272
	LOCK	
B 232-6437	SPACER - END DOOR LOCK	05272
B 232-6438	SLEEVE - EMERGENCY DOOR	05272
	LOCK	
B 232-6439	STRIKER - ASSY END DOOR	05272
	LOCK	
B 232-6440	FLANGE - END DOOR LOCK	05272
B 232-6441	STRIKER - END DOOR LOCK	05272
B 232-6442	PLATE - BEARING END DOOR	05272
	LOCK	
B 232-6443	SLEEVE - BEARING END DOOR	05272
	LOCK	
C 232-6444	BEARING ASSY - END DOOR	05272
	LOCK	

232-6445

B 232-6446

B 232-6447

B 232-6448

B 232-6449

B 232-6450

B 232-6451

B 232-6452

B 232-6453

B 232-6454

B 232-6455

B 232-6456

C 232-6457

B 232-6458

B 232-6459

C 232-6460

B 232-6464

B 232-6465

B 232-6466

B 232-6467

B 232-6468

B 232-6469

C 232-6470

C 232-6471

C 232-6472

C 232-6473

C 232-6474

C 232-6475

B 232-6476

B 232-6477

C 232-6478

C 232-6479

B 232-6480

B 232-6481

D 232-6482

C 232-6483

B 232-6484

B 232-6485

B 232-6486

B 232-6487

B 232-6488

C 232-6489

C 232-6490

FILLER - BEARING END DOOR LOCK	05272
HANDLE - END DOOR LOCK	05272
HUB - HANDLE END DOOR LOCK	05272
HANDLE ASSY - END DOOR LOCK	05272
SHAFT - END DOOR LOCK	05272
HANDLE ASSY - OUTSIDE END DOOR LOCK	05272
PLATE - LEVER END DOOR LOCK	05272
PIN - LEVER END DOOR LOCK	05272
SPACER - LEVER END DOOR LOCK	05272
LEVER ASSY - END DOOR LOCK	05272
PLATE - ARM END DOOR LOCK	05272
HUB - ARM END DOOR LOCK	05272
ARM ASSY - END DOOR LOCK	05272
SIDE - WEATHER SHIELD END DOOR LOCK	05272
BOTTOM - WEATHER SHIELD END DOOR LOCK	05272
SHIELD ASSY - WEATHER END DOOR LOCK	05272
PLATE - TIE DOWN RAIL	05272
PLATE - TIE DOWN RAIL	05272
PLATE - TIE DOWN RAIL	05272
PLATE - TIE DOWN RAIL	05272
PLATE - TIE DOWN RAIL	05272
PLATE - TIE DOWN RAIL	05272
SUPPORT ASSY - TIE DOWN RAIL	05272
SUPPORT ASSY - TIE DOWN RAIL	05272
SUPPORT ASSY - TIE DOWN RAIL	05272
SUPPORT ASSY - TIE DOWN RAIL	05272
SUPPORT ASSY - TIE DOWN RAIL	05272
TUBE - UPPER END DOOR LOCK	05272
TUBE - LOWER END DOOR LOCK	05272
TUBE ASSY - UPPER END DOOR LOCK	05272
TUBE ASSY - LOWER END DOOR LOCK	05272
PLATE - END DOOR LOCK TUBE	05272
END TUBE - END DOOR LOCK	05272
ROD - LOWER EMER DOOR LOCK	05272
ROD - UPPER EMER DOOR LOCK	05272
PLATE - BACKUP EMER DOOR	05272
SHEET ASSY - FALSE FLOOR	05272
SIDE - POCKET ASSY EMER- GENCY DOOR	05272

C 232-6491	BODY - POCKET ASSY	05272
B 232-6492	EMERGENCY DOOR	
B 232-6493	BRACKET - AIR TUBE	05272
B 232-6494	CLAMP - WATER AND AIR TUBE	05272
(C) 232-6495	BRACKET - WATER FILL TUBE	05272
C 232-6496	BRACKET - WATER FILL TUBE	05272
	SUPPORT - WATER AND AIR	05272
C 232-6497	TUBES	
	SUPPORT - WATER AND AIR	05272
B 232-6498	TUBES	
B 232-6499	PLATE - TAP END DOOR LOCK	05272
C 232-6500	PLATE - TAP END DOOR LOCK	05272
B 232-6501	BRACKET - 26C CONTROL VALVE	05272
	BRACKET - A-2 QUICK SERVICE VALVE	05272
C 232-6502	BRACKET ASSY - AUXILIARY	05272
	RESERVOIR	
B 232-6503	BRACKET - AUXILIARY	05272
	RESERVOIR	
B 232-6504	SUPPORT - AUXILIARY	05272
	RESERVOIR	
C 232-6505	LEVER ARRGT END DOOR LOCK	05272
C 232-6506	SUPPORT - PIPING ENCLOSURE	05272
	WATER TANK	
C 232-6507	BRACKET - MOUNTING WATER	05272
	FILLING VALVE WATER TANK	
B 232-6508	CLIP - WATER TANK SUPPORT	05272
C 232-6509	HANGER - ENCLOSURE WATER	05272
	TANK	
B 232-6510	ANGLE - ENCLOSURE WATER	05272
	TANK	
232-6511	HANGER ASSY - ENCLOSURE	05272
	WATER TANK	
C 232-6512	HANGER - ENCLOSURE WATER	05272
	TANK	
C 232-6513	ANGLE - ENCLOSURE WATER	05272
	TANK	
D 232-6514	HANGER ASSY - ENCLOSURE	05272
	WATER TANK	
E 232-6515	HANGER - ENCLOSURE WATER	05272
	TANK	
B 232-6516	STIFFENER - BOTTOM ANGLE	05272
B 232-6517	SUPPORT - RAISED FLOOR	05272
C 232-6518	PANEL - RAISED FLOOR	05272
D 232-6519	TRIM RAISED FLOOR	05272
B 232-6520	SUPPORT - RAISED FLOOR	05272
C 232-6521	SUPPORT - RAISED FLOOR	05272
B 232-6522	SUPPORT - RAISED FLOOR	05272
B 232-6523	SUPPORT - RAISED FLOOR	05272
B 232-6524	SUPPORT - RAISED FLOOR	05272
C 232-6525	SUPPORT ASSY - RAISED FLOOR	05272
B 232-6526	SUPPORT - RAISED FLOOR	05272
232-6527	SUPPORT ASSY - RAISED FLOOR	05272
C 232-6528	SUPPORT - RAISED FLOOR	05272
C 232-6529	SUPPORT ASSY - RAISED FLOOR	05272

B 232-6530	SUPPORT - RAISED FLOOR	05272
B 232-6531	SUPPORT - RAISED FLOOR	05272
B 232-6532	SUPPORT ASSY - RAISED FLOOR	05272
B 232-6533	SUPPORT ASSY - RAISED FLOOR	05272
B 232-6534	SUPPORT - RAISED FLOOR	05272
(232-6535	SUPPORT ASSY - RAISED FLOOR	05272
C 232-6536	SUPPORT ASSY - RAISED FLOOR	05272
B 232-6537	PLATE - TAPPING	05272
B 232-6538	SHIM * LAMINATED END DOOR	05272
	LOCK	
B 232-6539	PLATE - TAPPING	05272
B 232-6540	PLATE - TAPPING	05272
B 232-6541	TAP PAD - RAISED FLOOR	05272
C 232-6542	SUPPORT ASSY - RAISED FLOOR	05272
B 232-6543	SUPPORT - RAISED FLOOR	05272
B 232-6544	SUPPORT - RAISED FLOOR	05272
B 232-6545	SUPPORT - RAISED FLOOR	05272
B 232-6546	SUPPORT - RAISED FLOOR	05272
B 232-6547	SUPPORT - RAISED FLOOR	05272
B 232-6548	SUPPORT - RAISED FLOOR	05272
B 232-6549	SUPPORT - RAISED FLOOR	05272
C 232-6550	SUPPORT - RAISED FLOOR	05272
B 232-6551	SUPPORT - RAISED FLOOR	05272
D 232-6552	SUPPORT - RAISED FLOOR	05272
D 232-6553	SUPPORT - RAISED FLOOR	05272
C 232-6554	PANEL - RAISED FLOOR	05272
C 232-6555	PANEL - RAISED FLOOR	05272
C 232-6556	FLOOR PANEL	05272
B 232-6557	FLOOR PANEL	05272
B 232-6558	SHIM - END DOOR LOCK	05272
	COVER - PLATE BUFFER	05272
	CASTING	
232-6559	COVER - PLATE BUFFER	05272
	CASTING	
D 232-6560	PAN ASSY - END DOOR LOCK	05272
B 232-6561	END - PAN END DOOR LOCK	05272
B 232-6562	END - PAN END DOOR LOCK	05272
C 232-6563	HAT - PAN END DOOR LOCK	05272
J 232-6564	FRAME ASSY - END DOOR	05272
	COMMAND CAR	
B 232-6565	CHANNEL - TOP BOTTOM END	05272
	DOOR	
B 232-6566	CHANNEL - SIDE END DOOR	05272
B 232-6567	FRAME - TOP BOTTOM END DOOR	05272
B 232-6568	FRAME - LEFT END DOOR	05272
B 232-6569	FRAME - RIGHT END DOOR	05272
B 232-6570	FRAME - CENTER END DOOR	05272
B 232-6571	FRAME - WINDOW LOWER END	05272
	DOOR	
B 232-6572	FRAME - WINDOW UPPER END	05272
	DOOR	
B 232-6573	FRAME - WINDOW LEFT END	05272
	DOOR	
232-6574	FRAME - WINDOW RIGHT END	05272
	DOOR	
232-6575	SUPPORT - LEFT END DOOR	05272

232-6576	SUPPORT - RIGHT END DOOR	05272
232-6577	SUPPORT - UPPER END DOOR	05272
232-6578	PLATE - OFFSET END DOOR	05272
232-6579	SUPPORT - HINGE END DOOR	05272
232-6580	PLATE - HINGE BACKING END DOOR	05272
232-6581	SUPPORT - LOWER LATCH END DOOR	05272
232-6582	PLATE - LATCH BACKING END DOOR	05272
232-6583	SUPPORT - UPPER LATCH END DOOR	05272
232-6584	SUPPORT - HANDLE END DOOR	05272
C 232-6585	COVER - END DOOR	05272
J 232-6586	SIDE ACCESS PANEL AND EMERGENCY DOOR INSTL	05272
C 232-6587	DOOR ASSY - WATER TANK ENCLOSURE	05272
232-6588	PANEL - DOOR ASSY	05272
232-6589	FRAME - UP AND LWR DOOR ASSY	05272
232-6590	CATCH - END PLATE ASSY	05272
232-6591	HASP - DOOR ASSY	05272
232-6592	FRAME - SIDE DOOR ASSY	05272
232-6593	BRACKET - WATER TUBE	05272
C 232-6594	BRACKET - AIR TUBES	05272
D 232-6595	SUPPORT - WATER AND AIR TUBES WATER TANK	05272
232-6596	BAND - INSULATION END PLATE ASSY	05272
232-6597	SPACER - HINGE DOOR ASSY	05272
32-6598	FILLER - BRAKE PIPE SUPPORT	05272
232-6599	U-BOLT - ANGLE COCK BRAKE PIPE	05272
B 232-6600	U-BOLT - BRAKE PIPE	05272
B 232-6601	SPACER FRAME	05272
B 232-6602	SPACER FRAME ASSY	05272
B 232-6603	BAND - INSULATION END PLATE ASSY	05272
B 232-6604	BAND - INSULATION END PLATE ASSY	05272
B 232-6605	BAND - INSULATION END PLATE ASSY	05272
B 232-6606	BRACKET - END PLATE ASSY	05272
D 232-6608	END PLATE ASSY - ENCLOSURE WATER TANK	05272
C 232-6609	FRAME ASSY - END PLATE	05272
C 232-6610	FRAME - END PLATE ASSY	05272
C 232-6611	END PLATE - ENCL WATER TANK	05272
232-6612	BAND - INSULATION END PLATE ASSY	05272
232-6613	PIPE CLAMP - RETAINING AND CONDUCTOR VALVE	05272
232-6614	CLAMP - SUPPORT RETAINING AND CONDUCTOR VALVES	05272

J 232-6615	FUEL TANK AND FUEL TANK HOUSING INSTL	05277
C 232-6616	FLOOR PANEL	05277
B 232-6617	SUPPORT - RAISED FLOOR	05277
Y 232-6618	FLOOR PANEL	05272
C 232-6619	FLOOR PANEL	05272
C 232-6620	FLOOR PANEL	05272
C 232-6621	FLOOR PANEL	05272
C 232-6622	FLOOR PANEL	05272
B 232-6623	SUPPORT - RAISED FLOOR	05272
B 232-6624	SUPPORT - RAISED FLOOR	05272
232-6625	PLATE TAPPING - RAISED FL	05277
D 232-6626	SUPPORT ASSY - RAISED FLOOR	05272
232-6627	SUPPORT RAISED FLOOR AT HANDBRAKE	05272
232-6628	SEAL HAND BRAKE CHAIN	05277
C 232-6629	BRACKET ASSY - WATER RAISING	05272
232-6630	SUPPORT WATER RAISING RESERVOIR	05272
D 232-6631	RETAINER - DOOR LOCK POCKET EMERGENCY DOOR	05272
C 232-6632	STRIP SIDE - RETAINER	05272
232-6633	STRIP END - RETAINER	05272
232-6634	RETAINER FLOOR SEAL TUBE HAND BRAKE CHAIN	05272
C 232-6635	SUPPORT - RAISED FLOOR	05272
C 232-6636	SUPPORT - RAISED FLOOR	05272
D 232-6637	COVER - DOOR LOCK EMERGENCY DOOR	05272
232-6639	BRACKET ASSY - FUEL TANKS	05272
C 232-6640	PLATE - BRACKET FUEL TANKS	05272
C 232-6641	REINF PLATE - BRACKET FUEL TANKS	05272
232-6642	GUSSET BRACKET FUEL TANKS	05272
C 232-6643	SUPPORT TIE - BRACKET FUEL TANKS	05272
C 232-6644	SUPPORT TIF - BRACKET FUEL TANKS	05272
C 232-6645	SUPPORT ANGLE BRACKET - FUEL TANKS	05272
C 232-6646	SUPPORT - TIE BRACKET FUEL TANKS	05272
C 232-6647	PLATE - BRACKET FUEL TANKS	05272
C 232-6648	SUPPORT - PLATE BRACKET FUEL TANKS	05272
C 232-6649	FRAME - END PLATE ASSY WATER TANK	05272
C 232-6650	FRAME ASSY - END PLATE	05272
232-6651	BAND INSULATION - END PLATE ASSY	05272
232-6652	BAND INSULATION - END PLATE ASSY	05272
B 232-6653	BAND - INSULATION END PLATE ASSY	05272

B 232-6654	BRACKET - END PLATE ASSY	05272
B 232-6655	CLAMP - PIPE END EQUIPMENT	05272
B 232-6656	SUPPORT - PIPE END EQUIP.	05272
B 232-6657	CLAMP - PIPE END EQUIP.	05272
B 232-6658	SUPPORT ASSY - FRONT	05272
C 232-6659	SEWAGE TANK	
B 232-6660	PLATE - FRONT SUPPORT	05272
C 232-6661	SEWAGE TANK	
B 232-6663	BAP - FRONT SUPPORT	05272
C 232-6664	SEWAGE TANK	
C 232-6665	SUPPORT ASSY - REAR SEWAGE	05272
B 232-6666	TANK	
B 232-6667	BAR - REAR SUPPORT	05272
C 232-6668	SEWAGE TANK	
C 232-6669	SUPPORT - SIDE SEWAGE TANK	05272
B 232-6670	SUPPORT - SIDE SEWAGE TANK	05272
D 232-6671	FILLER - TUBE END DOOR LOCK	05272
D 232-6672	SUPPORT - PIPE END EQUIP.	05272
J 232-6673	RIB - EMERGENCY DOOR	05272
D 232-6674	RIB - EMERGENCY DOOR	05272
C 232-6675	HANDHOLD - END EQUIPMENT	05272
D 232-6676	CARLINE - COPE HOLE LOCATIONS	05272
232-6677	ROOF SHEET END	05272
232-6678	END DOOR TRIM ARRANGEMENT	05272
D 232-6680	END CARLINE STA 121.31	05272
D 232-6681	SUPPORT - SIDE OPPOSITE	05272
B 232-6682	SEWAGE TANK	
B 232-6683	END CARLINE ASSY - STA	05272
B 232-6684	121.31	
B 232-6685	SPACER - CHAIN SHEAVES	05272
B 232-6686	BRACKET ASSY - HAND BRAKE	05272
C 232-6687	SHEAVE AT END SILL	
J 232-6688	SKIRT PANEL ASSY	05272
B 232-6689	SKIRT PANEL	05272
B 232-6690	STIFFENER - SKIRT PANEL	05272
B 232-6691	SUPPORT - SKIRT PANEL	05272
B 232-6692	BAND - RETAINING	05272
B 232-6693	BAND - RETAINING	05272
B 232-6694	BAND - RETAINING	05272
232-6695	PANEL RAISED FLOOR	05272
232-6696	ENCLOSURE ASSY - WATER TANK	05272
232-6697	BAND - INSULATION ENCL ASSY	05272
232-6698	BAND - INSULATION ENCL ASSY	05272
232-6699	BAND - INSULATION ENCL ASSY	05272
232-6700	ASSY	
	BAND - INSULATION ENCL ASSY	05272
	BAND - INSULATION ENCL ASSY	05272
	BAND - INSULATION ENCL ASSY	05272
	SPACER - FRAME ASSY	05272
	SPACER - FRAME ASSY	05272
	SPLICE - RIB ENCL ASSY	05272
	SPLICE - RIB ENCL ASSY	05272
	SPLICE - RIB ENCL ASSY	05272
	SPLICE - RIB ENCL ASSY	05272
	TAP PLATE - ENCLOSURE ASSY	05272

E 232-6701	TAP PLATE - ENCLOSURE ASSY	05272
E 232-6702	FRAME ASSY - INTERMEDIATE	05272
E 232-6703	FRAME ASSY - INTERMEDIATE	05272
	SPLICE	
E 232-6704	FRAME - INTERMEDIATE ASSY	05272
E 232-6705	RIB - OUTBOARD UPPER	05272
E 232-6706	RIB - INBOARD UPPER	05272
E 232-6707	RIB - INBOARD UPPER	05272
E 232-6708	RIB - OUTBOARD UPPER	05272
E 232-6709	FRAME - INTERMEDIATE	05272
	SPLICE ENCLOSURE	
E 232-6710	SHELL - LOWER ENCLOSURE	05272
	ASSY	
J 232-6711	SHELL - LOWER ENCLOSURE	05272
	ASSY	
232-6712	COVER - REMOVABLE DRAIN	05272
D 232-6713	TOP PLATE - FUEL TANK	05272
	HOUSING	
D 232-6714	TOP PLATE ASSY - FUEL TANK	05272
	HOUSING	
E 232-6715	TROUGH - BOTTOM WATER TANK	05272
E 232-6716	TROUGH ASSY - UPPER WATER	05272
	TANK	
D 232-6717	SUPPORT - END TROUGH LOWER	05272
	WATER TANK	
C 232-6718	END SUPPORT - UPPER TROUGH	05272
	WATER TANK	
E 232-6719	TROUGH END UPPER - WATER	05272
	TANK	
C 232-6720	CENTER TROUGH - UPPER WATER	05272
	TANK	
C 232-6721	TROUGH END UPPER - WATER	05272
	TANK	
232-6722	PLATE - SPLICE UPPER TROUGH	05272
	WATER TANK	
C 232-6723	SHEET ASSY - FALSE FLOOR	05272
D 232-6724	SKIRT PANEL ASSY	05272
C 232-6725	SKIRT PANEL	05272
232-6726	STEP - END SILL	05272
232-6728	SUPPORT ASSY BRAKE AND	05272
	SIGNAL PIPE	
232-6729	SUPPORT - SKIRT PANEL	05272
C 232-6730	ENCLOSURE - END SILL STEP	05272
232-6731	ENCLOSURE - BOTTOM	05272
232-6732	BAND RETAINING	05272
232-6733	BAND RETAINING	05272
232-6734	PLATE - STEP MTG	05272
D 232-6735	ANGLE - SIDE SHEET	05272
J 232-6736	BOTTOM HOUSING ASSY -	05272
	SEWAGE TANK	
D 232-6737	PANEL - BOTTOM	05272
D 232-6738	HOUSING - VALVE SEWAGE TANK	05272
C 232-6739	ANGLE - SUPPORT SEWAGE TANK	05272
	HOUSING	
E 232-6740	ANGLE - SUPPORT SEWAGE TANK	05272
	HOUSING	

232-6741	PANFL ASSY - SIDE BOTTOM	05277
232-6742	HOUSING SEWAGE TANK	
	ADAPTER PLATE - FUEL FEED	05277
	LINE	
32-6744	PANFL - SIDE BOTTOM HOUSING	05277
	SEWAGE TANK	
232-6745	ANGLE	05272
232-6746	PANFL ASSY - FRT BOTTOM	05272
	HOUSING SEWAGE TANK	
232-6747	PANFL - FRONT BOTTOM	05272
	HOUSING	
232-6748	TAP PLATE	05272
232-6749	TUBE	05272
232-6750	TAP - PLATE	05272
232-6751	PLATE - COVER	05272
B 232-6752	ANGLE	05272
B 232-6753	ANGLE	05272
B 232-6754	ANGLE	05272
B 232-6755	ANGLE	05272
B 232-6756	BAND - RETAINING	05272
C 232-6757	BAND - RETAINING	05272
C 232-6758	BAND - RETAINING	05272
B 232-6760	BAND - RETAINING	05272
B 232-6761	BAND - RETAINING	05272
B 232-6762	STIFFENER END SKIRT SUPPORT	05272
B 232-6763	CLOSURE - PLATE SKIRT END	05272
	SILL	
C 232-6764	SUPPORT - ANGLE FUEL TANK	05272
	HOUSING	
B 232-6766	CLAMP BRAKE CYLINDER PIPE	05272
232-6767	CLAMP SUPPORT BRAKE	05272
	CYLINDER PIPE	
B 232-6768	BASE - KEEPER END DOOR LOCK	05272
B 232-6769	PLATE - KEEPER END DOOR	05272
	LOCK	
B 232-6770	KEEPER ASSY - END DOOR LOCK	05272
B 232-6771	SHIM - LAMINATED END DOOR	05272
	LOCK	
B 232-6772	PLATE - TAPPING END DOOR	05272
	LOCK	
C 232-6773	STEP ASSY - END SILL	05272
D 232-6774	END SHEET - FUEL TANK	05272
	HOUSING	
D 232-6775	SIDE SHEET - FUEL TANK	05272
	HOUSING	
D 232-6776	SIDE SHEET - FUEL TANK	05272
	HOUSING	
D 232-6777	PANFL - REAR SEWAGE TANK	05272
	HOUSING	
C 232-6778	PLATE - MTG REAR PANEL	05272
B 232-6779	BAND - RETAINING	05272
B 232-6780	BAND - RETAINING	05272
D 232-6781	PANFL ASSY - REAR SEWAGE	05272
	TANK HOUSING	
D 232-6782	SIDE SHEET - FUEL TANK	05272
	HOUSING	

B 232-6783	SIDE SHEET - FUEL TANK HOUSING	05272
B 232-6784	PANEL ASSY - SIDE SEWAGE TANK HOUSING	05272
(232-6785	PANFL - SIDE SEWAGE TANK HOUSING	05272
B 232-6786	ANGLE	05272
B 232-6787	ANGLE	05272
J 232-6788	SEWAGE TANK HOUSING ASSY	05272
B 232-6789	ADAPTER PLATE ASSY - FUEL FEED LINE	05272
D 232-6790	BOTTOM SHEET FUEL TANK HSG	05272
D 232-6791	BOTTOM SHEET - FUEL TANK HOUSING	05272
C 232-6792	BRACKET - TROUGH END WATER TANK	05272
C 232-6793	BRACKET - TROUGH END WATER TANK	05272
C 232-6794	BRACKET - TROUGH END WATER TANK	05272
C 232-6795	BAND - INSULATION UPPER TROUGH WATER TANK	05272
232-6796	PLATE - TAPPING TROUGH END WATER TANK	05272
B 232-6797	BRACKET - TROUGH SUPPORT WATER TANK	05272
B 232-6798	BRACKET - TROUGH SUPPORT WATER TANK	05272
B 232-6799	PLATE - TAPPING LWR TROUGH WATER TANK	05272
232-6800	LOWER TROUGH ASSY - WATER TANK	05272
C 232-6801	BRACKET ASSY - TROUGH END WATER TANK	05272
B 232-6802	BRACKET - TROUGH END WATER TANK	05272
B 232-6803	BAND - INSULATION WATER TANK TROUGH	05272
B 232-6804	TAP PLATE - TROUGH END WATER TANK	05272
C 232-6805	END PLATE ASSY - WATER TANK TROUGH	05272
D 232-6806	TROUGH ASSY - UPPER WATER TANK	05272
C 232-6808	SHEET ASSY - FALSE FLOOR	05272
B 232-6809	TAP PLATE - TROUGH WATER TANK	05272
B 232-6810	BAND - RETAINING	05272
B 232-6811	STOP - ADJUSTABLE END DOOR LOCK	05272
C 232-6812	END PLATE - PIPE TROUGH WATER TANK	05272
B 232-6813	PANEL ASSY - FRONT SEWAGE TANK HOUSING	05272
C 232-6814	PANFL - FRONT	05272

B 232-6815	BAND - RETAINING	05272
B 232-6817	PANEL ASSY - STDF SEWAGE	05272
	TANK	
B 232-6818	PANEL - SIDE	05272
B 232-6819	ANGLE	05272
B 232-6820	ANGLE	05272
B 232-6821	BAND - RETAINING	05272
B 232-6822	INTER. ANGLE - FUFL TANK	05272
	HOUSING	
C 232-6823	STIFFENER - ANGLE FUFL TANK	05272
	HOUSING	
C 232-6824	STIFFENER - SUPPORT	05272
C 232-6825	STIFFENER - SUPPORT	05272
D 232-6827	END ANGLE - FUFL TANK HSG	05272
C 232-6828	STIFFENER - BOTTOM ANGLE	05272
B 232-6829	CLEVIS - END DOOR LOCK	05272
B 232-6830	ANGLE - SUPPORT STOWAGE	05272
	TANK HOUSING	
C 232-6831	STIFFENER - BOTTOM ANGLE	05272
B 232-6832	GASKET - SIDE LOADING AND	05272
	END DOORS	
B 232-6833	FILLER - END DOOR HINGE	05272
B 232-6834	SUPPORT - MTG PLATE FUEL	05272
	TANK HOUSING	
C 232-6836	CLAMP SUPPORT - STEAM	05272
	TRAINLINE AT WATER TANK	
J 232-6837	HOUSING ASSY - FUEL TANK	05272
B 232-6839	SHIM - STEP MTG	05272
D 232-6840	ANGLE - SKIRT MOUNTING	05272
D 232-6841	END PLATE ASSY - HOUSING	05272
	WATER TANK	
J 232-6842	HOUSING ASSY - UPPER WATER	05272
	TANK	
D 232-6843	SIDE - INBOARD HOUSING	05272
	WATER TANK	
C 232-6844	SIDE - INBOARD HOUSING	05272
	WATER TANK	
C 232-6845	SIDE OUTBOARD - HOUSING	05272
	WATER TANK	
D 232-6846	SIDE - OUTBOARD HOUSING	05272
	WATER TANK	
B 232-6847	TAP PLATE - LWR TROUGH	05272
	WATER TANK	
B 232-6848	TAP PLATE - HOUSING WATER	05272
	TANK	
B 232-6849	TAP PLATE - HOUSING WATER	05272
	TANK	
B 232-6850	TAP PLATE - HOUSING WATER	05272
	TANK	
B 232-6851	TAP PLATE - HOUSING WATER	05272
	TANK	
B 232-6852	CHANNEL - SPLICE HOUSING	05272
	WATER TANK	
B 232-6853	STRIP - SPLICE HOUSING	05272
	WATER TANK	

232-6854	STRIP - SPLICE HOUSING	05272
232-6855	WATER TANK	
232-6856	BANK - INSULATION HOUSING	05272
232-6857	WATER TANK	
232-6858	BANK - INSULATION HOUSING	05272
232-6859	WATER TANK	
232-6860	BANK - INSULATION HOUSING	05272
232-6861	WATER TANK	
232-6862	BRACKET - END PLATE	05272
232-6863	WATER TANK	
232-6864	BRACKET - END PLATE WATER	05272
232-6865	TANK	
232-6866	FRAME - HOUSING WATER TANK	05272
232-6867	FRAME - HOUSING WATER TANK	05272
232-6868	FRAME ASSY - HOUSING WATER	05272
232-6869	TANK	
232-6870	END PLATE - HOUSING WATER	05272
232-6871	TANK	
232-6872	END PLATE - HOUSING WATER	05272
232-6873	TANK	
232-6874	END PLATE ASSY - HOUSING	05272
232-6875	WATER TANK	
232-6876	LOCK - MODIFIED END DOOR	05272
232-6877	BANK - INSULATION HOUSING	05272
232-6878	WATER TANK	
232-6879	BANK - INSULATION HOUSING	05272
232-6880	WATER TANK	
232-6881	BANK - INSULATION HOUSING	05272
232-6882	WATER TANK	
232-6883	BANK - INSULATION HOUSING	05272
232-6884	WATER TANK	
232-6885	BANK - INSULATION HOUSING	05272
232-6886	WATER TANK	
232-6887	ANGLE - SIDE SHEET	05272
232-6888	CLAMP SUPPORT - STEAM	05272
232-6889	TRAINLINE AT STA 411.625	
232-6890	AND 451.21	
232-6891	CLAMP - SUPPORT STEAM	05272
232-6892	TRAINLINE STA 345 AND STA	
232-6893	502	
232-6894	POCKET ASSY - END SILL	05272
232-6895	HAND HOLD SEWAGE TANK	
232-6896	HOUSING	
232-6897	FRONT PLATE - FUEL FILL	05272
232-6898	TROUGH	
232-6899	SUPPORT - FUEL FILL TROUGH	05272
232-6900	BRACKET - FUEL FILL TROUGH	05272
232-6901	SHEET - TOP FUEL FILL	05272
232-6902	TROUGH	
232-6903	SUPPORT - BOTTOM ANGLE	
232-6904	SUPPORT - BOTTOM ANGLE	05272
232-6905	SUPPORT - SIDE ANGLE	05272
232-6906	SUPPORT - SIDE ANGLE	05272

SUPPORT - SIDE ANGLE	05272
SUPPORT - SIDE ANGLE	05272
SUPPORT - SIDE ANGLE	05272
SHEET - TROUGH BOTTOM	05272
SHEET - FUEL TROUGH SIDE	05272
ENCLOSURE ASSY FUEL FILL	05272
TROUGH	
TROUGH ASSY - FUEL FILL	05272
TAP PLATE	05272
TAP PLATE	05272
GUSSET - FUEL FILL TROUGH	05272
SUPPORT ASSY - FUEL FILL	05272
TROUGH	
WATER TANK INSTL COMMAND	05272
CAR	
SUPPORT	05272
SUPPORT	05272
DRAIN COVER - FUEL TANK	05272
HOUSING	
FILLER - END SILL HANDHOLD	05272
TAP PLATE	05272
SPICE PLATE - TOP PLATE	05272
FUEL TANK HOUSING	
SUPPORT - SIDE SHEET	05272
TAP PLATE - SIGNAL LAMP	05272
BRACKET	
PLATE - CONDUIT MOUNTING	05272
FUEL TANK HOUSING	
TOP PLATE - FUEL TANK	05272
HOUSING	
TOP PLATE - FUEL TANK	05272
HOUSING	
TOP PLATE - FUEL TANK	05272
HOUSING	
DRAINING PLATE - SEWAGE TANK	05272
HOUSING	
TOP PLATE - FILLER	05272
COUPLER - LWR TROUGH WATER	05272
TANK	
END PLATE - PIPE TROUGH	05272
WATER TANK	
TROUGH - UPPER PIPE WATER	05272
TANK	
TROUGH - LOWER PIPE WATER	05272
TANK	
TROUGH ASSY - UPPER PIPE	05272
WATER TANK	
TROUGH ASSY - LOWER PIPE	05272
WATER TANK	
INSULATION ASSY - LOWER	05272
PIPE TROUGH WATER TANK	
INSULATION ASSY - UPPER	05272
PIPE TROUGH WATER TANK	

232-6923	INSULATION ASSY - FND	05272
232-6924	TROUGH WATER TANK	
232-6925	TAP PLATE	05272
232-6926	PATCH PLATE	05272
232-6927	CLOSURE PLATE - FUEL TANK	05272
232-6928	HOUSING	
232-6929	CLOSURE PLATE - FUEL TANK	05272
232-6932	HOUSING	
232-6933	CLOSURE - FND POCKET	05272
232-6934	ASSEMBLY SEWAGE TANK HSG	
232-6935	POCKET - SEWAGE TANK	05272
232-6936	HOUSING	
232-6937	TILE FLOOR ARRANGEMENT	05272
232-6938	ANGLE ASSY - SKIRT MOUNTING	05272
232-6939	TAP PLATE	05272
232-6940	VENT PIPE INSTL - SEWAGE	05272
232-6941	TANK COMMAND CAR	
232-6942	ROOF - VENT ASSY SEWAGE	05272
232-6943	TANK	
232-6944	PLATE - VENT SFAL SEWAGE	05272
232-6945	TANK	
232-6946	TOP PLATE - FUFL LINE	05272
232-6947	HOUSING	
232-6948	HOUSING - FUFL LINES	05272
232-6949	SUPPORT - FUEL LINE HSG	05272
232-6950	BRACKET - FUEL LINE HSG	05272
232-6951	CLAMP - FUFL LINES	05272
232-6952	CLAMP - PLATE FUEL LINES	05272
232-6953	SUPPORT - FUEL LINES	05272
232-6954	SPACER FUEL LINES	05272
232-6955	HOUSING ASSY - FUEL LINES	05272
232-6956	ANGLE - SIDE SHEET	05272
232-6957	SEWAGE TANK	05272
232-6958	FUEL STORAGE TANKS	05272
232-6959	WATER TANK COMMAND CAR	05272
232-6960	PIPE - FUEL FEED LINE	05272
232-6961	SCREEN - FUEL FEED LINE	05272
232-6962	FUEL FEED LINE ASSY - FUFL	05272
	TANK	
	TAP PLATE - TROUGH ASSY	05272
	WATER TANK	
	END PLATE - FUFL LINE	05272
	SUPPORT - ANGLE STEAM	05272
	TRAINLINE	
	ANGLE SIDE SHEET	05272
	SHAFT - ENROUTE DRAINAGE	05272
	SEWAGE TANK	
	SHIM - BEARING ENROUTE	05272
	DRAINAGE SEWAGE TANK	
	PLATE MOUNTING - ENROUTE	05272
	DRAINAGE SEWAGE TANK	
	HOUSING ASSY - CHAIN	05272
	ENROUTE DRAINAGE SEWAGE	
	TANK	
	TAP PLATE SIDE ASSY -	05272
	SEWAGE TANK	

232-6963	GUSSET - STEAM TRAINLINE	05272
232-6964	ENROUTE DRAINAGE CONTROL	05272
	ASSY - SEWAGE TANK	
232-6965	RIP - UPPER EMERGENCY DOOR	05272
232-6966	CLOSURE - INNER CHAIN	05272
	HOUSING SEWAGE TANK	
232-6967	CLOSURE - OUTER CHAIN	05272
	HOUSING SEWAGE TANK	
232-6968	BACKET - CHAIN HOUSING	05272
	SEWAGE TANK	
232-6969	STRAP - CHAIN HOUSING	05272
	SEWAGE TANK	
232-6970	STRAP - CHAIN HOUSING	05272
	SEWAGE TANK	
232-6971	PLATE - OUTER CHAIN HOUSING	05272
	SEWAGE TANK	
C 232-6972	PLATE - INNER ENROUTE	05272
	DRAINAGE SEWAGE TANK	
D 232-6973	HOUSING - CHAIN ENROUTE	05272
	DRAINAGE SEWAGE TANK	
232-6974	SPROCKET - 14-T ENROUTE	05272
	DRAINAGE SEWAGE TANK	
232-6975	CLAMP - SUPPORT BRAKE AND	05272
	SIGNAL PIPE	
232-6976	CLAMP - SUPPORT BRAKE AND	05272
	SIGNAL PIPE	
232-6977	CLAMP - SUPPORT BRAKE AND	05272
	SIGNAL PIPE	
D 232-6980	HELICAL SPRING ASSY - FOUR	05272
	WHEEL TRUCK	
232-6981	CLAMP - SUPPORT AUX RES	05272
	PIPE	
232-6982	CLAMP - SUPPORT CONT AND	05272
	SFL RES. PIPE	
232-6983	CLAMP - SUPPORT SIGNAL	05272
	VALVE PIPE	
232-6984	CLAMP - SUPPORT RETAINING	05272
	VALVE PIPE	
232-6985	CLAMP - SUPPORT 24-C VALVE	05272
	PIPE	
232-6986	WEAR PLATE - COUPLER	05272
	CARRIER	
232-6987	SPRING - CLIP SIGNAL AND	05272
	BRAKE PIPE SUPPORT	
232-6988	GUSSET - SUPPORT ASSY	05272
232-6989	SPACER YOKF ASSY - SIGNAL	05272
	AND BRAKE PIPE	
232-6990	RETAINER - SIGNAL AND BRAKE	05272
	PIPE YOKF	
A 232-6991	WEAR PLATE - SLIDING SILL	05272
	CARRIER	
B 232-6992	WEAR PLATE - YOKF ASSY	05272
	SIGNAL AND BRAKE PIPE	
B 232-6993	WEAR PLATE YOKF ASSY SIGNAL	05272
	AND BRAKE PIPE	

B 232-6994	YORK ASSY - SIGNAL AND	05272
C 232-6995	BRAKE PIPE SUPPORT	
C 232-6996	SUPPORT - JUNCTION BOX FUEL	05272
232-6997	STORAGE TANKS	
232-6998	WIRING DIAGRAM FUEL WATER	05272
232-6999	AND SEWAGE TANK HEATING	
232-7705DDL	HEATING INSTL. - FUEL TANK	05272
	HEATING INSTALL. WATER TANK	05272
	HEATING INSTALLATION	05272
232-8111-DDL	A REMOVABLE PANEL ASSY -	05272
232-8112-DDL	EQUIP. ROOM RH	
	CAR BODY EXTENSION	05272
	A CAR BODY EXTENSION	05272
	INSTALLATION	
D 232-8113	A CENTER SILL REWORK @ TRUCK	05272
J 232-8139	PIN CAR NO. 101X	
232-8194	A TRUCK LOCKOUT - CAR 101X	05272
D 232-9610	B ROPING STAPLES - CAR 101X	05272
	A REMOVABLE PANEL EQUIPMENT	05272
	ROOM LH AFT CAR NO. 101X	
	ASSY OF	
D 232-9611	A REMOVABLE PANEL EQUIPMENT	05272
	ROOM LH FWD CAR NO. 101X	
	ASSY OF	
D 232-9612	A REMOVABLE PANEL EQUIPMENT	05272
	ROOM RH FWD CAR NO. 101X	
	ASSY OF	
D 232-9613	A REMOVABLE PANEL EQUIPMENT	05272
	ROOM RH AFT CAR NO. 101X	
	ASSY OF	
232-9812	C CAMR TEST CAR NO. 1 REWORK	05272
	TO REMOVE EXISTING	
	SUPERSTRUCTURE	
J 232-9865	B SIDES AND END ASSY - CAR	05272
	101X	
232-9867	B UNDER FRAME ASSY - CAR	05272
	101X	
232-9870	A MODIFICATION TO BRAKE	05272
	PIPING	
232-9896	A SIDE FRAME - R.H. EQUIP.	05272
	ROOM CAR 101X ASSY OF	
232-9898	B UNCOUPLING ASSY - AVR	05272
	CAR NO. 1	
D 232-9913	A LOUVER SIMULATOR RIGHT SIDE	05272
	ASSY OF	
D 232-9914	A LOUVER SIMULATOR LEFT SIDE	05272
	ASSY OF	
232-9922	A HANDBRAKE ASSY - CAR 101X	05272
J 232-9923	B REWORK OF FIXED AND	05272
	SLIDING CENTER SILL	
232-9927	C HINGED ROOF ASSY - CAR	05272
	101X	
P 232-9928	C FLOOR - MISSILE AREA CAR	05272
	101X	
J 232-9929	A BALLAST ARRANGEMENT CAR -	05272
	101X	

232-9930	1	D	GENERAL ARRANGEMENT - CAR 101X	05272
232-9930	2	D	GENERAL ARRANGEMENT - CAR 101X	05272
232-9965		C	CROSS - REARERS AT LAUNCH AREA CAR 101X	05272
232-9977		A	EQUIPMENT ROOM ARRANGEMENT 101X	05272
232-9978		B	PARTITION EQUIP. ROOM - CAR 101X	05272
232-9992		A	REMOVABLE PANEL - EQUIP. ROOM R.H. CAR 101X	05272
232-9993		C	FLOOR - EQUIP. ROOM AMR CAR NO. 1 ASSY OF	05272
232-9995		A	SIDE FRAME - EQUIP. ROOM L.H. CAR 101X ASSY OF	05272
232-9996		B	END EQUIPMENT ROOM - CAR 101X ASSY OF	05272
232-9997		A	ROOF - EQUIP. ROOM CAR 101X ASSY OF	05272
232-9998		A	BLAST WALL - EQUIP. ROOM CAR 101X ASSY OF	05272
26-1398		C	SPRING SEAT COUPLER CARRIER	05272
26-1399			SPRING - COUPLER CARRIER	05272
26-1400		A	WASHER COUPLER CARRIER	05272
26-1589		B	FRONT SPRING COLLAR	05272
26-1590		C	SIDE STEM HINGE	05272
26-1591		A	REAR SPRING COLLAR	05272
26-1629			FABREFKA WASHER	05272
6-1797		A	RUBBER RUSHING	05272
26-33155		G	SIGNAL LAMP STEP	05272
26-3950		B	WASHER - BUFFER SIDE STEM	05272
26-3951		B	RETAINING WASHER	05272
26-3952			FABREFKA SLFEVE	05272
26-3953			FABREFKA WASHER	05272
26-3956		B	SIDE STEM PIN	05272
26-6305			END HAND RAIL	05272
26-64714		B	GRAB HANDLE DIAPHRAGM POST	05272
26-6500			GRAB HANDLE - DIAPHRAGM POST /BLIND END/	05272
26-65557		E	COUPLER PIER STOP	05272
26-72020		D	SIGNAL BRKT	05272
26-79555			SEAL HAND BRAKE SHAFT	05272
31-50025		A	CARLINE HAT SECTION	05272
31-50026		C	CARLINE	05272
31-50034			HOUSING ASSY - CENTER LOCKING PIN POWER CAR	05272
31-50048		A	CHAMBER DIAGRAM POWER CAR	05272
31-50049			LEVER ASSY HANDBRAKE POWER CAR	05272
31-50050			SWING HANGER	05272
31-50051		B	ANGLE REINFORCEMENT POWER CAP	05272
31-50106		A	LEVER HANDBRAKE POWER CAR	05272

31-50193		CABLE GUIDE ASSY HANDBRAKE	05272
31-50197		POWER CAR	
31-50167	A	LEVER HANDBRAKE POWER CAR	05272
		TIE PLATE ASSY SLIDING	05272
31-50189		CENTER SILL POWER CAR	
31-50190	A	GUIDE SIDE STEM	05272
31-50194	A	GUIDE SIDE STEM	05272
31-50195		SUPPORT END WELDMENT	05272
31-50210		SUPPORT END WELDMENT	05272
31-50211		FOOT PLATE ASSY	05272
	A	FOOT PLATE THRESHOLD - END	05272
31-50217		DOOR	
	A	BRACKET ASSY - SLIDING	05272
31-50218		END VALVE SUPPORT	
31-50219		DUMMY COUPLER ASSY	05272
	A	SUPPORT ASSY - UNCOUPLING	05272
31-50220		MECHANISM	
	A	SUPPORT ASSY - SIGNAL AND	05272
31-50221		BRAKE PIPES	
		CHAIN ASSY - STEAM CONDUIT	05272
31-50227		SAFETY HANGER	
		HANDLE ASSY - UNCOUPLING	05272
31-50231		MECHANISM	
	A	FRAME ASSY - LEFT SIDE	05272
31-50233		ACCESS PANEL PWR CAR	
		FRAME ASSY - SIDE ACCESS	05272
31-50234		PANEL PWR CAR	
		FRAME ASSY - SIDE ACCESS	05272
31-50235		PANEL	
		RIB ASSY - SIDE ACCESS	05272
31-50236		PANEL	
		DOOR SHEET - SIDE ACCESS	05272
31-50239		PANEL PWR CAR	
		DOOR SHEET - SIDE ACCESS	05272
31-50240		DOOR PWR CAR	
		DOOR SHEET - SIDE ACCESS	05272
31-50241		PANEL PWR CAR	
		DOOR SHEET - SIDE ACCESS	05272
31-50242		PANEL PWR CAR	
	A	DOOR SHEET - SIDE ACCESS	05272
31-50262		PANEL PWR CAR	
	B	FRAME ASSY - SIDE ACCESS	05272
31-50263		PANEL PWR CAR	
	B	FRAME ASSY - SIDE ACCESS	05272
31-50267		PANEL PWR CAR	
	A	DOOR SHEET - SIDE ACCESS	05272
31-50268		PANEL PWR CAR	
		DOOR SHEET - SIDE ACCESS	05272
31-50269		PANEL PWR CAR	
		DOOR SHEET - SIDE ACCESS	05272
31-50270		PANEL PWR CAR	
	A	DOOR SHEET SIDE ACCESS	05272
31-50285		PANEL POWER CAR	
31-50336	A	PLATE - END VALVE SUPPORT	05272
	A	ROOF SHEET HATCH	05272

31-50339	A	ROOF SHEET HATCH	05272
31-50340	A	ROOF SHEET HATCH	05272
31-50341	A	ROOF SHEET HATCH	05272
31-50343		HANDLE - ROOF HATCH PWR CAR	05272
31-50344		ROOF SHEET	05272
31-50345		ROOF SHEET	05272
31-50346		ROOF SHEET	05272
31-50347		ROOF SHEET	05272
31-50350		ROOF SHEET	05272
31-50351		ROOF SHEET	05272
31-50383		LIFTING EYE REINF ASSY	05272
31-50384		LIFTING EYE ASSY	05272
31-50397		CARLINE - ROOF HATCH	05272
		POWER CAR	
31-50401		END SHEET - UPPER	05272
31-50402		END SHEET - UPPER	05272
31-50405		HOOD SHEET LOWER - END	05272
		FRAME	
31-50406		CLOSURE - UPPER END FRAME	05272
31-50413		CARLINE ASSY - ROOF HATCH	05272
31-50419	A	POST - INTERMEDIATE END	05272
		FRAME	
31-50420		POST - INTERMEDIATE	05272
		END FRAME	
31-50431		ANTI-TELESCOPING CHANNEL	05272
		END FRAME	
31-50436		CRIPPLE POST ASSY	05272
31-50459	A	POST - END FRAMING	05272
		PWR CAR	
31-50464	A	POST - END FRAMING POWER	05272
		CAR	
31-50475		RACEWAY - END DOOR FRAME	05272
31-50489		THRESHOLD - END DOOR UPPER	05272
31-50493	A	POST - CRIPPLE END FRAME	05272
31-50514		ANGLE - END SHEET END	05272
		FRAMING POWER CAR	
31-50517		RAIL - LADDER ASSY POWER	05272
		CAR	
31-50555		SUPPORT ASSY - 26-C CONTROL	05272
		VALVE	
31-50556		SUPPORT - 26-C CONTROL	05272
		VALVE	
31-50567		SUPPORT ASSY - J-1 RELAY	05272
		VALVE	
31-50575		BASE ASSY - STEAPLINE	05272
		ANCHOR	
31-50578		SUPPORT ASSY - QUICK	05272
		SERVICE VALVE	
31-50629	A	FRAME ASSY - LEFT SIDE	05272
31-50632		OUTER SKIN - SIDE ACCESS	05272
		PANEL	
31-50634		SKIN - SIDE ACCESS PANEL	05272
31-50636		SKIN - SIDE ACCESS PANEL	05272
31-50657		END SILL	05272
31-50658		END SILL	05272

31-50677

31-50678

31-50679

31-50680

31-50681

31-50682

31-50683

31-50684

31-50685

31-50686

31-50687

31-50713

31-50715

31-50716

31-50718

31-50720

31-50721

31-50722

31-50728

31-50729

31-50807

31-50808

31-50827

31-50829

31-50856

31-50857

31-50858

31-50859

31-50860

31-50861

31-50862

31-50863

END SILL 05272
BACKUP PLATE ASSY - UNDER 05272

FRAME POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSBEARER - UNDERFRAME 05272

POWER CAR

CROSSTIE - CROSSTIE ASSY 05272

POWER CAR

CROSSTIE - CROSSTIE ASSY 05272

POWER CAR

CROSSTIE ASSY UNDERFRAME 05272

POWER CAR

CROSSTIE ASSY UNDERFRAME 05272

POWER CAR

BOLSTER PLATE - BOTTOM 05272

POWER CAR

PLATE - VERTICAL BOLSTER 05272

PLATE - VERTICAL BOLSTER 05272

BOLSTER PLATE - VERTICAL 05272

UNDERFRAME POWER CAR

PLATE - VERTICAL BOLSTER 05272

PLATE - VERTICAL BOLSTER 05272

FLOOR STRINGER UNDERFRAME 05272

POWER CAR

FLOOR STRINGER UNDERFRAME 05272

POWER CAR

FLOOR STRINGER UNDERFRAME 05272

POWER CAR

FRAME - EMERGENCY DOOR 05272

FRAME - EMERGENCY DOOR 05272

RIB - EMERGENCY DOOR 05272

DOOR SHEET - EMERGENCY DOOR 05272

RIB - EMERGENCY DOOR 05272

RIB - EMERGENCY DOOR 05272

FRAME - EMERGENCY DOOR 05272

RIB - EMERGENCY DOOR 05272

B

B

A

A

B

A

A

31-50866	A	RETAINER - GASKET EMERGENCY DOOR	05272
31-50867	B	RIB ASSY - EMERGENCY DOOR	05272
31-50870	A	HANDLE ASSY - EMERGENCY DOOR LOCK	05272
31-50872	A	RETAINER - GASKET EMERGENCY DOOR	05272
31-50873	B	RETAINER - GASKET EMERGENCY DOOR	05272
31-50878	A	RIB - EMERGENCY DOOR	05272
31-50879	A	RIB - EMERGENCY DOOR	05272
31-50887	A	SIDE - POCKET ASSY EMERGENCY DOOR	05272
31-50888	A	BODY - POCKET ASSY EMERGENCY DOOR	05272
31-50890	A	RIB - EMERGENCY DOOR	05272
31-50891		FRAME AT LIFTING LUG LH SIDE ACCESS PANEL	05272
31-50894		POCKET - LIFTING BAR SIDE ACCESS PANEL	05272
31-50895		FRAME - SIDE ACCESS PANEL	05272
31-50896		FRAME - REINFORCEMENT LOWER SIDE ACCESS PANEL	05272
31-50902		FRAME - SIDE ACCESS PANEL	05272
C 31-51019		SUPPORT - SKIRT PANEL	05272
C 31-51020		SUPPORT - SKIRT PANEL	05272
C 31-51021		SUPPORT - SKIRT PANEL	05272
C 31-51022		ANGLE ASSY - SKIRT PANEL	05272
C 31-51023		CENTER POST ASSY - SKIRT PANEL	05272
C 1-51024		CENTER POST ASSY - SKIRT PANEL	05272
C 31-51056		SIDE SHEET	05272
31-51058	B	SIDE SHEET AT FILTER	05272
C 31-51064	R	SIDE SHEET AT RADIATOR	05272
C 31-51071	A	SIDE SHEET	05272
C 31-51072	A	SIDE SHEET	05272
31-51046	A	SIDE SHEET	05272
31-51101	A	SIDE SHEET	05272
*31-51103	B	SIDE SHEET AT RADIATOR	05272
31-51107	B	SIDE SHEET AT FILTER	05272
31-51109	A	SIDE SHEET	05272
31-51120		PLATE - SHEAR /5FT - OIN DOOR/	05272
31-51121		PLATE - SHEAR 8FT OIN DOOR POWER CAP	05272
31-51122		PLATE - SHEAR 8FT OIN DOOR POWER CAP	05272
31-51141	B	BASE PLATE RING SPRING	05272
31-51158		WEAR PAD ASSY - BUFFER SIDE STEM	05272
31-51163		SIDE STEM ASSY - BUFFER	05272
31-51164		SIDE STEM BUFFER	05272
31-51165		WEAR PAD ASSY - BUFFER SIDE STEM	05272

31-51218	COVER - END DOOR	05272
31-51221	SHIELD ASSY - WEATHER END	05272
	DOOR LOCK	
31-51230	A PAN - END DOOR LOCK	05272
31-51236	BEARING ASSY - END DOOR	05272
	LOCK	
31-51238	HANDLE ASSY - END DOOR LOCK	05272
C 31-51239	HANDLE ASSY - OUTSIDE END	05272
	DOOR LOCK	
C 31-51240	ARM ASSY - END DOOR LOCK	05272
C 31-51242	TUBE ASSY - LOWER END DOOR	05272
	LOCK	
C 31-51243	LEVER ARRG. END DOOR LOCK	05272
C 31-51271	HAT - PAN END DOOR LOCK	05272
C 31-51274	LOCK - MODIFIED END DOOR	05272
31-51282	A FRAME ASSY - /RIGHT/ SIDE	05272
	ACCESS PANEL POWER CAR	
C 31-51294	RIB SIDE ACCESS PANEL POWER	05272
	CAR	
C 31-51306	BUSHING SWING HANGER	05272
C 31-51307	SWING HANGER PIN	05272
C 31-51308	C BOTTOM BEARING - SWING	05272
	HANGER	
31-51309	C TOP BEARING - SWING HANGER	
31-51310	SWING HANGER SHIMS	05272
31-51311	R PLATE SHIMS - BOLSTER	05272
31-51312	A PLATE SHIMS - EQUALIZER	05272
31-51313	TIE BARS - PEDESTAL	05272
31-51314	A FABREEKA PAD - BOLSTER	05272
31-51315	FABREEKA PAD - EQUALIZER	05272
	SPRING	
31-51316	BEEHIVE BUMPER	05272
31-51317	CLAMP - BEEHIVE BUMPER	05272
31-51318	PLATE SHIMS - BEEHIVE	05272
	BUMPER	
31-51319	WEAR PLATES - BEEHIVE	05272
	BUMPER	
31-51328	RETAINER ASSY - DIAPHRAGM	05272
	AT END FRAME	
31-51337	TOP - FACE PLATE	05272
31-51341	GUSSET - FACE PLATE	05272
31-51342	GUSSET - FACE PLATE	05272
31-51346	DIAPHRAGM - SUPPORT	05272
31-51347	DIAPHRAGM SUPPORT	05272
31-51453	THRESHOLD ASSY - REMOVABLE	05272
	MAINTENANCE DOOR	
31-51454	THRESHOLD ASSY - REMOVABLE	05272
	MAINTENANCE DOOR	
31-51455	THRESHOLD ASSY - REMOVABLE	05272
	MAINTENANCE DOOR	
31-51498	FRAME - ACCESS DOOR POWER	05272
	CAP	
31-51660	A CENTER POST - SKIRT PANEL	05272
31-51671	CROSSTIE - CROSSTIE ASSY	05272
	POWER CAR	

31-51679		CENTER POST - SKIRT PANEL	05272
31-51683		SUPPORT - SKIRT PANEL	05272
31-51684		STEP ASSY - POWER CAR	05272
31-51688	B	R18 - SIDE ACCESS PANEL	05272
		PWR CAR	
C 31-51696		CROSSTIE ASSY - UNDERFRAME	05272
		POWER CAR	
C 31-51697		CROSSTIE ASSY - UNDERFRAME	05272
		POWER CAR	
C 31-51709		BRAKE ROD ASSY	05272
C 31-51716	A	LEVER ANCHOR ASSY	05272
C 31-51721	A	LEVER - BRAKE	05272
C 31-51734		SHAFT - SPLINE	05272
C 31-51768		SIDE - SHEAVE SUPPORT	05272
31-51772		HOUSING ASSY - CHAIN SHEAVE	05272
31-51778		BRACE SILL STEP	05272
31-51779		BRACE - SILL STEP PWR CAR	05272
31-51784		FRAME - ACCESS DOOR	05272
31-51787		FRAME - ACCESS DOOR	05272
31-51907		LEVER ASSY - HAND BRAKE	05272
		PWR CAR	
31-51958		PANEL - RADIATOR POOF	05272
31-51971		STOP - COUPLER CARRIER	05272
31-51992		HOOD - FALSE FLOOR	05272
		BUFFER STEM	
31-51994		HOOD - FALSE FLOOR BUFFER	05272
		STEM	
31-51995		HOOD - FALSE FLOOR BUFFER	05272
		STEM	
31-52113		PAN - COVER	05272
1-52132	A	TANK HEAD	05272
31-52138	A	LIFTING LUG ASSY	05272
31-52142		WEB - RAFFLE PLATE	05272
324-08578		DATA SIMULATOR CAR	05272
36-1612		BLOCK - SIDE BEARING	05272
36-72887		MARKER LAMP - BRACKET	05272
36-77614	D	STD RINS FOR STD COTTER	05272
41-47762		WHEELS	05272
41-47763		EQUALIZER 6 WHEEL TRUCK	05272
		MACHINING	
41-50015	A	POWER CAR BUFFER SIDE STEM	05272
		ARRANGEMENT	
41-50030	A	CARRIER ASSY - SLIDING	05272
		CENTER SILL POWER CAR	
41-50033	A	SUPPORT ASSY - RING SPRING	05272
		UNIT POWER CAR	
41-50047	B	SHIPPING CLOSURES RADIATOR	05272
		AND FILTER OPENINGS POWER	
		CAR	
41-50151	A	CHANNEL - UPPER SLIDING	05272
		CENTER SILL	
41-50163	A	SIDEPLATE - SUB-ASSY-	05272
		SLIDING SILL POWER CAR	
41-50165	A	SIDEPLATE SLIDING CENTER	05272
		SILL	

2

41-50166	A	SIDEPLATE SLIDING CENTER SILL	05272
41-50170	B	SLIDEPLATE SLIDING CENTER SILL	05272
41-50179	B	SIDEPLATE SLIDING CENTER SILL	05272
41-50232		FRAME ASSY - RIGHT SIDE SIDE ACCESS PANEL	05272
41-50337		ROOF SHEET	05272
41-50348		ROOF SHEET	05272
41-50349		ROOF SHEET	05272
41-50352		ROOF SHEET	05272
41-50353		ROOF SHEET	05272
41-50354		ROOF SHEET	05272
41-50355		ROOF SHEET	05272
41-50356		ROOF SHEET	05272
41-50359		ROOF SHEET	05272
41-50380	A	ROOF SHEET CENTER	05272
41-50381	A	ROOF SHEET - LEFT-POWER CAR	05272
41-50382		ROOF SHEET - RIGHT-POWER CAR	05272
41-50385	A	STRAP - REINF-INNER-POWER CAR	05272
41-50386	B	STRAP - REINF-OUTER-POWER CAR	05272
41-50421	B	CORNER POST - END FRAME	05272
41-50422	B	CORNER POST - END FRAME	05272
41-50437		FRAME ASSY - END DOOR STA. 1120	05272
E 41-50438		FRAME ASSY - END DOOR STA. 100	05272
41-50443		THRESHOLD ASSY - END DOOR UPPER	05272
41-50444	A	THRESHOLD ASSY - END DOOR LOWER	05272
41-50446		HEADER ASSY - END DOOR	05272
41-50448		LADDER ASSY - END EQUIP. APP POWER CAR	05272
41-50449		CENTER - HANDBRAKE PAN	05272
41-50465		FRAME ASSY - OUTSIDE END DOOR	05272
41-50467		FRAME - OUTSIDE END DOOR	05272
41-50468		FRAME ASSY - INSIDE END DOOR	05272
41-50471		RACEWAY ASSY - END DOOR	05272
41-50476		FRAME ASSY - INSIDE END DOOR	05272
41-50481	A	CAPPING - CORNER POST	05272
41-50482	A	CAPPING - CORNER POST	05272
41-50496	C	SHEET - END FRAME	05272
41-50608	A	FLOOR PLATE - UNDERFRAME POWER CAR	05272
41-50609	A	FLOOR PLATE - UNDERFRAME POWER CAR	05272
41-50610	A	FLOOR PLATE - UNDERFRAME POWER CAR	05272

41-50611
 41-50630
 41-50631
 41-50781
 41-50783
 41-50787
 41-50788
 41-50789
 41-50792
 41-50793
 41-50794
 41-50798
 41-50800
 41-50871
 41-51014
 41-51015
 41-51144
 41-51145
 41-51147
 41-51222
 41-51241
 41-51246
 41-51725
 41-51726
 41-51730
 41-51735
 41-51740
 41-51744
 41-51748
 41-51753
 41-51759
 41-51763
 41-51767
 41-51776

A FLOOR PLATE - UNDERFRAME 05272
 POWER CAR
 FRAME ASSY - TOP SIDE 05272
 ACCESS PANEL
 FRAME ASSY BOTTOM - SIDE 05272
 ACCESS PANEL
 FLOOR STRINGER - UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER - UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 FLOOR STRINGER UNDERFRAME 05272
 POWER CAR
 A POCKET ASSY - DOOR LOCK 05272
 EMERGENCY DOOR
 SKIRT PANEL ASSY 05272
 SKIRT PANEL ASSY 05272
 SUPPORT ASSY - DRAFT GEAR 05272
 POWER CAR
 C COUPLER CARRIER ASSY 05272
 COUPLER CARRIER 05272
 SUPPORT ASSY - END DOOR 05272
 LOCK
 TURF ASSY - UPPER END DOOR 05272
 LOCK
 A PAN ASSY - END DOOR LOCK 05272
 C PIVOT ASSY 05272
 ARM ASSY UPPER 05272
 PIVOT BEARING ASSY - TOP 05272
 PIVOT BEARING BOTTOM 05272
 ARM ASSY LOWER 05272
 PIVOT BEARING SUPPORT - 05272
 UPPER
 PIVOT BEARING SUPPORT - 05272
 LOWER
 A SHEAVE - MOUNTING ASSY 05272
 A SHEAVE HOUSING ASSY 05272
 A SHEAVE CLEVIS ASSY /WIRE 05272
 ROPE/
 SUPPORT ASSY CHAIN SHEAVE 05272
 POWER CAR
 SHEAVE MTG SUPPORT ASSY 05272

41-51777		A	SUPPORT ASSY - CHAIN SHEAVE	05272
41-51781		A	ROOF SHEET CENTER	05272
41-51854			LADDER ASSY - EMERGENCY	05272
41-51972			EXIT POWER CAR	
41-51983			YOKE ASSY SUPPORT FOR PIPES	05272
			LADDER ARRANGEMENT -	05272
			EMERGENCY EXIT POWER CAR	
41-52101		R	TANK SUPPORT ASSY	05272
41-52123		C	HEAD ASSY AT MANWAY	05272
41-52131		B	HEAD ASSY - AT CLOSED END	05272
41-52141		C	BAFFLE PLATE ASSY	05272
424-09605		A	CAR END CONFIGURATION FOR	05272
			RAMP DESIGN	
51-E-80P			NOT LEGIBLE	05272
E 51-47761		A	AXLES	05272
51-50152			CHANNEL - LOWER SLIDING	05272
			CENTER SILL	
E 51-50213			FOOTPLATE ARRANGEMENT POWER	05272
			CAR	
51-50435			POST ASSY - END FRAMING	05272
			POWER CAR	
E 51-50441		A	SHEET ASSY - END FRAME	05272
E 51-50442			SHEET ASSY - END FRAME	05272
51-50445			CAPPING ASSY - CORNER POST	05272
E 51-50447			PAN ASSY - HANDBRAKE	05272
E 51-50504		B	SHEET - END FRAME	05272
51-51013		A	SKIRT PANEL ASSY	05272
E 51-51016		H	SKIRT PANEL ASSY	05272
E 51-52119		R	TANK ASSY	05272
J 61-50000		D	CONFIGURATION CONTROL POWER	05272
			CAR	
61-50001		A	CROSS SECTION POWER CAR	05272
61-50002		A	POST SECTION POWER CAR	05272
J 61-50003		C	END EQUIPMENT ARRANGEMENT	05272
J 61-50004		A	COUPLER AND DRAFT GEAR	05272
			ARRGT POWER CAR	
J 61-50005		D	HAND BRAKE ARRG	05272
61-50006		A	SLIDING CENTER SILL ASSY	05272
			POWER CAR	
61-50007	1	E	UNDERFRAME ARRANGEMENT	05272
			POWER CAR	
61-50007	2	D	UNDERFRAME ARRANGEMENT -	05272
			POWER CAR	
61-50007	3	D	UNDERFRAME ARRANGEMENT -	05272
			SEC. AT BOLSTER	
61-50007	4	C	UNDERFRAME ARRANGEMENT	05272
61-50007	5	C	UNDERFRAME ARRANGEMENT -	05272
			SEC. AT CROSS-BEARER	
61-50008	1	D	SIDE FRAME ASSY - POWER CAR	05272
61-50008	2	E	SIDE FRAME POWER CAR	05272
J 61-50009	1	R	END FRAMING ARRG POWER CAR	05272
J 61-50009	2	C	END FRAMING ARRG POWER CAR	05272
J 61-50009	3	C	END FRAMING ARRG POWER CAR	05272
61-50010	1	E	ROOF FRAME ARRANGEMENT	05272
61-50010	2	D	ROOF SECTION POWER CAR	05272

J 61-50011		D	REMOVABLE ROOF HATCH POWER CAR	05272
J 61-50012	1	B	SKIRT ARRGT POWER CAR	05272
J 61-50012	2	A	SKIRT ARRGT POWER CAR	05272
J 61-50013		C	UNDERFRAME EQUIP. ARRGT	05272
J 61-50014		E	SIX WHEEL TRUCK ASSY	05272
J 61-50016			DIAPHRAGM FACE PLATE ARRGT	05272
J 61-50017		D	SIDE ACCESS PANEL EMERGENCY DOOR POWER CAR	05272
61-50018		C	LOCK END DOOR TRIM ARRGT POWER CAR	05272
61-50019		E	SIDE ACCESS PANEL WITH TWO FILTERS POWER CAR	05272
61-50020		C	SIDE ACCESS PANEL WITH ONE FILTER POWER CAR	05272
61-50021		C	EMERGENCY DOOR ARRANGEMENT POWER CAR	05272
J 61-50022		B	FRAME ASSY - END DOOR POWER CAR	05272
J 61-50023		D	FLOOR ARRGT POWER CAR	05272
J 61-50024	1	C	FALSE FLOOR ARRANGEMENT POWER CAR	05272
J 61-50024	2	C	FALSE FLOOR ARRANGEMENT POWER CAR	05272
J 61-50027		C	RUFFER ASSY	05272
J 61-50029		H	CENTER SILL ASSY - POWER CAR	05272
61-50149		C	ANGLE SIDE SILL	05272
J 61-50182		A	CENTER SILL ZFF	05272
J 61-50183		A	CENTER SILL ZFF	05272
61-50368		C	ANGLE SIDE PLATE TOP	05272
61-50369		D	ANGLE SIDE PLATE TOP	05272
61-50673		D	CHANNEL - SIDE SILL REINFORCEMENT	05272
J 61-50674		D	CHANNEL - SIDE SILL REINFORCEMENT	05272
61-51049		B	ANGLE SIDE SILL	05272
61-51050		D	ANGLE - SIDE SILL	05272
61-51092		C	ANGLE SIDE PLATE BOTTOM	05272
J 61-51093		C	ANGLE SIDE PLATE BOTTOM	05272
61-51326			FACE PLATE ASSY	05272
J 61-51987			ARRANGEMENT - ROOF ANTI-SLIP SURFACING POWER CAR	05272
61-52100		E	POWER CAR FUEL TANK ARRGT.	05272
66-6185		B	RUFFER CASTING	05272
98901		H	PIN - COMPLETE	05272